

TRIBECA BOOKCASE




Included




36 Pins



6 Vertical zBoards
groove on 1 side




6 Backer Boards
thin and has no adhesive



2 Horizontal zBoards
groove on 1 side




3 Middle
Vertical zBoards
grooves on 2 sides



2 Middle
Horizontal zBoards
grooves on 2 sides

WARNING: CHOKING HAZARD
Small parts NOT for children under 3 years

Important

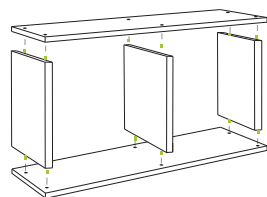

Tip Start assembly from bottom to top.

DO NOT place unit on its side or back as it will compromise its structural integrity.



- Assemble your unit on a flat even surface, carpet not recommended
- Furniture is for indoor use only
- When moving your Way Basics furniture, lift from the bottom
- Make sure zBoard surfaces are clean and dry

1

Carefully remove the 3M protective layer from adhesive.

2

Place alignment pins in vertical zBoards.

3

Align vertical zBoards, **middle vertical zBoard** and backer board to horizontal zBoard (grooves on 1 side).

4

Align middle zBoard (grooves on 2 sides).

5

Align vertical zBoards, **middle vertical zBoard** and backer board to horizontal zBoard.

6

Align middle zBoard (grooves on 2 sides).

7

Align vertical zBoards, **middle vertical zBoard** and backer board to horizontal zBoard.

8

Align horizontal zBoard. Visit links below for more details. Enjoy building possibilities!

