



TRIPLER SHELF

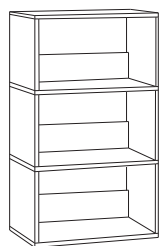


Included




36 Pins



6 Vertical zBoards
adhesive strips on 2 edges




3 Backboards
adhesive strips on 3 edges



4 Horizontal zBoards

WARNING: CHOKING HAZARD
Small parts NOT for children under 3 years

Important

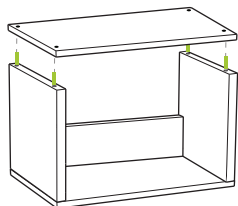

↑ THIS SIDE UP

Tip Start assembly from bottom to top.

DO NOT place unit on its side or back as it will compromise its structural integrity.




- Assemble your unit on a flat even surface, carpet not recommended
- Furniture is for indoor use only


- When moving your Way Basics furniture, lift from the bottom
- Make sure zBoard surfaces are clean and dry




1 Peel adhesive strips off backboard.

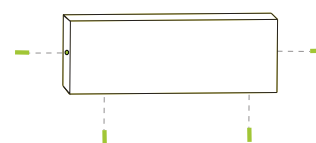


2 Insert 4 pins in backboard.

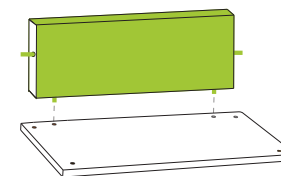


3 Align backboard on horizontal zBoard.
(holes only on one side of board)

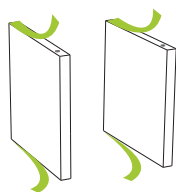


4 Carefully remove the 3M protective layer from adhesive.

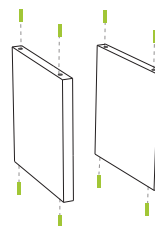


5 Place alignment pins in vertical zBoards.

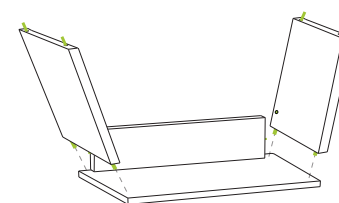


6 Align vertical zBoards (with inner holes facing backboard) to horizontal zBoard as shown.

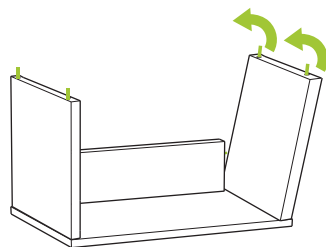

7 Adhere vertical zBoards on to backboard.

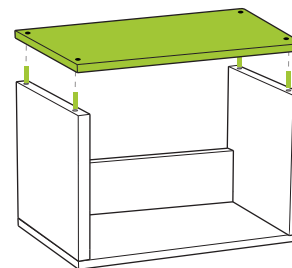

8 Next, align middle horizontal zBoard (there will be holes on both sides of board) on top of vertical zBoards.

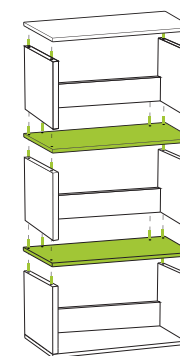

9 Repeat steps 1-8.
Visit links below for more details.
Enjoy building possibilities!