


# 2 SHELF BOOKCASE

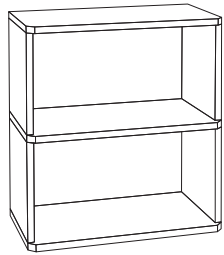


## Included




16 Pins



1 Top zBoard, 1 Bottom zBoard  
groove on 1 side



1 Middle zBoard  
groove on 2 sides




4 Vertical zBoards  
adhesive strip on top and bottom



2 Backboards

**WARNING: CHOKING HAZARD**  
Small parts NOT for children under 3 years

## Important

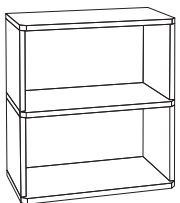

THIS SIDE UP

**CAUTION** placing unit on its side or back will compromise structural integrity. Use right side up.




- Assemble your unit on a flat even surface
- Make sure zBoard surfaces are clean and dry

- When moving your Way Basics unit, lift from the bottom
- Indoor use only. Not in bathroom.


1

Carefully remove the protective layer leaving the 3M adhesive on zBoard (adhesive shown in yellow).

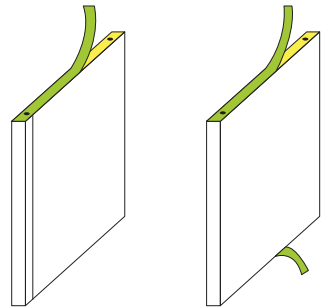


2

Insert alignment pins in vertical zBoards.

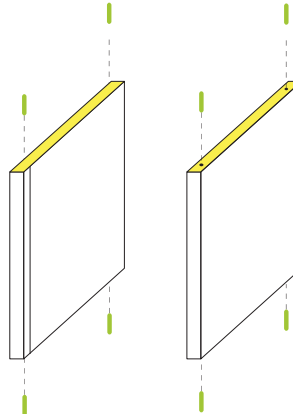


3

Fit backboard into horizontal zBoard groove. With grooves facing backboard, align side zBoards onto bottom zBoard. Press down firmly.

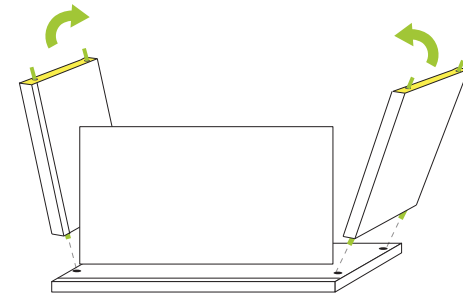


4

Align middle board on top as shown. Press down firmly.

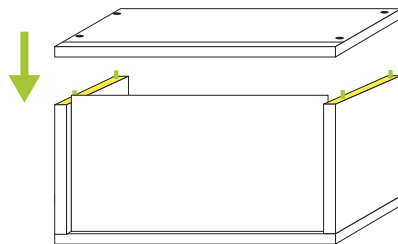


5

Repeat steps 1 - 3 to add second tier.

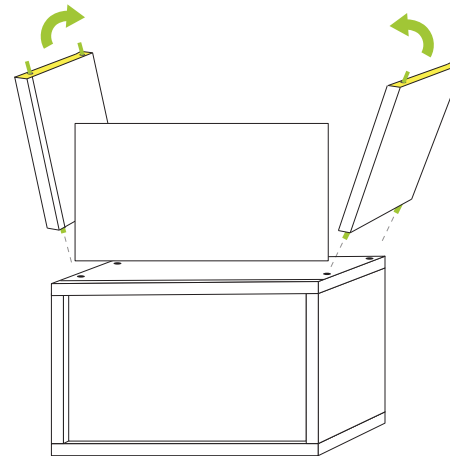

6

Align top zBoard onto unit and press down firmly.

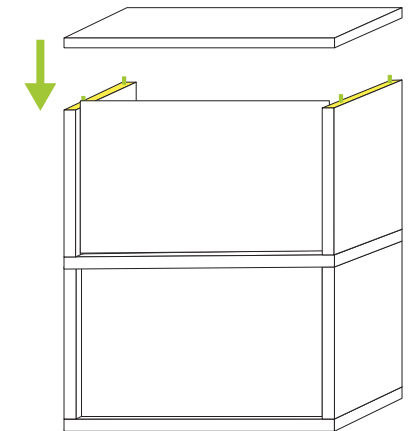

Enjoy building possibilities!

