



2-SHELF STORAGE

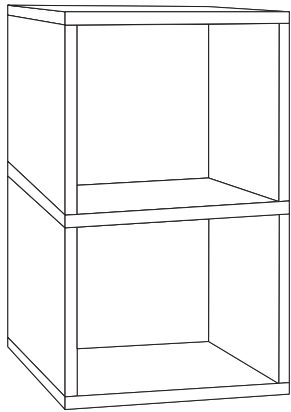


Included

32 Pins

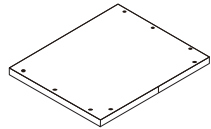


2 Horizontal zBoards - top and bottom holes on one side only

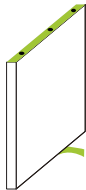

4 Vertical zBoards adhesive strips on 2 edges of each zBoard



2 Backer Boards adhesives strips on 2 edges

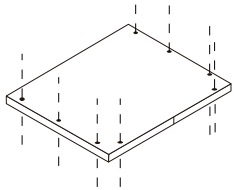


1 Middle zBoard holes on top and bottom


 **WARNING: CHOKING HAZARD**
Small parts NOT for children under 3 years




- Assemble your unit on a flat even surface
- Do not place unit on its side or back as it will compromise it's structural integrity
- Make sure zBoard surfaces are clean and dry
- Indoor use only. Not in bathroom

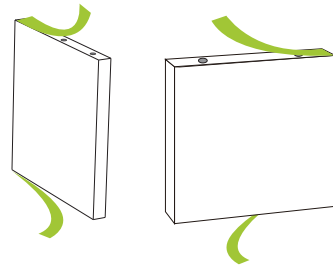


1 Carefully remove the 3M protective layer from adhesive.

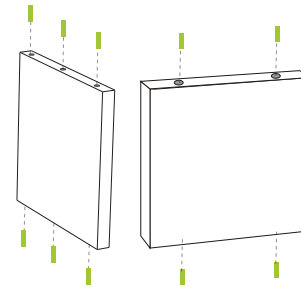


2 Place alignment pins in vertical zBoards and backboard.

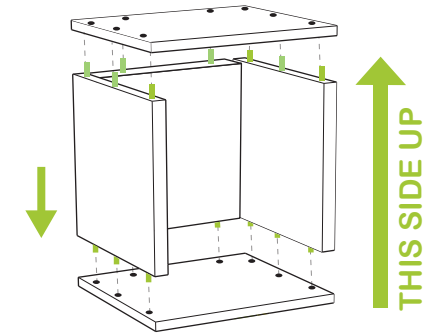


3 Start with the bottom horizontal zBoard. Align the vertical zBoards and backboard to holes in the horizontal zBoard. Align middle zBoard.

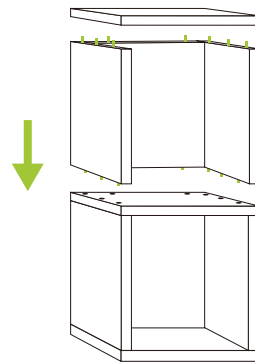

4 Align the vertical zBoards and backboard to the holes in the middle zBoard. Align horizontal zBoard and press firmly to secure unit together.

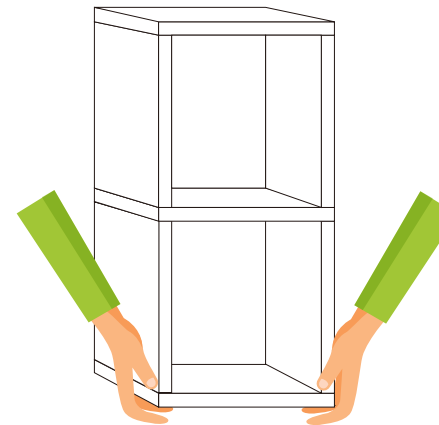

5 When moving the unit, first empty contents. Lift the cube from the bottom zBoard to keep adhesives intact.

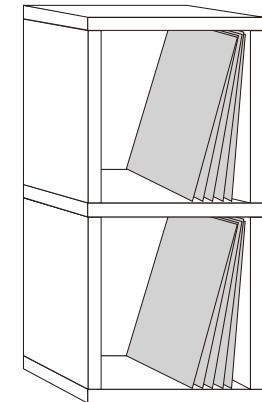

6 Enjoy building possibilities!

