CUBE





Included





8 Pins

2 Vertical zBoards adhesive strips on 2 edges






1 Backer Board thin and has no adhesive

2 Horizontal zBoards with grooves



Important

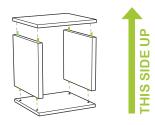

Tip Start assembly from bottom to top.

DO NOT place unit on its side or back as it will compromise its structural integrity.




- · Assemble your unit on a flat even surface, carpet not recommended
- Furniture is for indoor use only




Make sure zBoard surfaces are clean and dry




Carefully remove the 3M protective layer from adhesive.

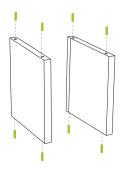

Place alignment pins in vertical zBoards.

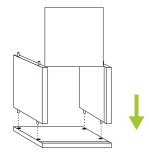

Align vertical zBoards and backer board to horizontal zBoard.

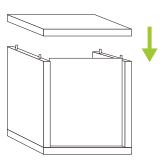

Align horizontal zBoard and press firmly to secure unit together. Visit links below for more details. Enjoy building possibilities!





