


WALL INSTALLATION GUIDELINES

Murano Acoustics wood veneer panels are available in a wide range of patterns. These can be utilized as a stylish sound absorbing wall treatment (acoustical board is required—see Fig. 2) or simply as a decorative wall system (see Fig. 1). In both cases, the use of Z-Clips allows for an easily demountable wall panel system.

TO MAXIMIZE ACOUSTIC PERFORMANCE: Install to existing walls by FIRST fixing wood furring strips (of the required thickness), spaced at 24" on center. The Z-Clips are then fixed in place to create an air space between the panels and the wall as shown in Fig. 2. Acoustical board is then fitted between the wood furring strips as an acoustic absorber, prior to installing the Murano Acoustics panels.

Fig.1 DECORATIVE WALL SYSTEM

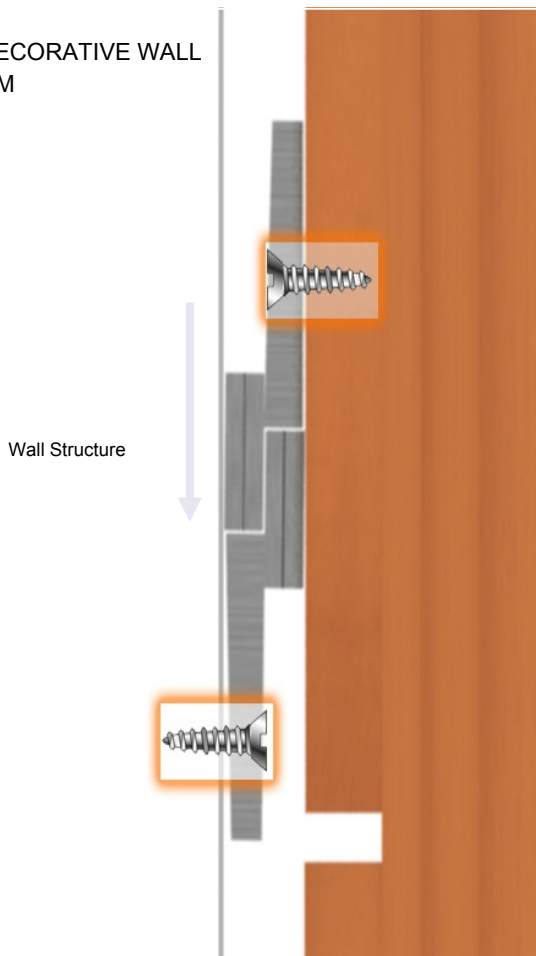

Z-Clip System

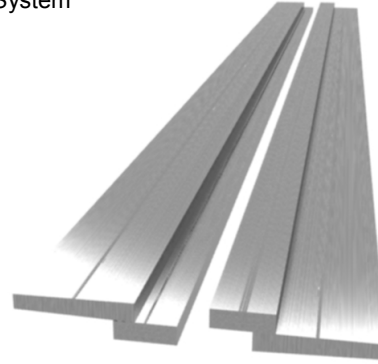


Fig. 2 ACOUSTIC WALL SYSTEM (WITH ACOUSTICAL BOARD)

