


Freeride Sail 2011 Spare Parts

HELLCAT

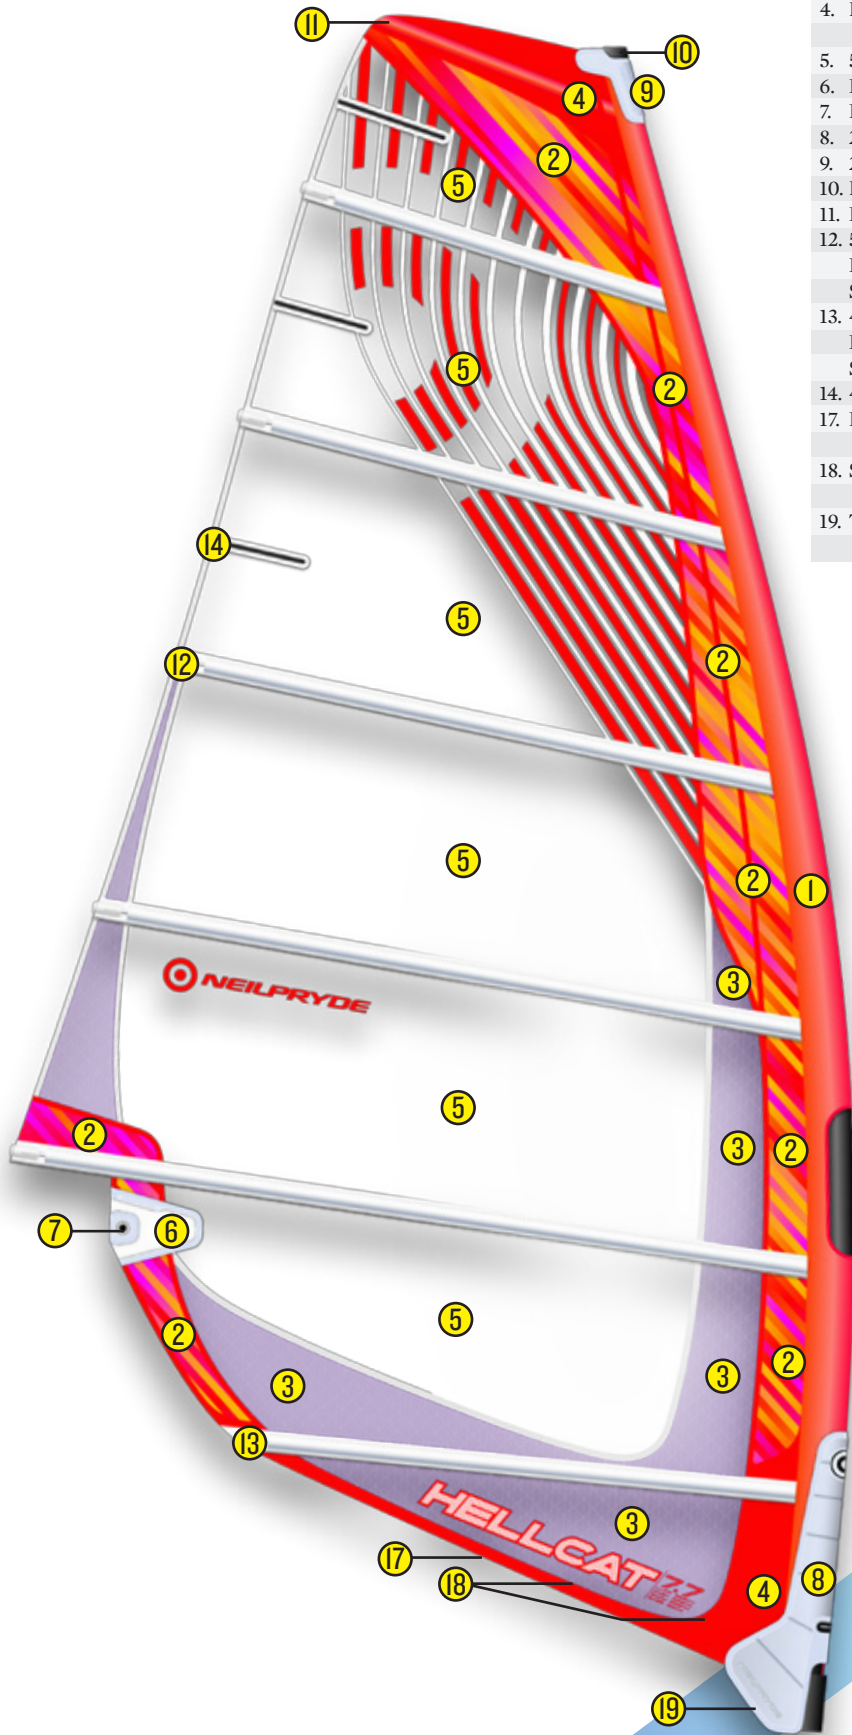

Material Description

Part Code

1. Luff Glide	C1	BPFGL11/C1
	C4	BPFGL11/C4
2. X-Ply Full Print 5 mil	C1	BPVEFP125/2011/C1
	C4	BPVEFP125/2011/C4
3. X-ply Silver 5 mil		BPVEMX125
4. Mark-cloth (Adhesive Fabric)	C1	BPFMC11/C1
	C4	BPFMC11/C4
5. 5 Mil Monofilm		BPFKF125
6. EVA/Kevlar Clew Patch Free-Ride		BPFCF11FW
7. Eyelet		BPCRSFG20
8. 2011 Tack Fairing		BPFAIR10K
9. 2011 Head Fairing		BPFAIR10P
10. Mast Plug Conical		BP830
11. Flex Head Screw set.		BP601
12. 50mm wide pre-sewn clear batcam		BPBCAMCA
Batten Tensioner Tube		BP871/2
Shave Protector		BP5BATCHA
13. 45mm wide pre-sewn clear batcam		BPBCAMCB
Batten Tensioner Rod		BP801/2
Shave Protector		BP5BATCHA
14. 40cm carbon mini leech batten		BPCLBAT40
17. Foot Piping	C1	BPFPIPING/2011/C1
	C4	BPFPIPING/2011/C4
18. Seam protector piping	C1	BPPIPING/2011/C1
	C4	BPPIPING/2011/C4
19. Tripple Roler Tack pulley		BPTF47