


COMMERCIAL WOOD FRAMING LAYOUT

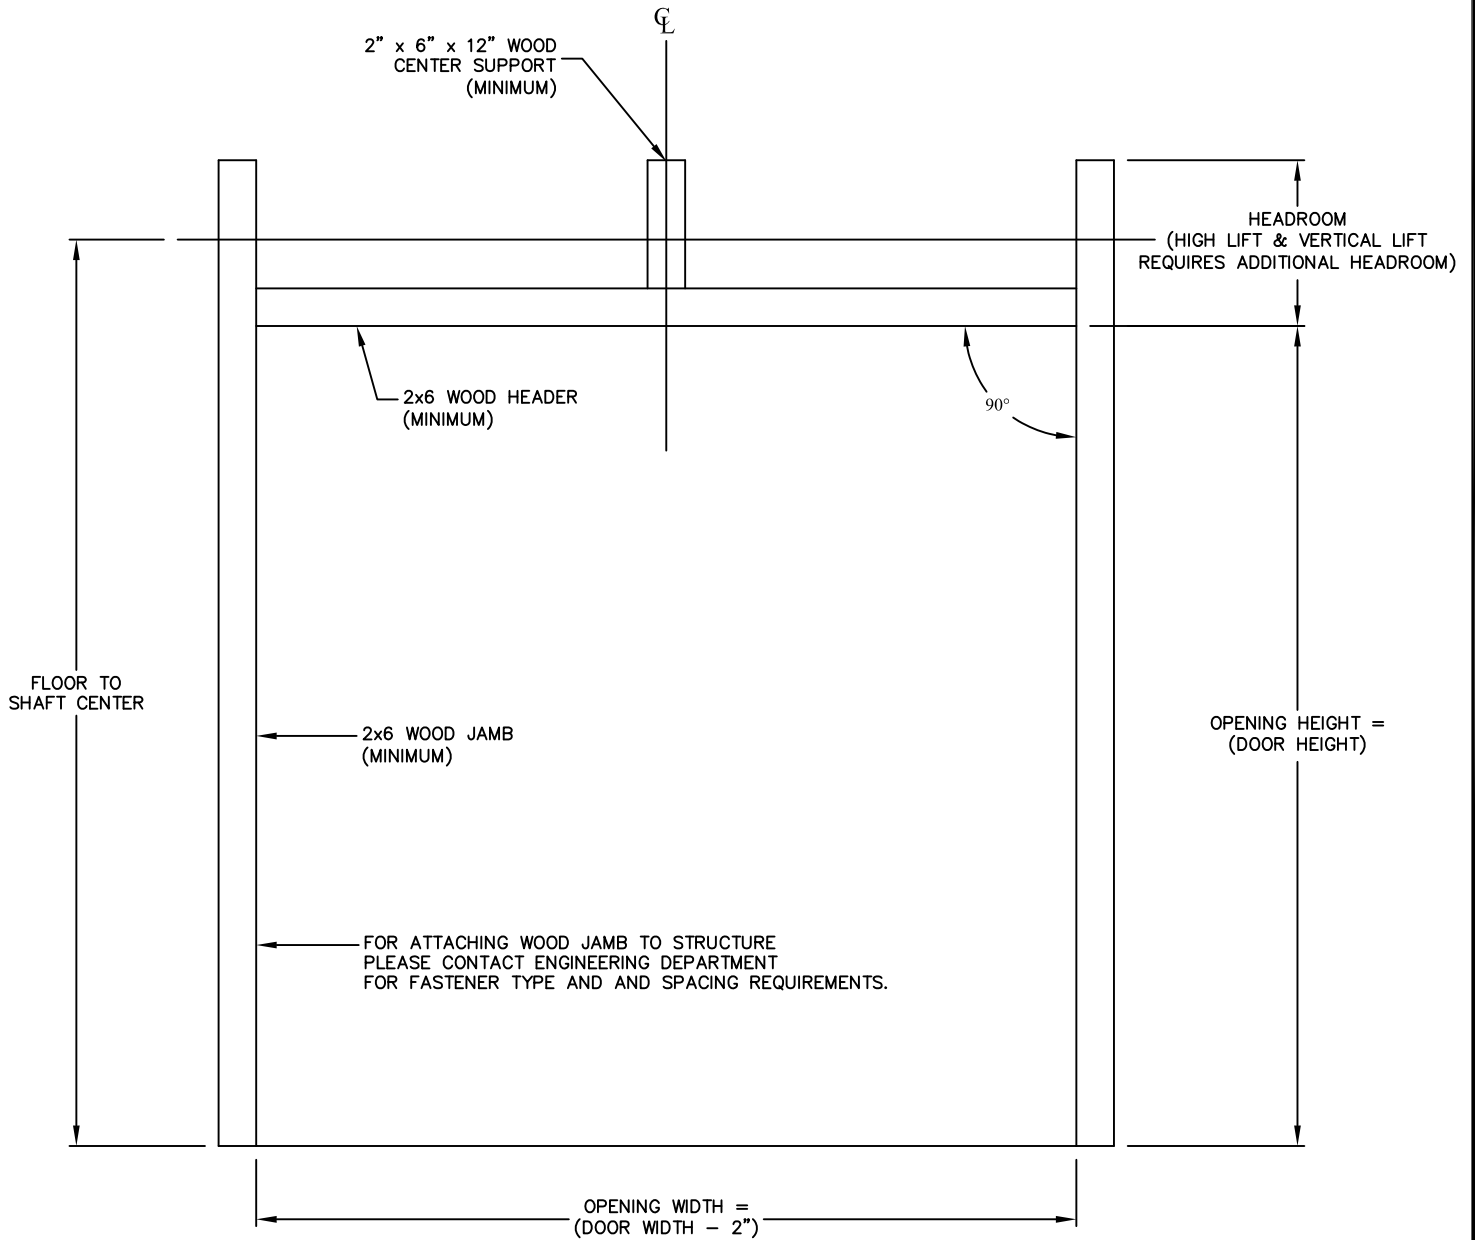

1) FOR DOORS REQUIRING MORE THAN TWO SPRINGS, ADDITIONAL SPRING PADS MAY BE NEEDED.