

XF107-Sprayer Rack Mounting Instructions

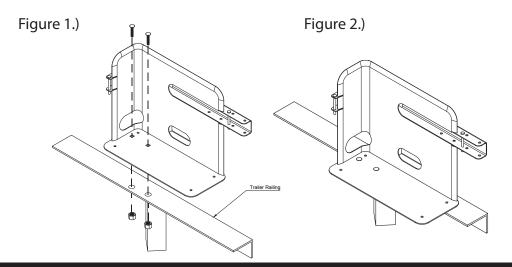

OPEN TRAILERS:

- 1.) Choose a mounting location on the rail of your trailer, that is directly over an upright support (See figures 1 and 2)
- 2.) Using the base plate of the rack as a template, mark the location of the holes and drill with a 27/64" bit.
- 3.) Bolt the rack in place.

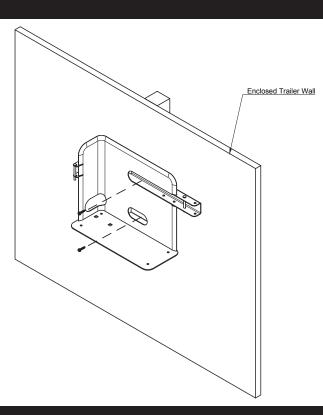


ENCLOSED TRAILERS:

- 1.) Choose a mounting location on the wall of your trailer, it should be directly over a rib support.
- 2.) Install the two middle screws through the rack and into the steel rib support.

NOTE: If you wish to mount the rack in a location that has no steel support, use four screws in the outside holes.

Included Hardware Screws to mount rack to enclosed trailers Bolts to mount rack to open trailers

Strap Tightening procedure

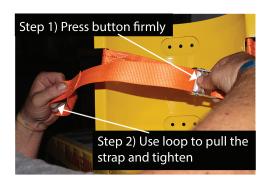







Domestic Truck Mount Kit

Kit inserts into stake pocket to allows racks to be mounted Fits Ford, Chevy, & Dodge full size pickup trucks. (Call to Order) Item# E1086





Green Touch Industries Inc 100 Federal Hwy 1

1-800-621-6919 www.Greentouch.com info@greentouch.com