



Thank you very much for purchasing from M&R. We strive to provide a great product that is made by truck enthusiasts for truck enthusiasts.

2021 Ford Bronco CAPABLE Bumper Fog Light

INCLUDED

- 2 Metal Shrouds
- (4) 40watt Square Light Pods
- Mounting hardware
- M&R Wiring harness



*We have an installation video on our website and YouTube Channel

Step 1

Install the lights into the metal bracket using the hardware provided (M8 bolts).




Step 2

The first thing you want to do is point the wheels into the direction of the side you are working on. This will allow you to have enough space to lay on the floor and have enough space to install the kit without lifting the vehicle.

Step 3

Remove the 7 bolts which are holding the wheel well cover of the OEM fog light kit.

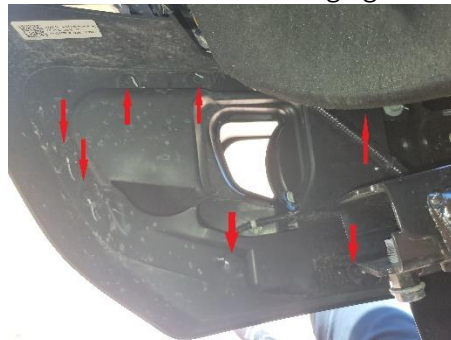

With the cover off please remove the wiring harness clips and final 4 bolts which hold the OEM fog light in place. Unclip the main harness from the fog light and remove the unit from the bumper.

Step 4

Install the light housing with the lights by using the top 2 outside holes with the factory bolts taken out in previous step. It's a good idea to have someone from the front ensure the light kit is straight and centered when tightening the top 2 bolts little by little.



Step 5

Reinstall the fog light cover by reversing previous steps.


Step 6

Now it's time for the wiring.

Your fog light kit came with an M&R wiring harness to connect the lights to the AUX switches. Crimp the Fog light wires to the wiring harness.

Each power wire will be extended to the AUX hook up location to provide the power to the kit. Ford has conveniently setup your truck with aux switches (if equipped) and the wire hook ups are already powered. This makes wiring a lot easier. The auxiliary switchboard on the overhead console makes aftermarket customization easier with six prewired switches connected to the power distribution box. Each circuit is individually fused for connection of electrical accessories.


There are six powered circuits and five non-powered circuits. Circuits from the under hood fuse box (A) are powered

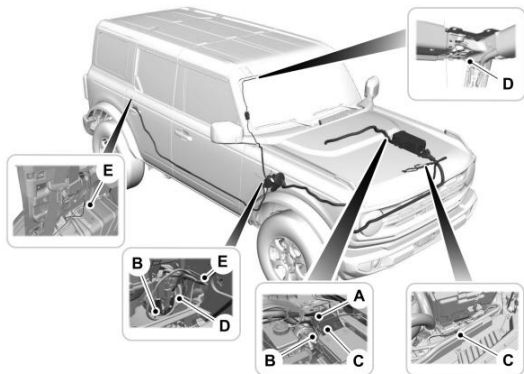


IDENTIFYING THE AUXILIARY SWITCH WIRING

The relays are coded as follows:

Power Distribution Box	Wire Color	Wire Size	Fuse
AUX 1	Yellow	1.5 mm ²	30A
AUX 2	Green/Brown	1.5 mm ²	15A
AUX 3	Violet/Green	0.75 mm ²	10A
AUX 4	Brown	0.75 mm ²	10A
AUX 5	Blue/Orange	0.75 mm ²	10A
AUX 6	Yellow/Orange	0.75 mm ²	10A

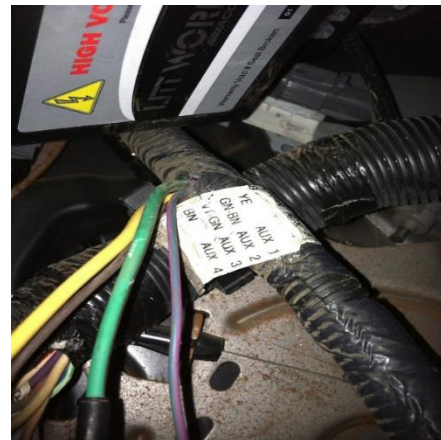

ENJOY YOUR ADVENTURE
&
"FOR OFFROAD USE ONLY"

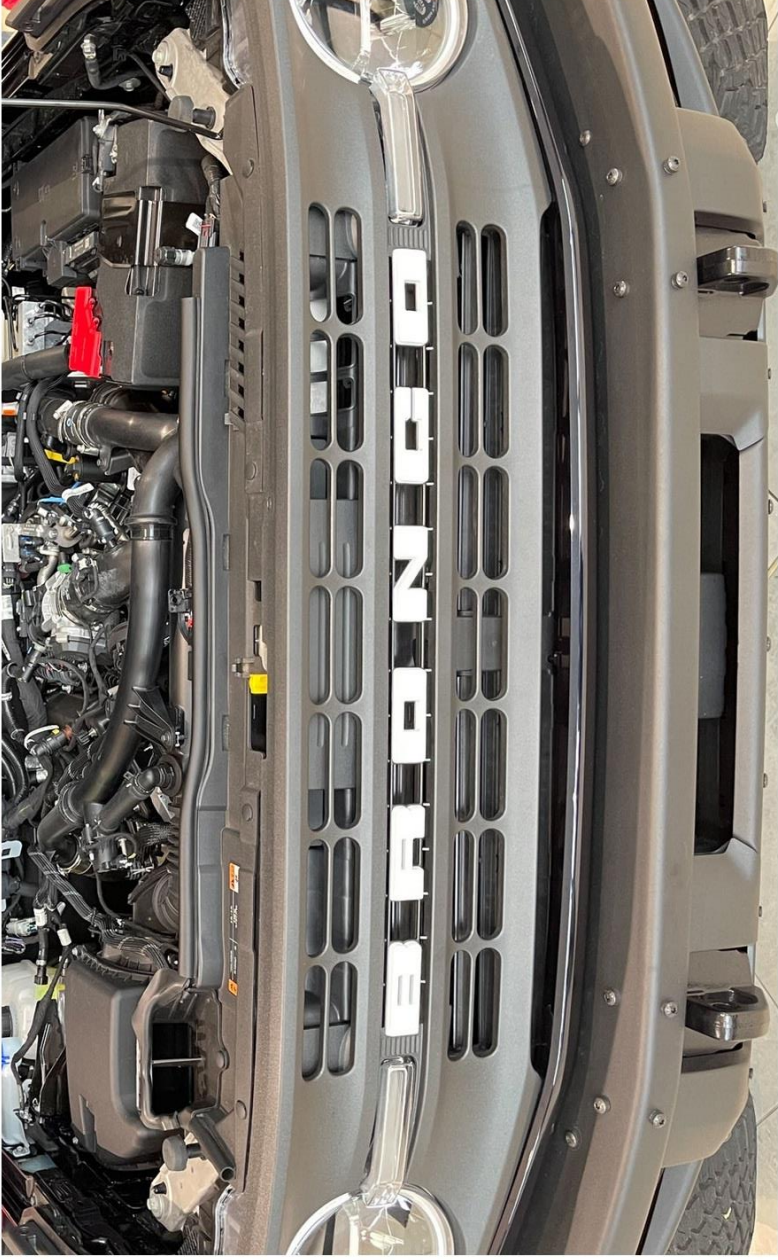

AUX

Ground

**Driver
Side
FOG KIT**

Ground

**Passanger
Side
FOG KIT**