



Thank you very much for purchasing from M&R. We strive to provide a great product that is made by truck enthusiasts for truck enthusiasts.

Raptor Gen 1 FogLight Kit

INCLUDED

- 2 Metal Shrouds
- (6) 20watt square light pods
- 2 Mounting Brackets
- 12 washers
- 12 M4 Bolts



Step 1

Install the lights to the shroud using the M4 bolts (2 per light). Repeat for all 6 lights.




Step 2

Let's say we are working on the driver side. Remove these 2 bolts from inner fender side of the truck shown below. Insert the M&R mounting brackets and reuse the factory bolts. Don't tighten them fully just yet.



Step 3

Insert the metal shroud with the lights over the opening from inside the bumper hole and align the bolts with the holes on the mounting plate. Now its tighten all the bolts from step 2

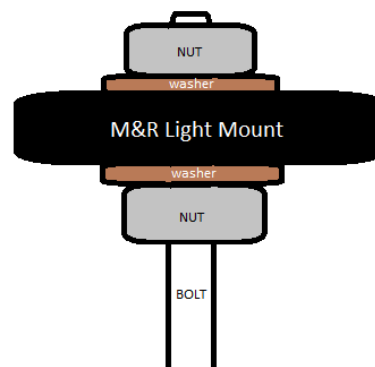

Step 3

Now its time for wiring. Here is a great tutorial. Please use the M&R wiring harness to connect the lights between themselves and take the power wires to the AUX pigtails

<https://www.fordraptorforum.com/threads/wire-raptor-aux-upfitter-switches.20335/>