



Thank you very much for purchasing from M&R. We strive to provide a great product that is made by truck enthusiasts for truck enthusiasts.

2019+ RAM 1500/TRX Fog Light Kit

INCLUDED

- (6) 20w lights
- 2 Metal Housing Brackets
- All mounting hardware
- Wiring harness



*We have a full instruction video on our website and youtube.

Step 1

Remove the plastic inner fender by removing 5 bolts (3 on the edge of the bumper and 2 behind the wheel)




Step 2

Unclip the wiring harness from the OEM fog light assembly and use a pry tool to unclip the harness and move to the side.



Step 3

Remove the OEM light from the bumper by unscrewing the hardware. The top bolts are tricky (TRX model uses T40 bolt heads) A swivel ratchet helps such as the one we used in the video. Reference the location below depending on installation vehicle.

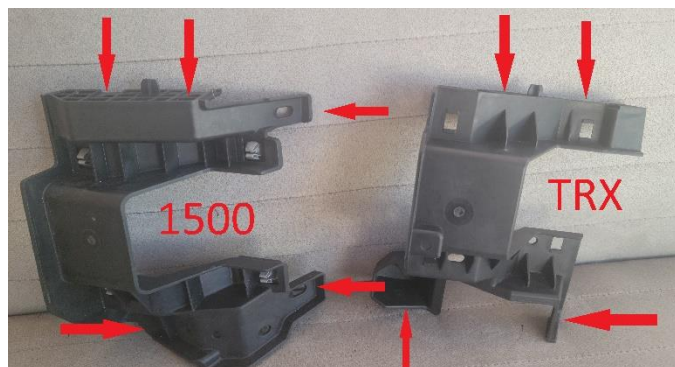

Step 4

Once the OEM lights are removed from the bumper, unscrew the 4 bolts that are holding the OEM light inside the adapter shroud




Step 5

Install the square lights into the M&R mounts using the M4 hardware provided. Each light has (2) M4 screws and washer.



Step 6

Install the M&R mounts onto the OEM adapter shroud with supplied washers. *Note we removed one of the tabs on the design for better fitment. The M&R mount uses 3 mounts now which should not impact stability.

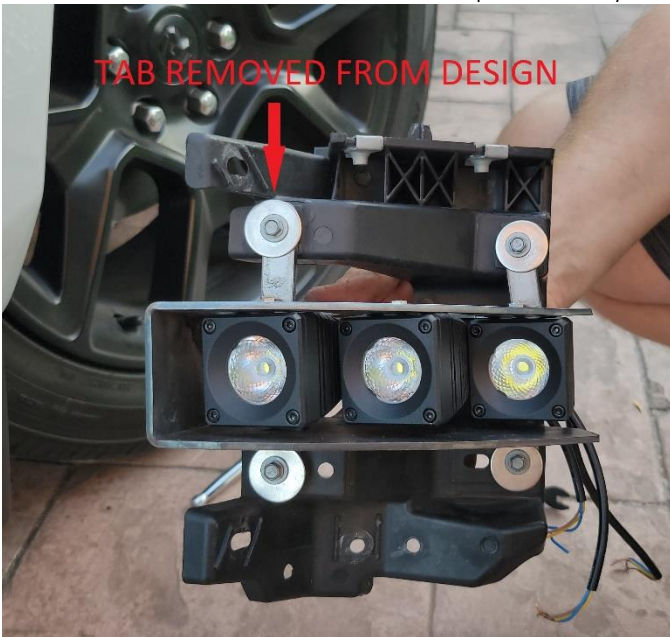

Step 7

Install the unit back into the vehicle by following reverse order.

Step 8

Now its time for wiring.

Blue → Ground

Brown → Power to White lights

Yellow → Power to Amber lights

- The TRX has AUX hookup wires that can be used with the M&R wiring harness to get the wires extended to the factory switches.
- The regular RAM 1500 does not and requires an aftermarket wiring harness to control the lights. It is best to purchase this from Amazon/Ebay, M&R doesn't provide this wiring harness.

ENJOY YOUR ADVENTURE
&
"FOR OFFROAD USE ONLY"