



Pro R Shifter Install

Difficulty: 5/10

Estimated Time: 60 Minutes

Step 1: Remove Drivers side of center console




Step 2: Remove E-clip on passenger side so you can slide shifter pin out the drivers side






Step 3: Remove the plastic clips & cables from the stock shifter

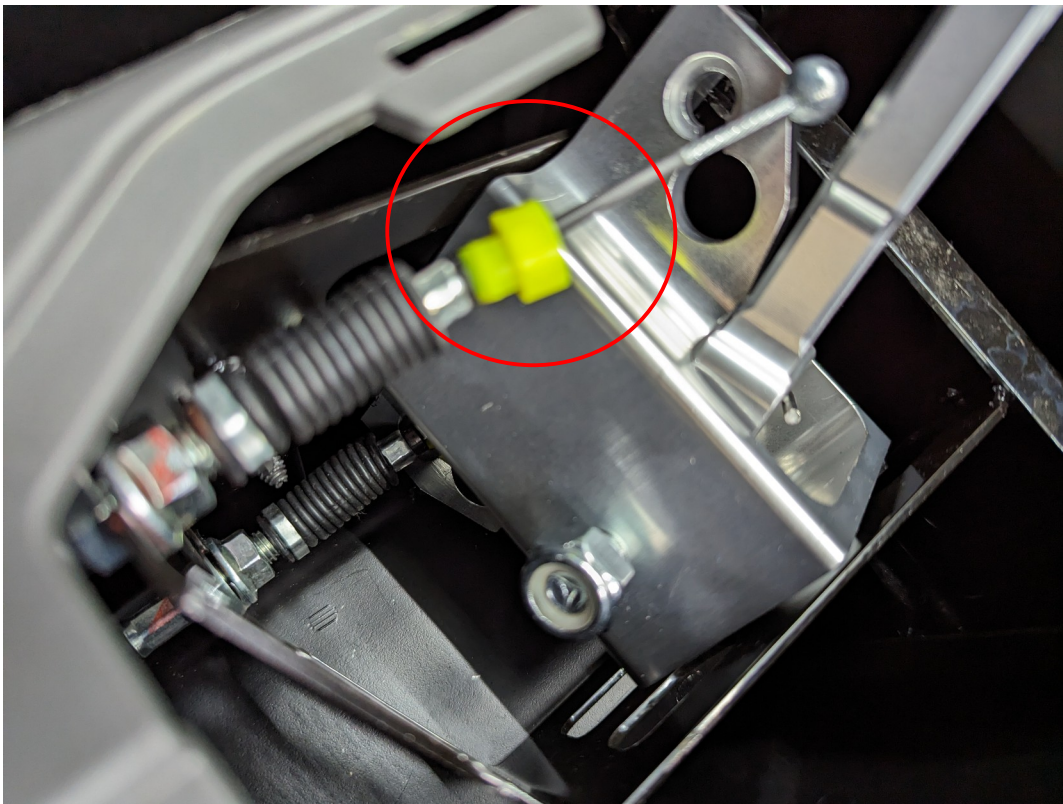




Step 4: Install console support bracket

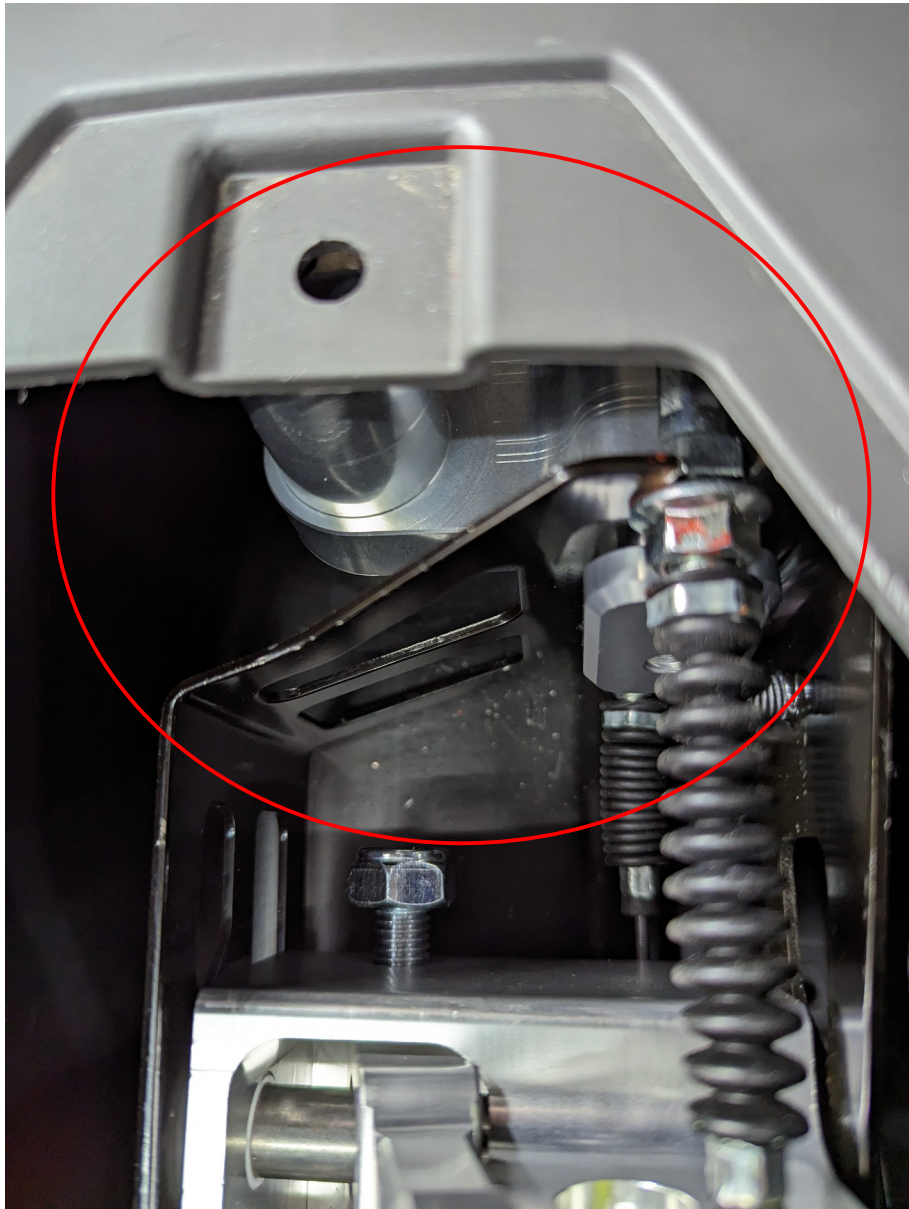



Step 5: Remove bushing from stock shifter and use on Trex shifter

Step 6: Put cables into shifter, make sure to get the plastic clips pushed in

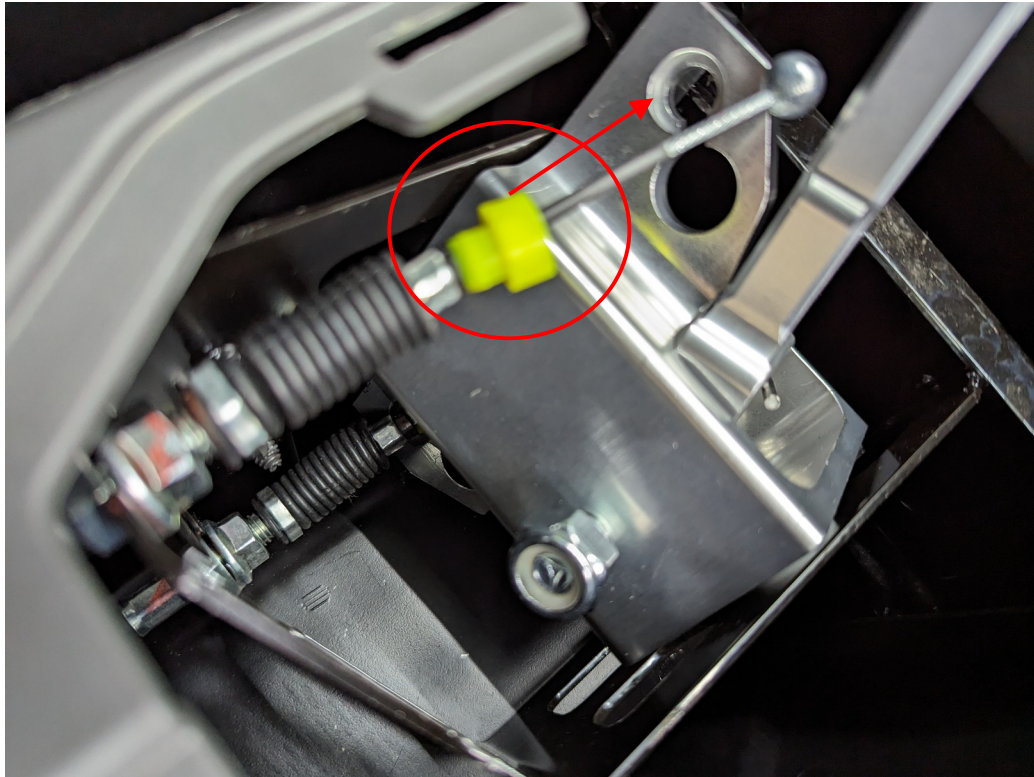



-
- Step 7: Reinstall shifter pin and install E-clip
 - Step 8: Assemble new center console
 - Step 9: Soap or windex on shifter boot to install over shifter
 - Step 10: Assemble driver side plastic to console
 - Step 11: Put machine in neutral, remove guard to adjust cables if necessary

