


T-Rex Ryker Hand Shifter Instructions


1. Remove lower left side cowl



2. Pull wires from frame tube, cut zip ties to mount the shaft collar. Tighten the bolts but leave loose for now.

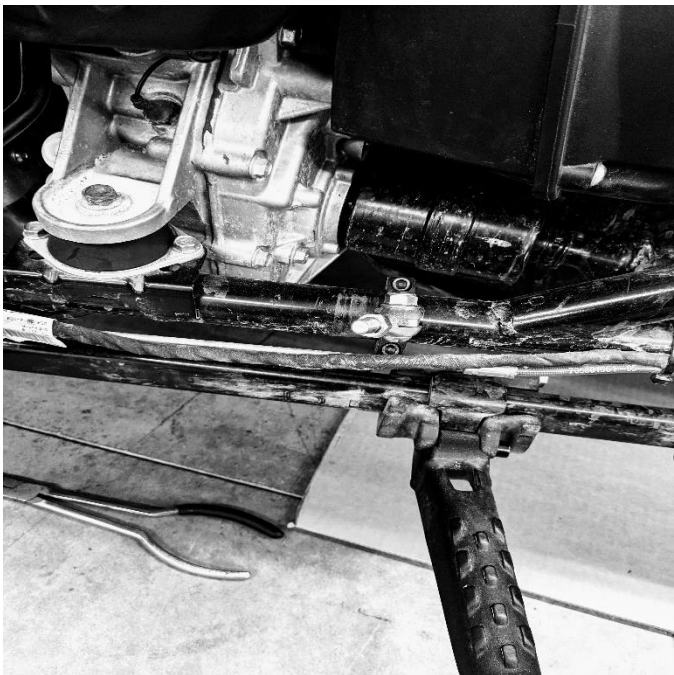

3. Thread shift lever onto frame mount. Be Sure to only tighten lower pivot bolt circled in red until the Nylon locknut reaches the threads. (Cannot be tight shifter needs to pivot freely)
4. Tighten lower jam nut on shifter clevis to hold shifter from twisting.
5. Now Make SURE the shifter pivots freely back and fourth.

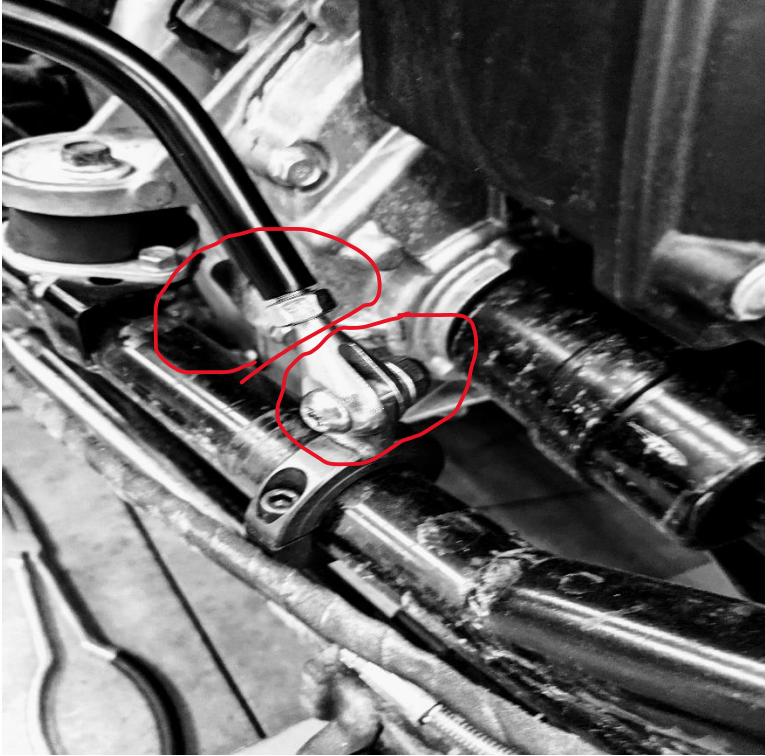

6. Remove factory bolt and rubber from factory shift bar. . .
7. Attach linkage rod to the inside of bracket on the shifter.
8. Tighten both M6 bolts circled below.
9. Now position shifter it should be fairly close to intake fairing.
10. Tighten 2 Allen bolts on lower shifter mount collar.
11. Test shifter few times by moving from forward to reverse.
12. Double check all bolts are secure.
13. Reinstall plastic cowl.

