



## EXHAUST FITMENT INSTRUCTIONS

Welcome to PPD Performance!

We appreciate the purchase and hope you enjoy your new exhaust!!!

These instructions will guide you through the installation process.

The following are the steps we are going to take you through on your installation journey.

1. Unbox exhaust.
2. Lay exhaust down in right order checking its line against the original
  - I. We will specify the order later
  - II. Compare to your currently installed exhaust
3. Remove old exhaust. Take care with the exhaust rubbers to ensure they come off without perishing.
4. Follow the following process to complete the installation of the new system:
  - I. Start from the rear forward, installing the rear muffler first.
  - II. Make sure to use gasket glue at all points
  - III. **Do not tighten any sections until all parts are on.**
  - IV. Fit-up remaining exhaust parts
  - V. Once all pipes are in place, tighten each point up bit by bit, ensuring the system is held in place as it's installed.
5. Enjoy your new system!
6. We love customer videos so when everything is bolted up, give it a rev or take it for a drive and send through your best videos!

Note: If there are ever any issues with installation, we are here to help.

Take a video / a couple of photos and email them to us.

We will help you resolve the issue at no cost to yourself!

[sales@ppdperformance.com.au](mailto:sales@ppdperformance.com.au)



[www.ppdperformance.com.au](http://www.ppdperformance.com.au)



3/102 Norma Rd, Myaree 6154





## EXHAUST FITMENT INSTRUCTIONS

### GENERAL TIPS

Before we start, here are a few general tips to use along the way:

1. Never force a bolt, you will regret it
  - Use Loctite 8040 'Freeze and Release' liberally on turbo studs and any overly tight bolt
  - If in doubt, more Loctite, leave for 2 minutes to soak, try again
2. Never force a bolt, you will regret it.
  - This goes double for turbo studs; you do NOT want to snap one

### Tools required

- Loctite LB 8040 Freeze and Release
- Gasket Glue (Gasket Cement)
- A set of spanners with suitable extension pieces

[sales@ppdperformance.com.au](mailto:sales@ppdperformance.com.au)



[www.ppdperformance.com.au](http://www.ppdperformance.com.au)



3/102 Norma Rd, Myaree 6154



## EXHAUST FITMENT INSTRUCTIONS

### FITMENT

The following is the order of how the exhaust parts will bolt together, starting with pipe 1 bolted to the back of the turbocharger:





## EXHAUST FITMENT INSTRUCTIONS

### Fitted Photos

REAR OF CAR →



[sales@ppdperformance.com.au](mailto:sales@ppdperformance.com.au)



[www.ppdperformance.com.au](http://www.ppdperformance.com.au)




3/102 Norma Rd, Myaree 6154





## EXHAUST FITMENT INSTRUCTIONS

TURBOCHARGER →

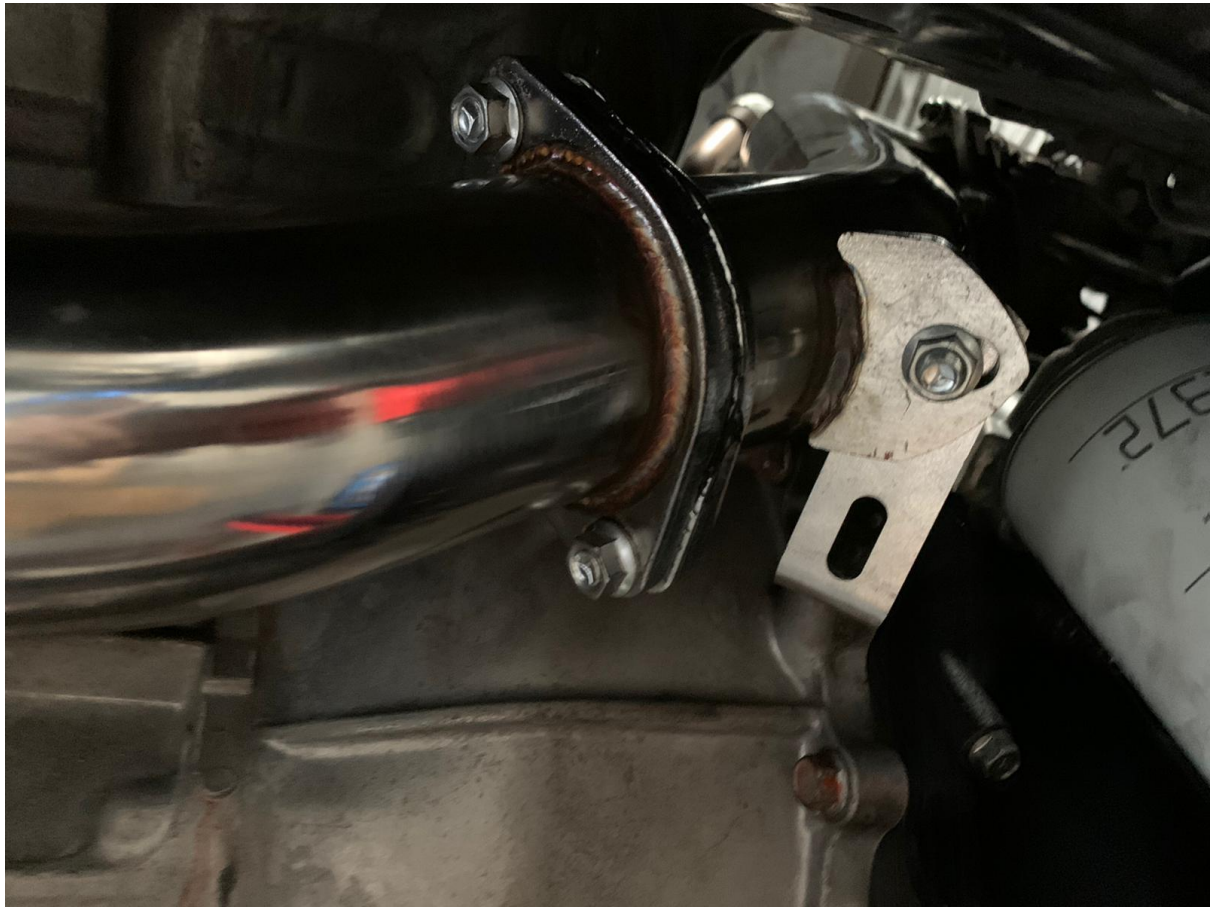

[sales@ppdperformance.com.au](mailto:sales@ppdperformance.com.au)



[www.ppdperformance.com.au](http://www.ppdperformance.com.au)



3/102 Norma Rd, Myaree 6154







## EXHAUST FITMENT INSTRUCTIONS

PLEASE NOTE THE POSITION OF THE DOUBLE HANGER.



[sales@ppdperformance.com.au](mailto:sales@ppdperformance.com.au)



[www.ppdperformance.com.au](http://www.ppdperformance.com.au)



3/102 Norma Rd, Myaree 6154

