


# 13" FRONT EXT.

P/N 16011

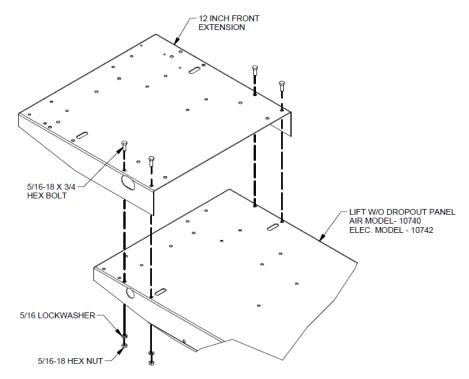


#### INSTALLATION ON

## STANDARD LIFTS

POSITION THE 13" EXTENSION OVER
THE EXISTING TABLE AS SHOWN
AND ATTACH WITH FOUR 5/16-18 X ¾
HEX BOLTS, LOCKWASHERS, AND NUTS
PROVIDED.

NOTE: ALL ACCESSORIES MUST BE REMOVED BEFORE INSTALLING EXTENSION

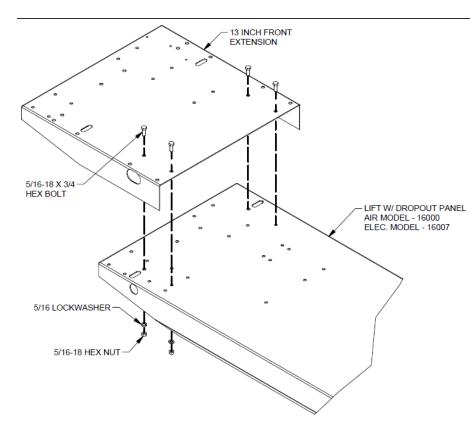

## INSTALLATION ON

### S.A.M. 1000 LIFTS

POSITION THE 13" EXTENSION OVER THE EXISTING TABLE AS SHOWN AND ATTACH WITH FOUR 5/16-18 X ¾ HEX BOLTS, LOCKWASHERS, AND NUTS PROVIDED.

NOTE: ALL ACCESSORIES MUST BE REMOVED BEFORE INSTALLING EXTENSION

