



## Undermount Stainless Steel Installation Instructions

### Before You Start

We recommends that all undermount sinks be installed by an experienced, professional installer.

**IMPORTANT:** The enclosed cutout template will create a countertop opening with a minimal (1/8" or less) reveal. It is recommended that you discuss this with your installer and agree that this finished appearance is the desired effect. We are not responsible for improper sink or countertop installations.

**IMPORTANT:** The cabinet must be installed, secured, plumb, and level. Failure of this step can lead to product damage.

Our undermount sinks should only be fastened to a solid surface countertop.

We are not responsible for sink or countertop if damaged during installation. Be sure to inspect the sink for damage prior to beginning installation.

Metal edges may be sharp - use caution when handling.

Follow all local plumbing and building codes.



### Recommender Tools & Materials (Not Included)

### Recommended Tools & Materials ( Not Included)

- Tape Measure
- Safety Glasses
- Painter' s Tape
- Level
- Framing Square
- Pencil (not permanent marker)
- Shims or Cabinet Fillers
- Denatured Alcohol
- Clamps
- Construction Adhesive
- Silicone Sealant
- Screws (recommended by countertop manufacturer)

## Undermount Stainless Steel Installation Instructions

### 1: Prep Countertop

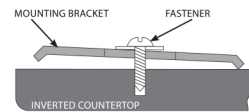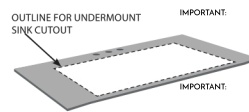


1. Position the template (provided with your sink) front to rear so the sink will not interfere with the cabinet; secure with tape.
2. Trace the template and remove. Dry fit the sink to verify the measurements.
4. Following the countertop manufacturer' s instructions, carefully cut the countertop on the inside of the traced line.
5. Locate and drill the mounting holes, following the countertop manufacturer' s instructions. Holes should allow even spacing of mounting brackets around the sink.
6. With the countertop inverted (upside down), fasten the mounting brackets to the countertop loosely.

**IMPORTANT:** The cabinet must be installed, secured, plumb, and level before installing the sink.


**IMPORTANT:** Our undermount sinks should only be fastened to a solidsurface countertop.

### 2: Install Countertop

APPLY SILICONE SEALANT AFTER CLEANING THE SINK EDGE AND COUNTERTOP

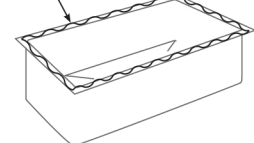

VERIFY SINK IS CENTERED WITHIN THE COUNTERTOP OPENING BEFORE TIGHTENING FASTENERS.

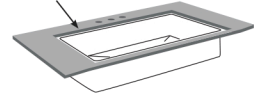

1. Clean the bottom of the countertop and the top flange (or lip) of the sink with denatured alcohol.
2. Apply a narrow bead of silicone adhesive sealant evenly all around the top of the sink flanges.
3. Position and align the sink over the countertop opening. Press silicone onto countertop.
4. Tighten fasteners until mounting brackets are snug against sink. Check alignment of sink to the countertop opening.
5. Tighten down fasteners evenly. Be careful not to over-tighten.
6. Immediately remove excess sealant.

**IMPORTANT:** The enclosed cutout template will create a countertop opening with a minimal (1/8" or less) reveal. It is recommended that you discuss this with your installer and agree that this finished appearance is the desired effect. We are not responsible for improper sink or countertop installations.

**IMPORTANT:** We are not responsible for sink or countertop if damaged during installation. Be sure to inspect the sink for damage prior to beginning installation.

**WARNING: THIS PRODUCT CAN EXPOSE YOU CHEMICALS, INCLUDING LEAD, WHICH IS KNOWN TO THE STATE OF CALIFORNIA TO CAUSE CANCER AND BIRTH DEFECTS OR OTHER REPRODUCTIVE HARM. For more information go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov)**

**ADVERTENCIA: ESTE PRODUCTO PUEDE EXPONERLO A SUSTANCIAS QUIMICAS, ENTRE ELAS PLOMO, QUE EL ESTADO DE CALIFORNIA RECONOCE COMO CAUSANTE DE CANCER, MALFORMACIONES CONGENITAS U OTROS DAÑOS AL SISTEMA REPRODUCTOR. Para más información, visita [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov)**

For parts or sale requirements please contact our customer service department:



CS@daxib.com



1 888 685 8236

- Los bordes de metal pueden estar afilados, ten cuidado al manipularlos.
- Sigue todos los códigos de plomería y construcción



2. Aplica una línea delgada de adhesivo sellador de silicona de manera uniforme alrededor de toda la parte superior del fregadero.
3. Coloca y alinea el fregadero sobre la abertura del mostrador. Presiona la silicona sobre el mostrador.
4. Aprieta los sujetadores hasta que los soportes de instalación estén apretados contra el fregadero. Verifica la alineación del fregadero con la abertura del mostrador.
5. Aprieta de manera uniforme los sujetadores. Cuida de no aprieta