




## Quick Start Guide H2OPro-Flow Meter Installation

WWW.H2OProTech.com

### Flow Meter


- The 3/4" NPT male threads connect directly to an irrigation valve with a 3/4" NPT female thread fittings. Other types of valves will require adaptaters.

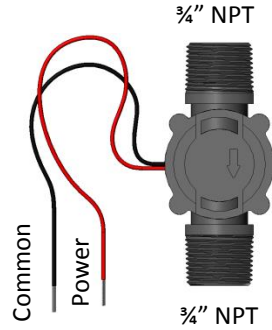

2017 © Hot Socket, LLC 1

### Installation


- Apply Teflon tape to male threads, then screw flow meter inlet into valve inlet

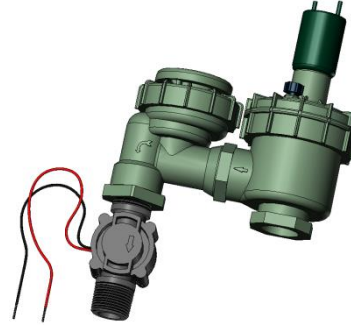

2017 © Hot Socket, LLC 2

### Installation

- Complete the necessary PVC pipe installation to route the water supply to the valve inlet, and the water outlet from the flow meter to the sprinkler run.

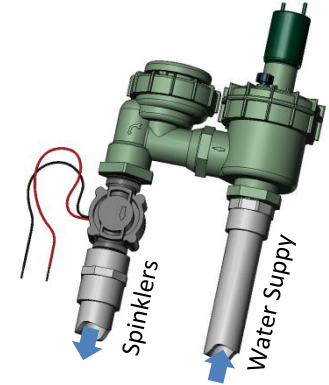


2017 © Hot Socket, LLC 3

2017 © Hot Socket, LLC Rev 0

### Wiring


- Connect the meter red wire to the solenoid zone power wire.
- Connect the meter black wire to the solenoid common wire.

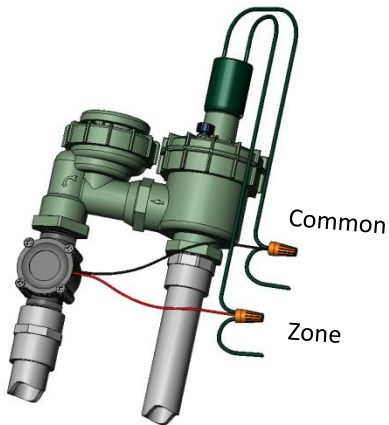

2017 © Hot Socket, LLC 4

### Connect to H2OPro



- Connect the zone wire to one of the H2OPro ZONES
- Connect the common wire to one of the H2OPro COM.

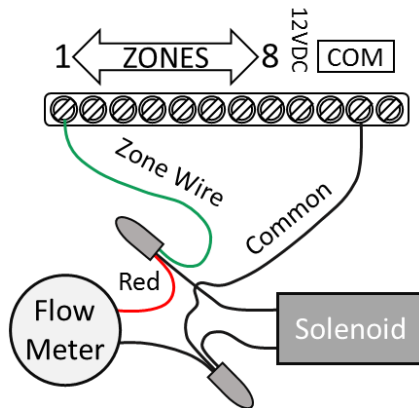

2017 © Hot Socket, LLC 5

### Testing with H2OPro App

- Use the App direct control function to turn on the valve and verify that water flow is detected.

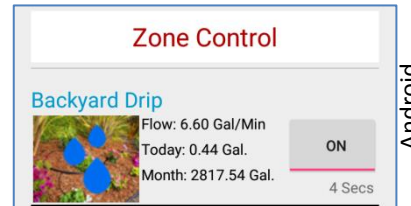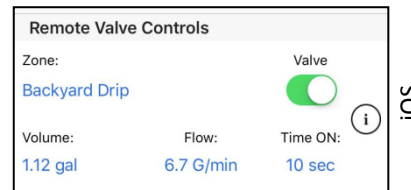

2017 © Hot Socket, LLC 6