



**Congratulations on the purchase of your FINAL APPROACH® S.U.B. Layout Blind!**

**Unpack components from the box and identify all parts before proceeding.**

**Keep these assembly instructions for future reference.**

**Visit the Final Approach website at [www.FABrand.com](http://www.FABrand.com) for links to our YouTube channel featuring blind setup instructional videos and more.**

#### **PARTS LIST**

**A : Head Frame end left (1)**

**B : Head frame end right (1)**

**C : Foot frame end left (1)**

**D : Foot frame end right (1)**

**E : Head Rest (1)**

**F : Gun Rest (1)**

**G : Support Arms (2)**



**H : Door Frame (2)**

**Verify you have received all parts listed below. If you are missing any parts, please contact Final Approach customer service**

**at [service@fabrand.com](mailto:service@fabrand.com) between 8 a.m. – 5 p.m. CST Monday through Friday.**

## ASSEMBLY INSTRUCTIONS

**STEP 1: Remove blind from the box and unbuckle to unfold. Frame should be in correct location. The only loose parts will be the door frames (F).**

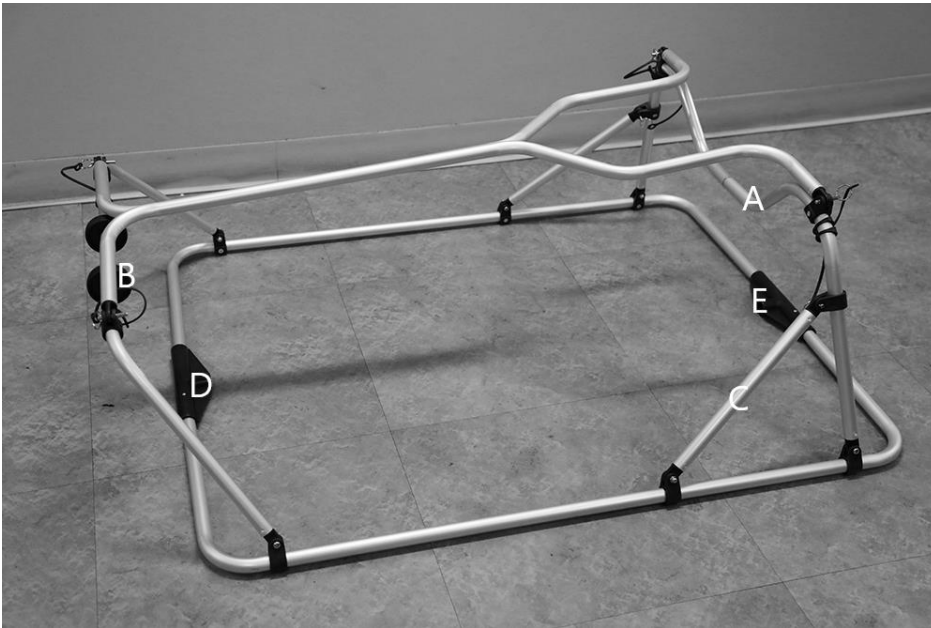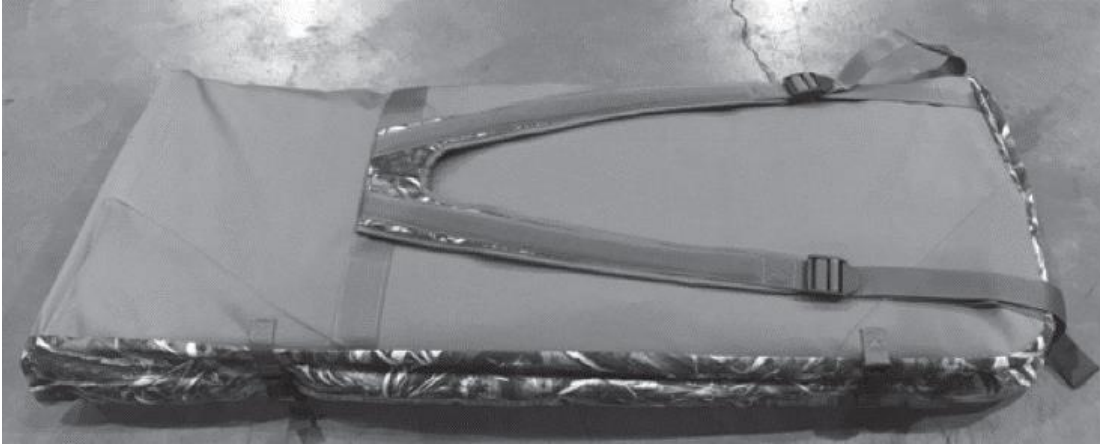


**(A) HEADREST**

**(E) BASE FRAME HEAD SECTION**

**(D) BASE FRAME MID SECTION**

**(C) SIDE BRACE ARMS**


**(B) GUN REST.**

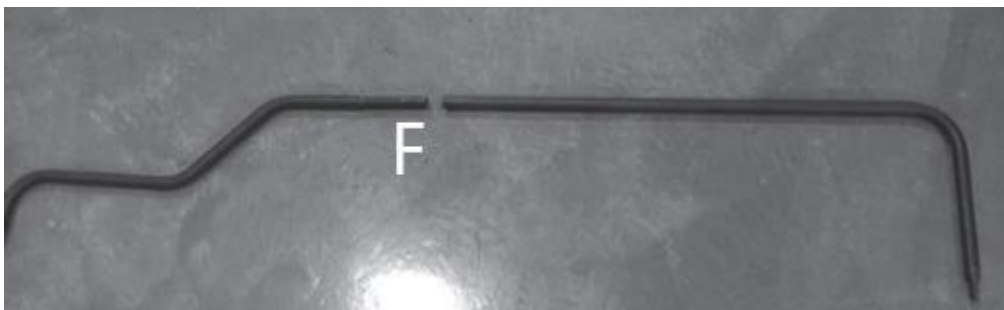

**STEP 2: Fold backrest out of the way. Note that head rest (A) is partially in place.**



**STEP 3: STEP 3: Attach two sides of head rest (A) in the center. Push pin will snap in place.**

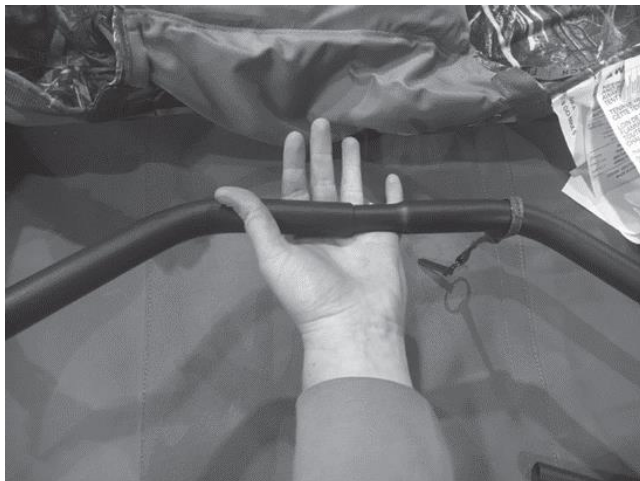

**STEP 4: Attach head end of base frame (E) by sliding plastic arm. Slide until push pin is engaged and pops into place.**




**STEP 5: Raise head rest (A) and attach side arm brace (C), using tethered pin. Repeat on other side. Push pins go in from inside the blind with point facing to the outside of the blind.**






**STEP 6: Attach frame at midsection of base frame (D) by repeating same as step 4.**

**Slide plastic arm.**

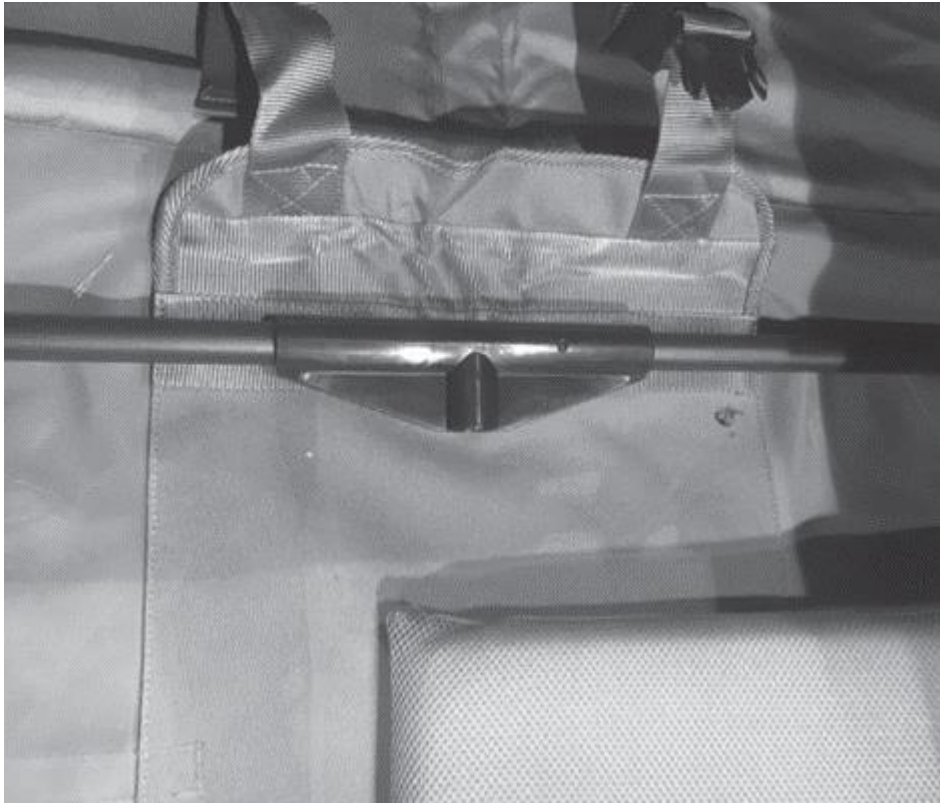

▪ **STEP 7: Attach two halves of gun rest (B).**

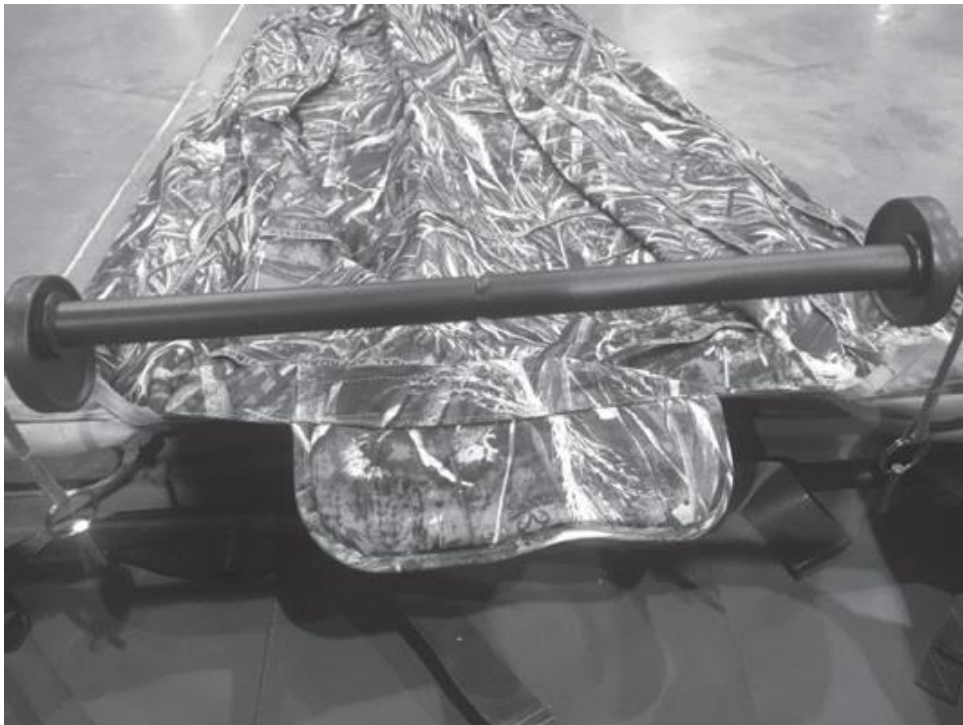

**STEP 8: Insert door frames (F). First, attach top of frame to head rest (A). Next, attach bottom of door frame to gun rest (B). Repeat on both sides. Note: It helps to secure gun rest in place first with hook & loop strip before attaching door frame.**



**STEP 9: Buckle straps underneath backrest. The tighter the straps are cinched down, the higher your back will be off the ground.**



**Assembly is finished!**



## **BEFORE HITTING THE FIELD!**

**Set up the blind and get it ready to hunt. Take a bucket of water and add some dirt to it. Take the mud and spread it all over the blind to get the sheen off the new fabric. Let the mud dry and brush off as much as you want.**

## **TIPS FOR IN THE FIELD!**

**Cut your set up time in half with another product that we make. The FA Whoopgrass is a natural raffia fiber dyed in different colors to get a base coat on your blind for any situation. This base coat of concealment can get you ready faster before the birds start to fly.**

## **CARE INSTRUCTIONS**

**Remove excess dirt and mud from fabric using a brush and mild soap and then rinse, using COLD water only from a garden hose. Line Dry.**

**DO NOT MACHINE WASH OR DRY.**

**Any claims must be submitted to the customer service department using the contact information below. All returned products must be accompanied by the original dated receipt and proof of purchase to be considered for repair or replacement.**

## **FINAL APPROACH**

**10451 NW Transcon Drive,  
Kansas City, Missouri 64153  
Website: [www.fabrand.com](http://www.fabrand.com)  
Email: [service@fabrand.com](mailto:service@fabrand.com)**