



KIA FORTE SEDAN 2019


INSTALLATION MANUAL

**FIRST INSTALL
FRONT LIP SPOILER**

**AIR CURTAINS SET
AD PART #: KI05A02**


**READ CAREFULLY
BEFORE INSTALLATION**


**WASH BEFORE
INSTALLING**

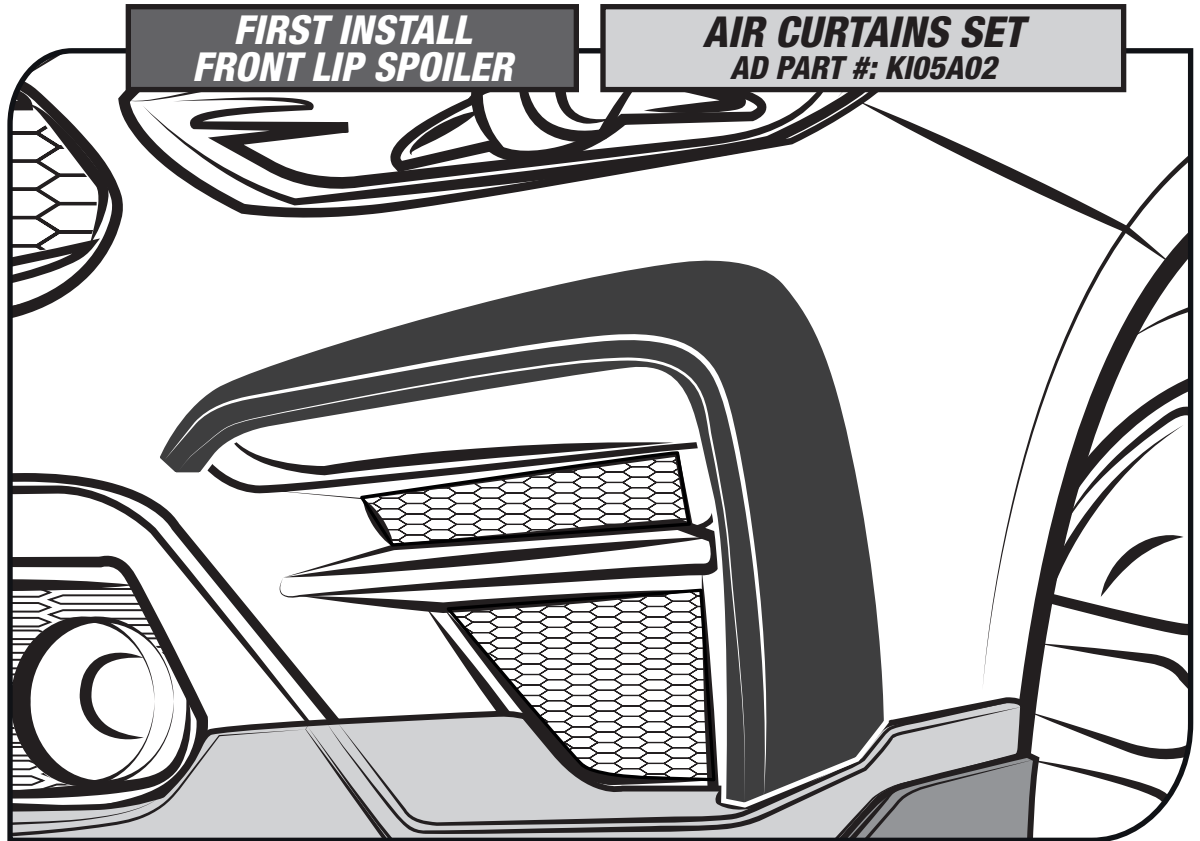

**WE RECOMMEND
2 PERSONS FOR
INSTALLATION**

AFTER INSTALLING

DO NOT WASH CAR






24 hrs

TOOLS



CHECK LIST

***ALREADY INSTALLED ON THE PART**

ITEM	DESCRIPTION	DRAWING	AMOUNT
A	*VHB TAPE		N/A
B	POLYURETHANE ADHESIVE 100 ml		1 PC




KIA FORTE SEDAN 2019


INSTALLATION MANUAL

The ideal temperature range of the part and the vehicle when installing must be 16°C (60°F) to 40°C (104°F), this guarantees a correct assembly.


1 CLEAN THE INSTALLATION ZONE

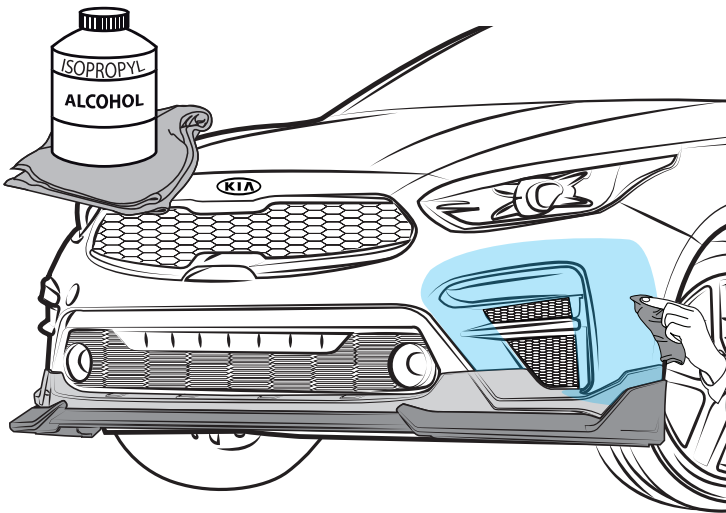


2 TEST FIT THE AIR CURTAIN

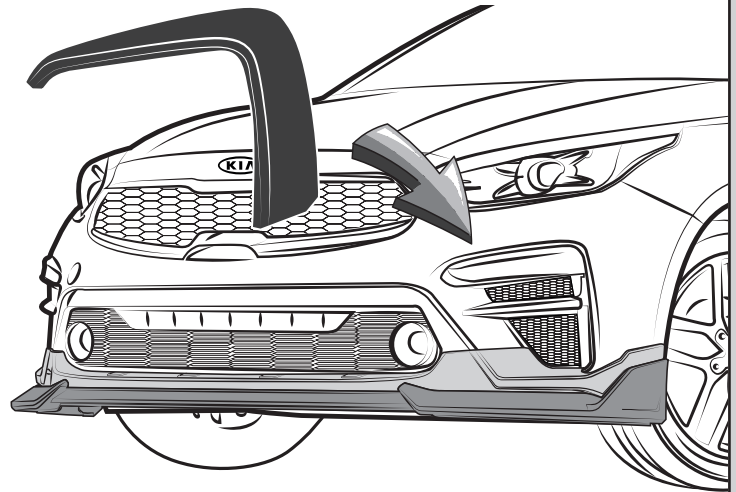


3 MARK

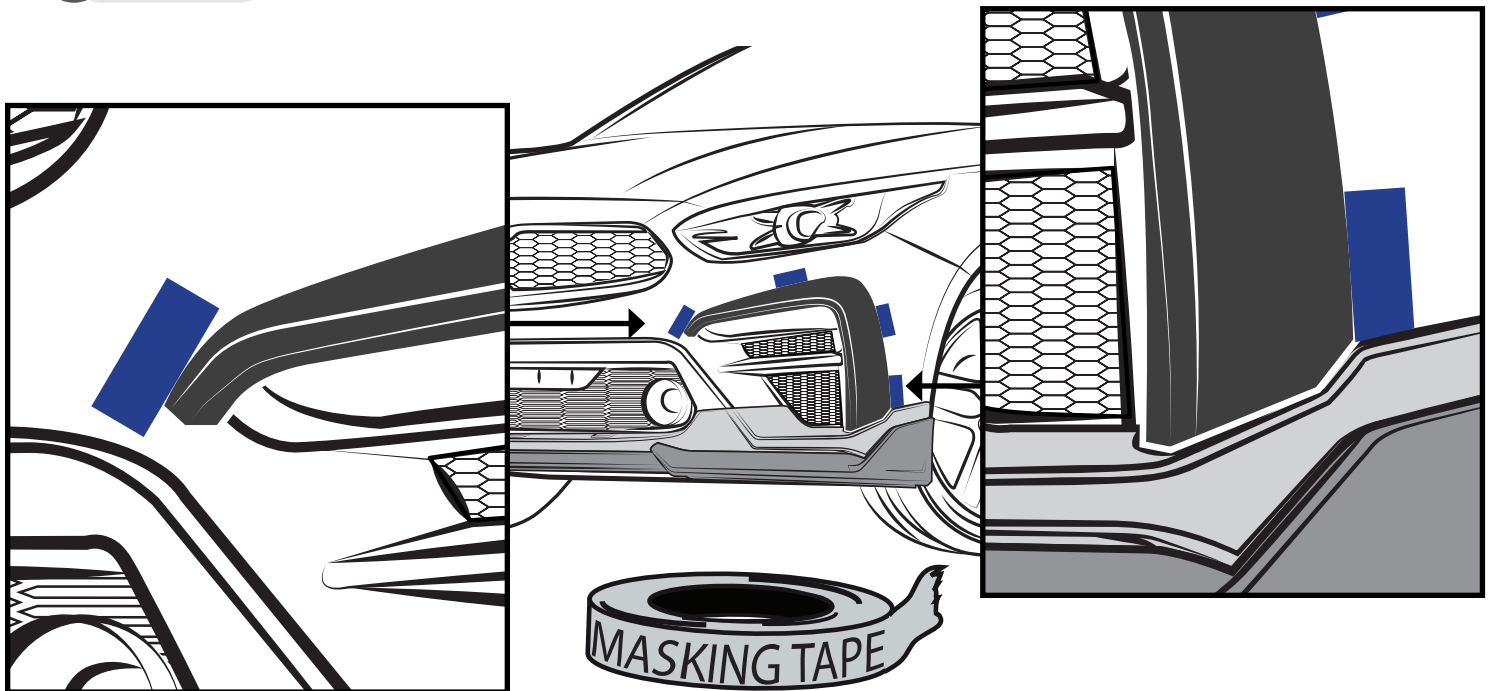

4 REMOVE THE AIR CURTAIN

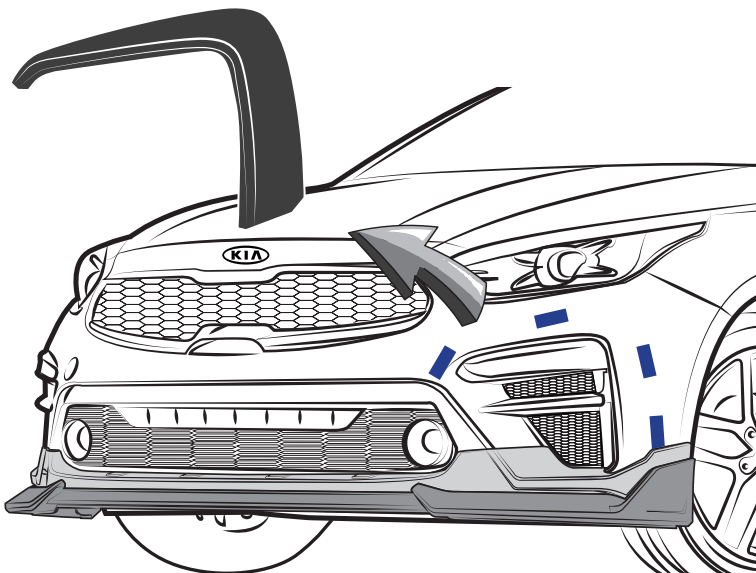


5 CLEAN ADHESIVE CHANNEL

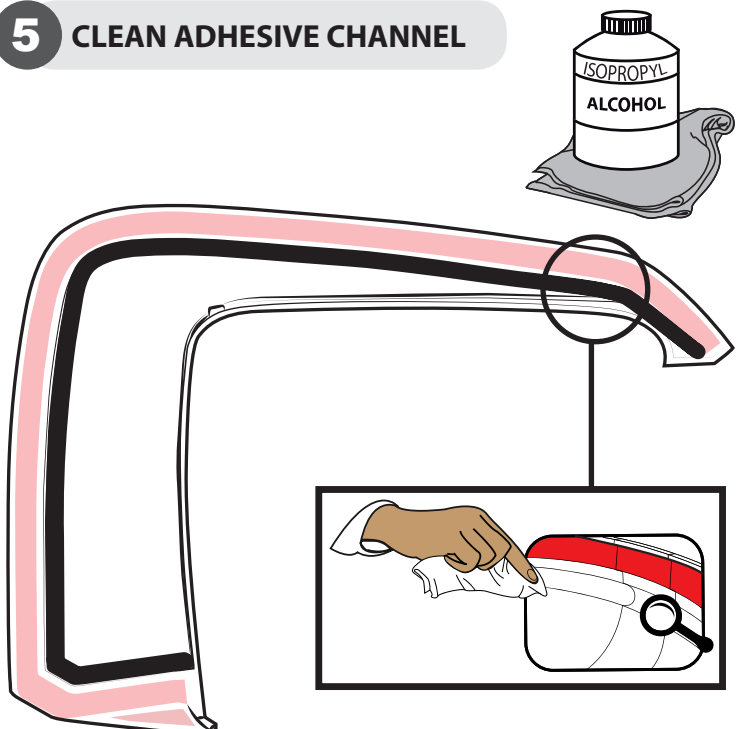




INSTALLATION MANUAL


6 PEEL THE LINER LEADS

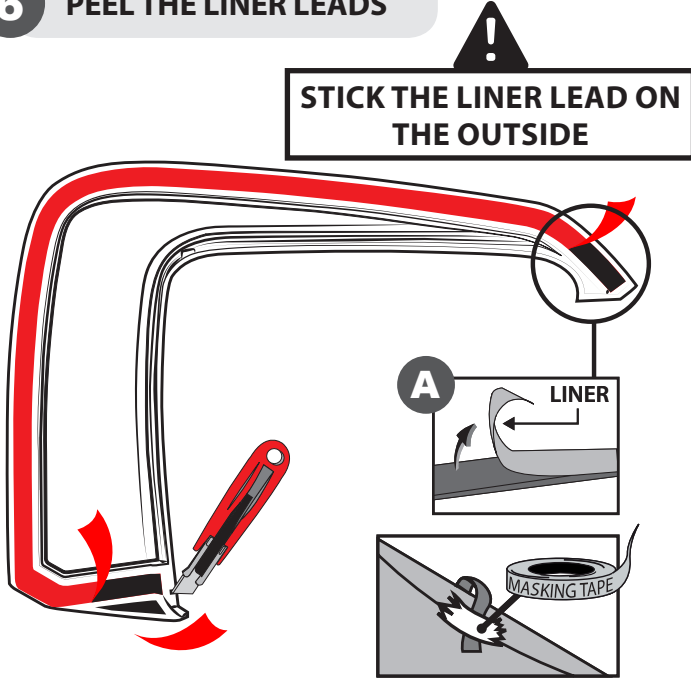


7 APPLY POLYURETHANE ADHESIVE

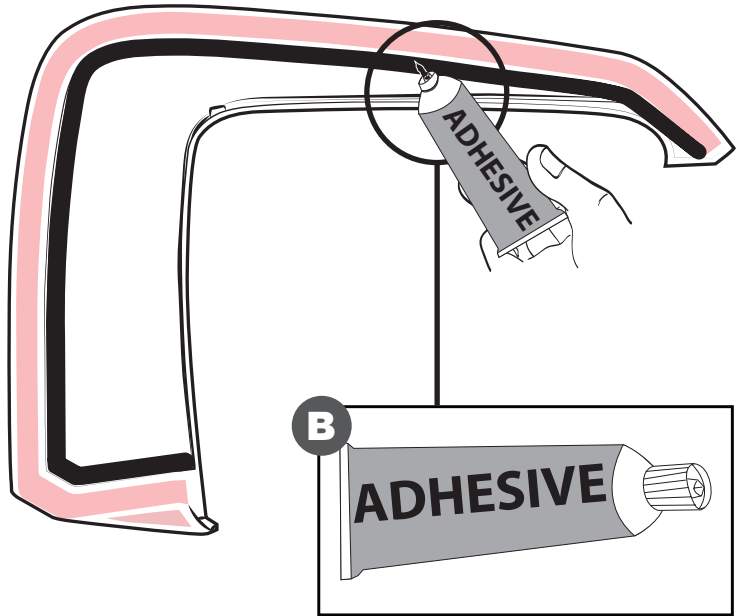


8 PLACE THE AIR CURTAIN

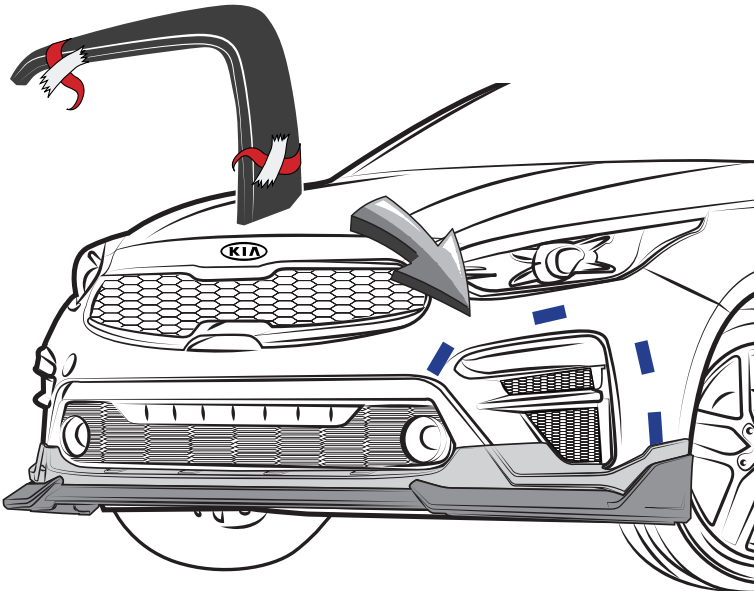

9 REMOVE THE LINER AND PRESS

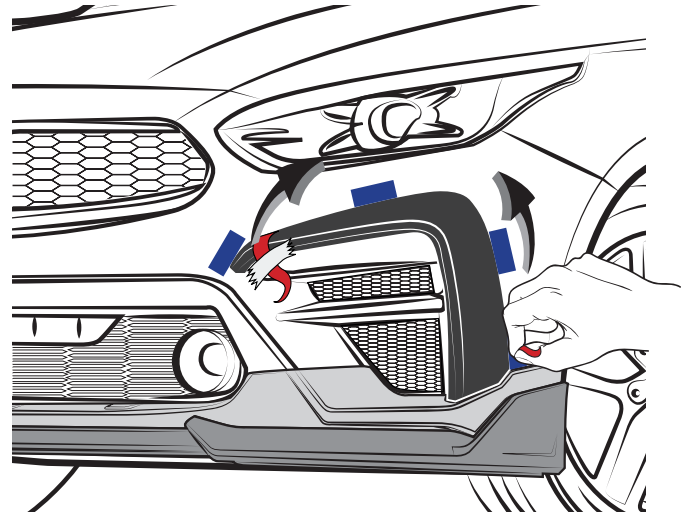

10 PRESS FIRMLY

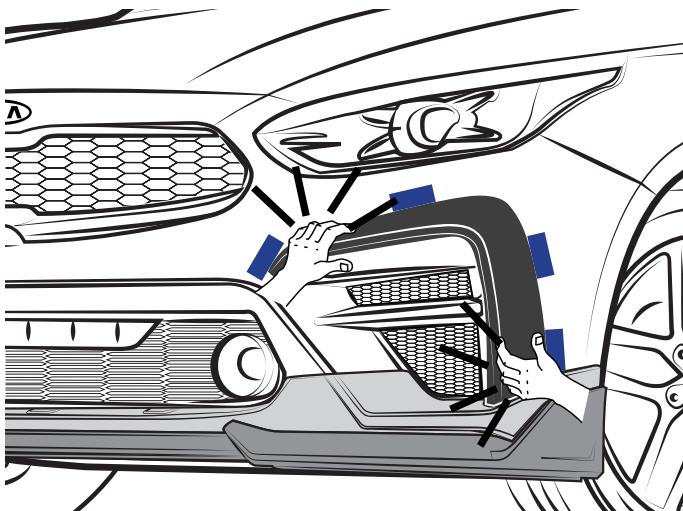


FULL AND COMPLETE CONTACT BETWEEN TAPE AND VEHICLE SURFACE IS CRUCIAL FOR GOOD ADHESION PERFORMANCE! TAPE IS PRESSURE AND TEMPERATURE SENSITIVE!

PROPER CONTACT IS ACHIEVED BY APPLYING A PRESSURE BETWEEN 40 AND 50 N/CM². TAPE AND VEHICLE SURFACES SHOULD BE THE SAME TEMPERATURE AND MUST BE AT LEAST 60°F (25°F) DURING INSTALLATION!




11 CLEAN

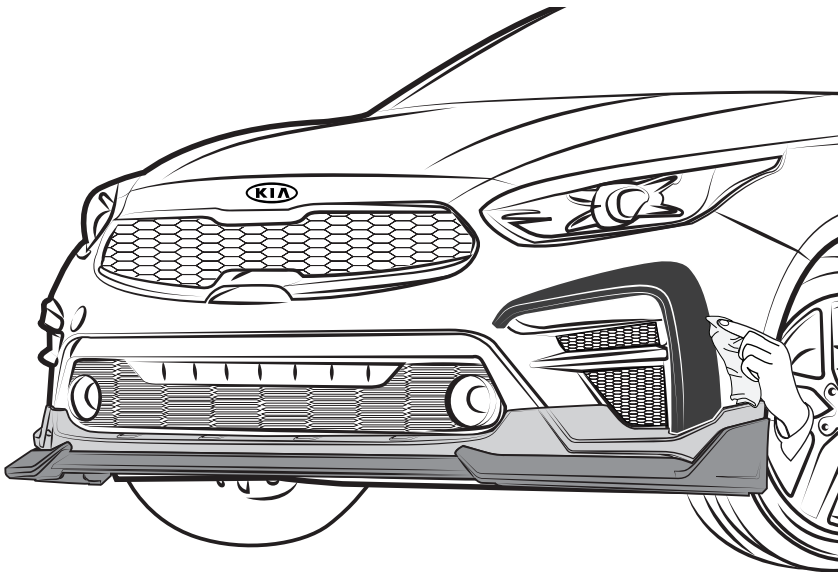

REMOVE MASKING



REPEAT ALL STEPS FOR RH SIDE

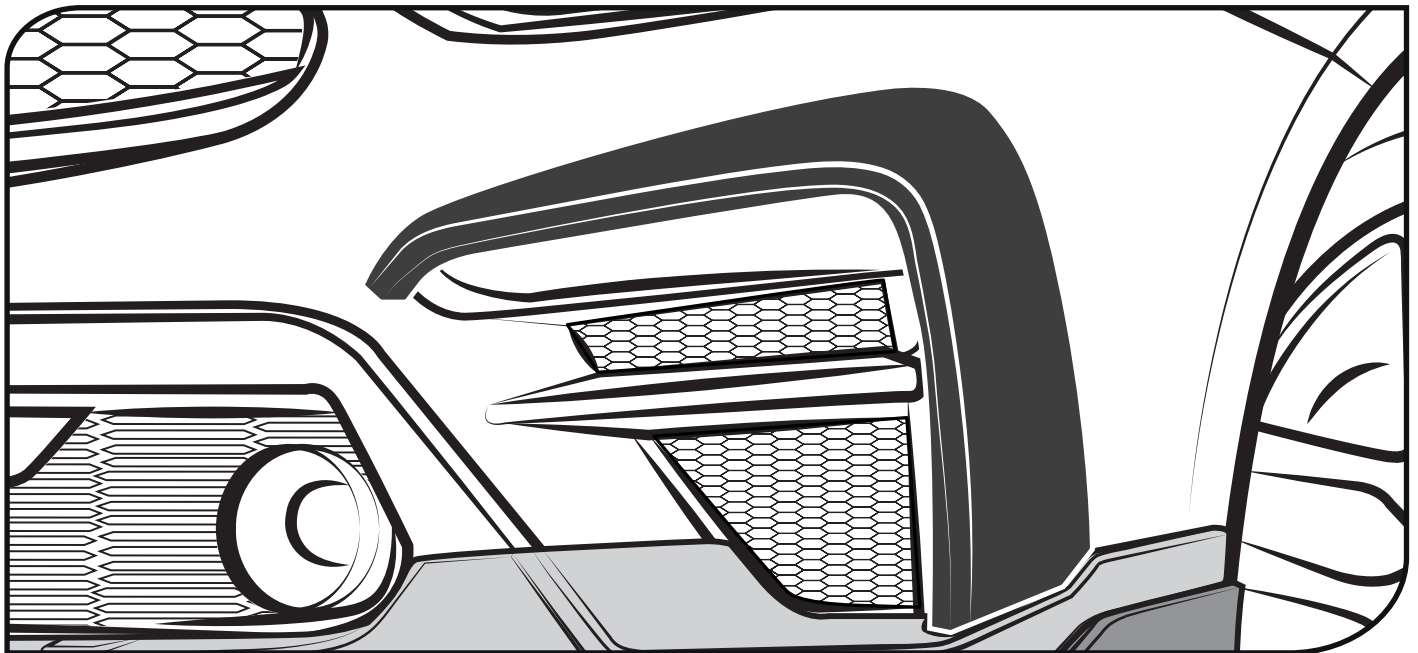

INSTALLED PART



Painting Manual



IMPORTANT




- a) Body Color Paint Procedure for Sport Kits coated in gray primer, with the lower area painted in Piano Black (or Glossy Black).
- b) KIA Sport Kit parts come from the Factory coated in gray primer (upper area) and Glossy Black (lower area).
- c) Glossy Black finish comes faded over the primer to achieve a better blending between Glossy Black finish and the base color.
- d) Please follow the next steps in order to apply the Body Color Base and the clear coat over the primer.

FOR THE FULL INSTALLATION ON THE VEHICLE, CHECK THE INCLUDED INSTRUCTION SHEET OR THE INSTALLATION VIDEO ON YOUTUBE.

STEPS TO FOLLOW


1 OUTLINE THE CONTOURS OF THE PART

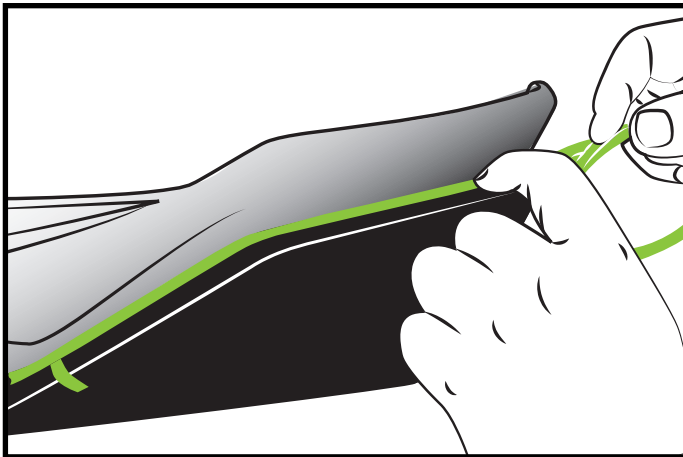

TO PROTECT THE GLOSSY BLACK FINISH, OUTLINE THE CONTOURS OF THE PART WITH MASKING TAPE SIZE 1/4 AND 3/4.




2 COVER THE GLOSSY BLACK ZONES

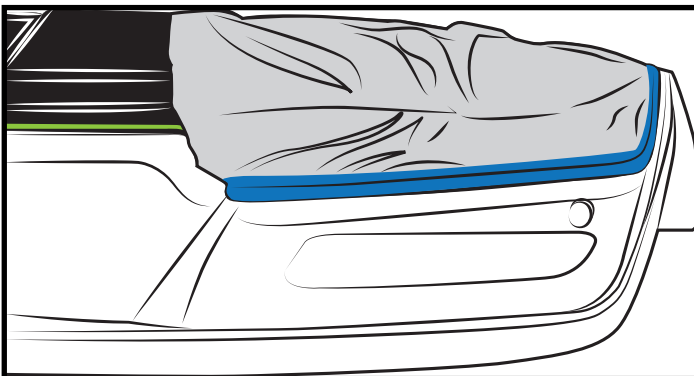

PROTECT WITH MASKING PAPER THE GLOSSY BLACK AREAS. PROTECT THE POLYURETHANE CHANNEL AND THE VHB TAPE.


INSTALLATION MANUAL

3 SANDPAPER

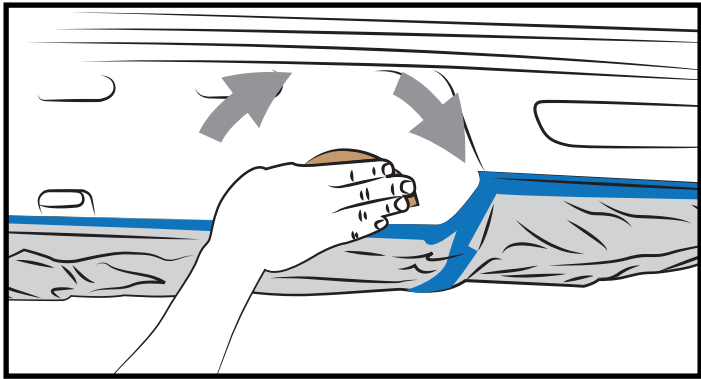


LIGHTLY SAND THE AREA WITH 600-GRIT SANDPAPER.

4 CLEAN

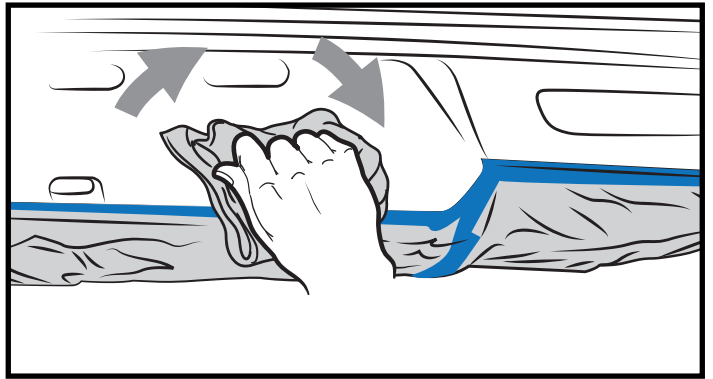


WIPE OFF DUST WITH FLANNEL CLOTH BEFORE APPLYING THE PAINT.

5 APPLY THE BASE COLOR

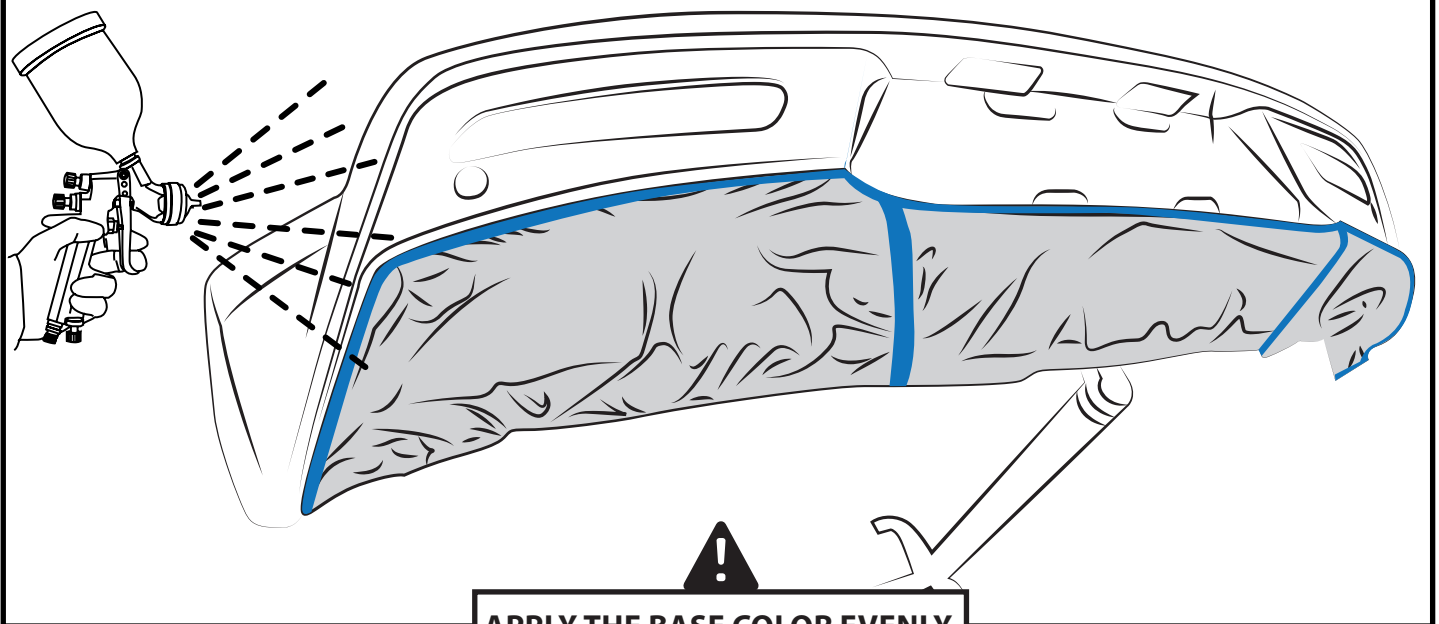

APPLY THE BASE COLOR EVENLY.


6 APPLY THE CLEAR COAT

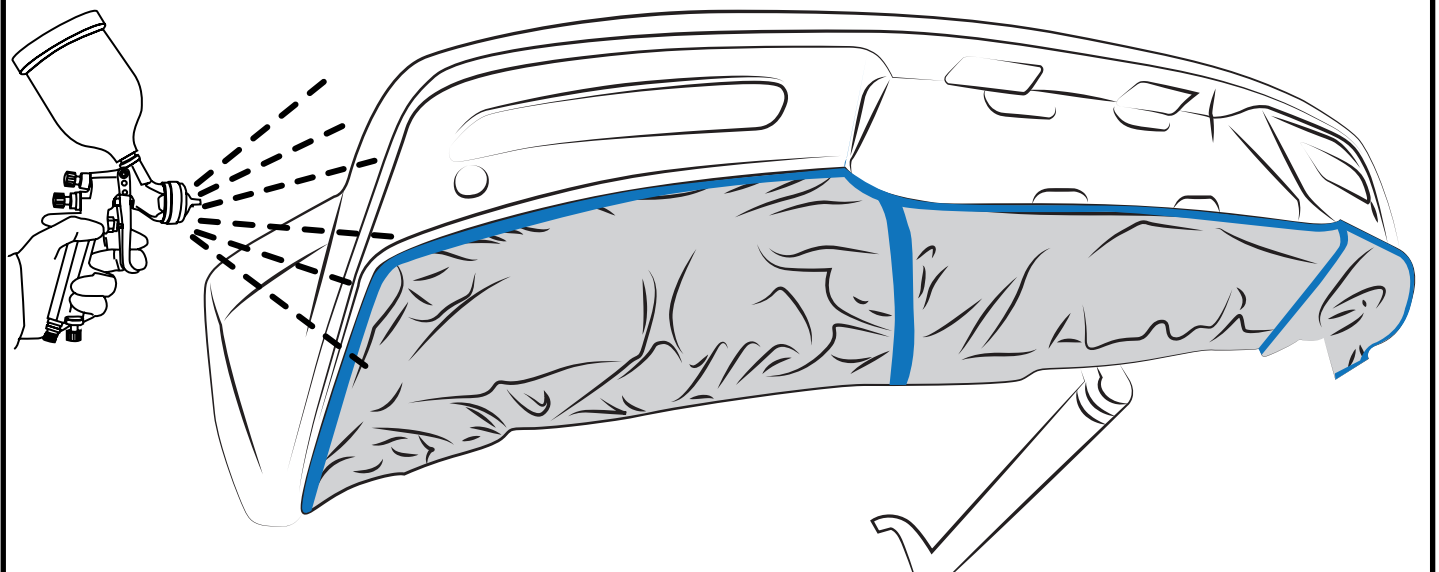




INSTALLATION MANUAL

7 CURE

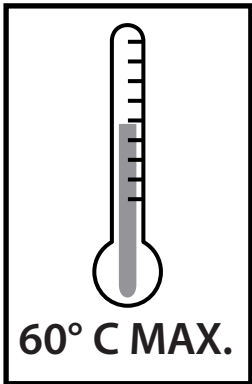

!
CURE IN AN OVEN FOR 30 MINUTES AT 60 °C MAXIMUM.

8 UNMASK

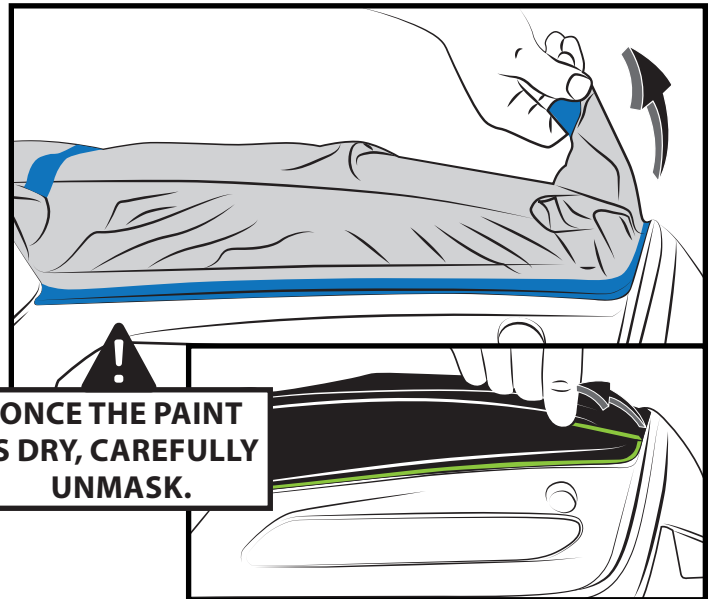

9 MICRO-POLISH AND WAX THE PART



IMPORTANT



STOCK THE PARTS IN SUITABLE RACKS TO PREVENT DAMAGE AND DEFORMATION.