


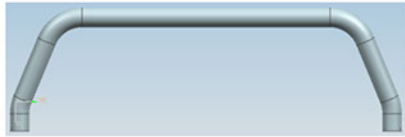
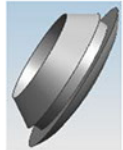
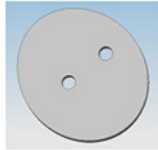
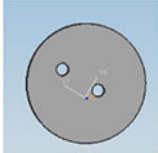

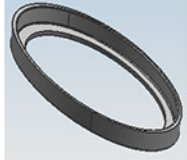
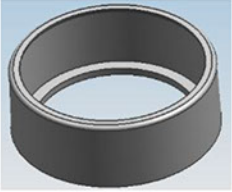

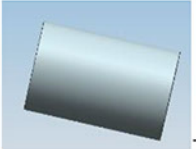



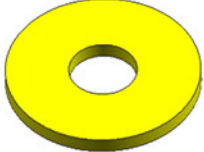




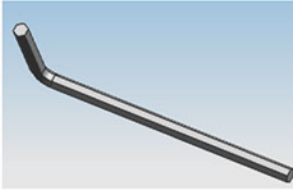



BODYLINE ROLL BAR FOR FORD RANGER & RAPTOR (ROLLER SHUTTER)

Parts list

NO.	QTY	PICTURE	NO.	QTY	PICTURE	NO.	QTY	PICTURE
①	1	 Mid rear rack	②	1	 L rear rack	③	1	 R rear rack
④	1	 Front rack	⑤	8	 Rubber plug	⑥	1	 2 R.location sticker
⑦	2	 1 location sticker	⑧	1	 2 L.location plate	⑨	2	 Rubber rack for rear rack
⑩	2	 Rubber plug for front rack	⑪	1	 Rear light sticker (238*40.5)	⑫	8	 + nylon sleeve

SIMPLE INSTRUCTION

⑬	2	 M8 nut	⑭	6	 Large washer D8 (8*24*2mm)	⑮	4	 Round head hexagon socket screw M8-25
⑯	12	 Spring washer D8	⑰	8	 Flat washer D8 (8*16*1.6)	⑱	8	 Round head hexagon socket screw M8-50
⑲	1	 hex wrench S=2.5	⑳	1	 hex wrench S=5			



Automotive Restyling

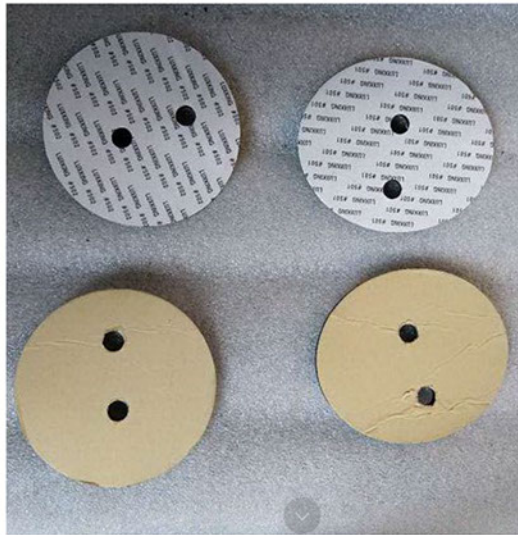
**43 Catalina Drive
Tullamarine VIC 3043**

03 9338 6455 - sales@bodyline.com.au - www.bodyline.com.au



Installation instruction:

1. Assemble the roller cover on the flat plane according to the roller cover instruction, **not need to assemble the support bracket.**
2. Assemble the roll bar according to the Installation picture,
3. Mover the sticker cover and paste the location sticker' beige face on the roll bar leg according to the Installation picture , Align them according to hole position; find the best position, then remove the white sticker cover under 4 roll bar 's leg and paste it on the roller cover's side rail, press it tight for 30 sec, then remove the roll bar, the sticker would stick on the roller cover then we can start to drill the hold according to that



4. After hold drilled, remover all location sticker (6) (7) (8) , then assemble the roll bar on roller cover by (12) (16) (17) (18)
- (5) Rubber plug is only use for the ROLLER COVER without ROLL BAR, but the hole already been drilled

Fasten all the hardware, Installation complete.

Installation picture

