


A Frame Light bar install



At **step 54** of the JLR winch install as shown below

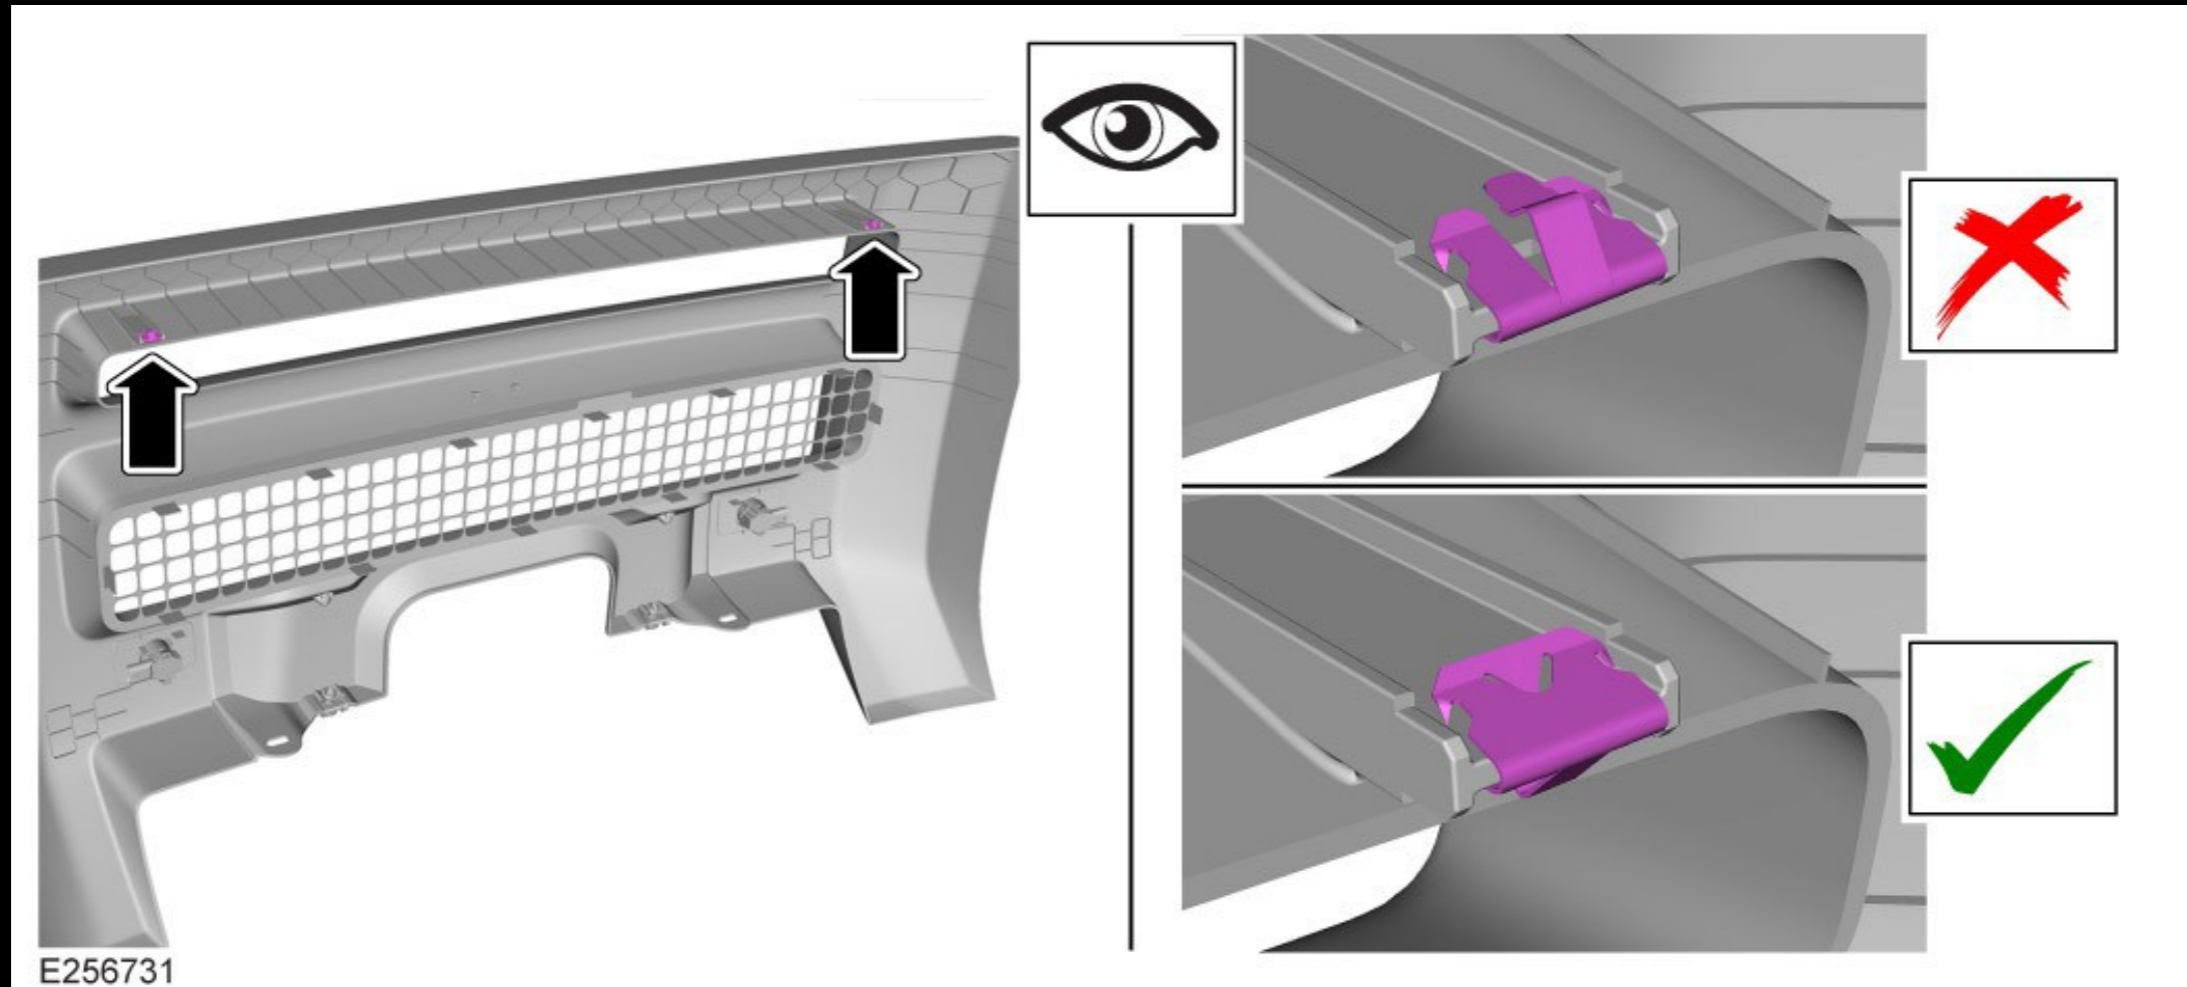

Add the following steps....

Drill two 3/3 holes as shown below




11 1/2" from the center of the A frame
and 1 3/4" from the inner lip

Assemble the light bar with the mounting feet out giving you a 23" center-to-center stance



Align the sport bar with the drilled holes on the back of the A frame.

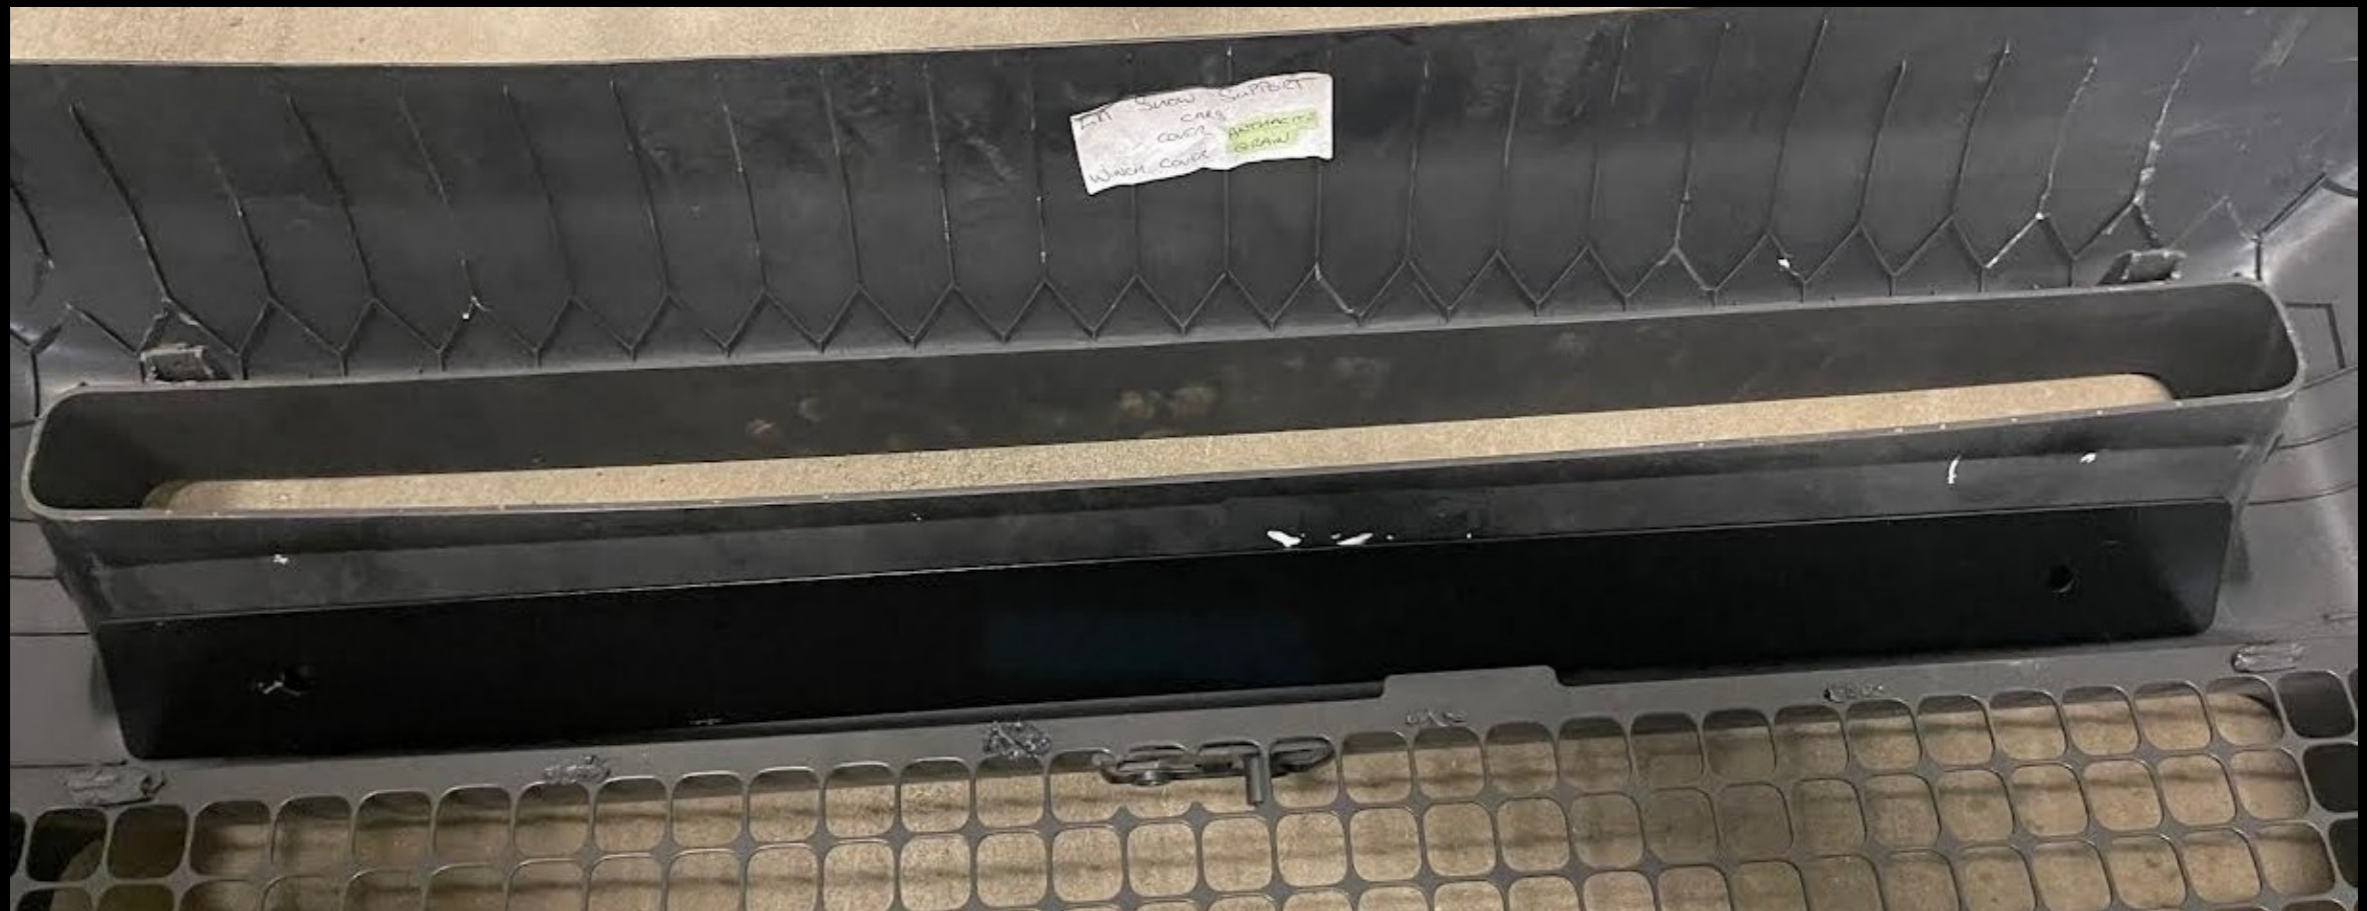

Mount the light bar to the outside of the A frame
bolting through the support bar.



Tighten down the light bar.



Your A frame should look like this.

NOTE: Route the wiring harness to an accessible spot to connect later.



Job complete!

