# D5 Rear Loadspace LED Lighting Kit Installation





## **Step One:**



Locate and mark center


## **Step Two:**





Remove Left OEM LED light

#### **Step Three:**

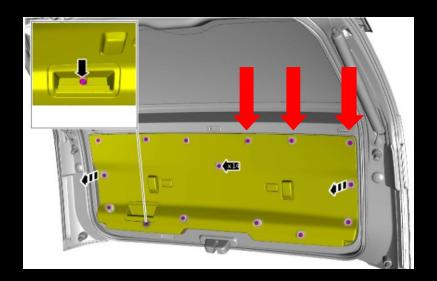

Locate and release the three top left tailgate trim panel retaining clips. (Red Arrows)




Use a plastic trim removal tool to get behind the panel to release the three retaining clips

#### **Step Four:**




Insert a wire fishing tool behind the tailgate panel. (wire hanger shown here)

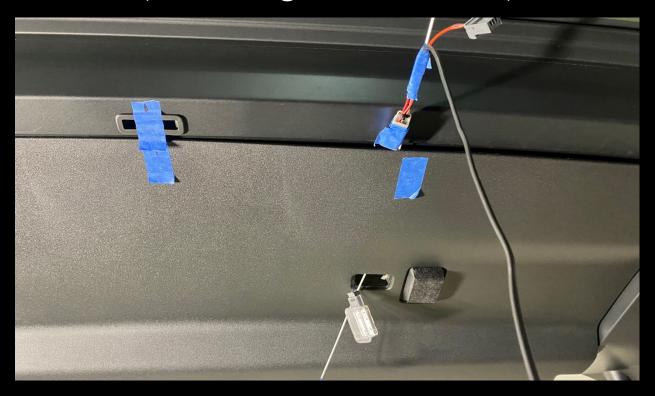

Tape bespoke OEM cable plug and socket adapter to the wire fishing tool

### **Step Five:**

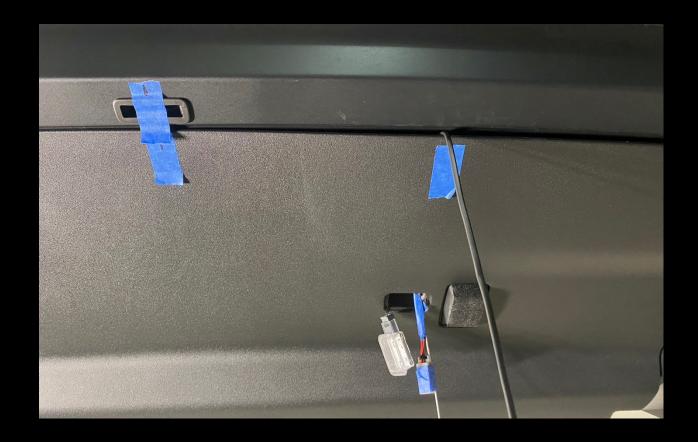

Gently pull the cable and socket adapter out the OEM LED light hole

#### **Step Six:**



Disconnect the OEM LED.




Plug the OEM cable into the bespoke socket adapter. (Red Arrow)



Plug the bespoke plug into the OEM LED light. (Red Arrow)

#### **Step Seven:**

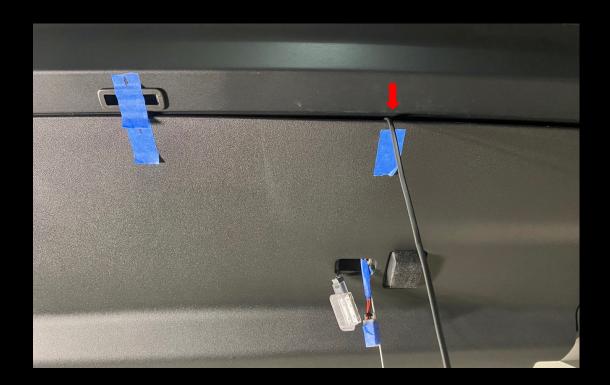

File a small grove in the tailgate trim panel to allow a flat finish when closed. (Red Arrow)



#### **Step Eight:**



Firmly pop the top three tailgate retaining clips back into place.

Remove the red adhesive backing from the Lucky 8 LED light and firmly press in place. Replace the OEM LED light.

Installation is now complete!





