



# Proud Rhino Rock Slider Install LR3, LR4, & Range Rover Sport



After years and years of installs we find this the easiest way to do the job. As always Chock wheels use emergency brake check local laws and safety standard. We also recommend consulting local religious leaders and the know all neighbor. In other words make sure its safe before you climb under a 6000lb truck



Locate these four (4) body bolts on the truck.

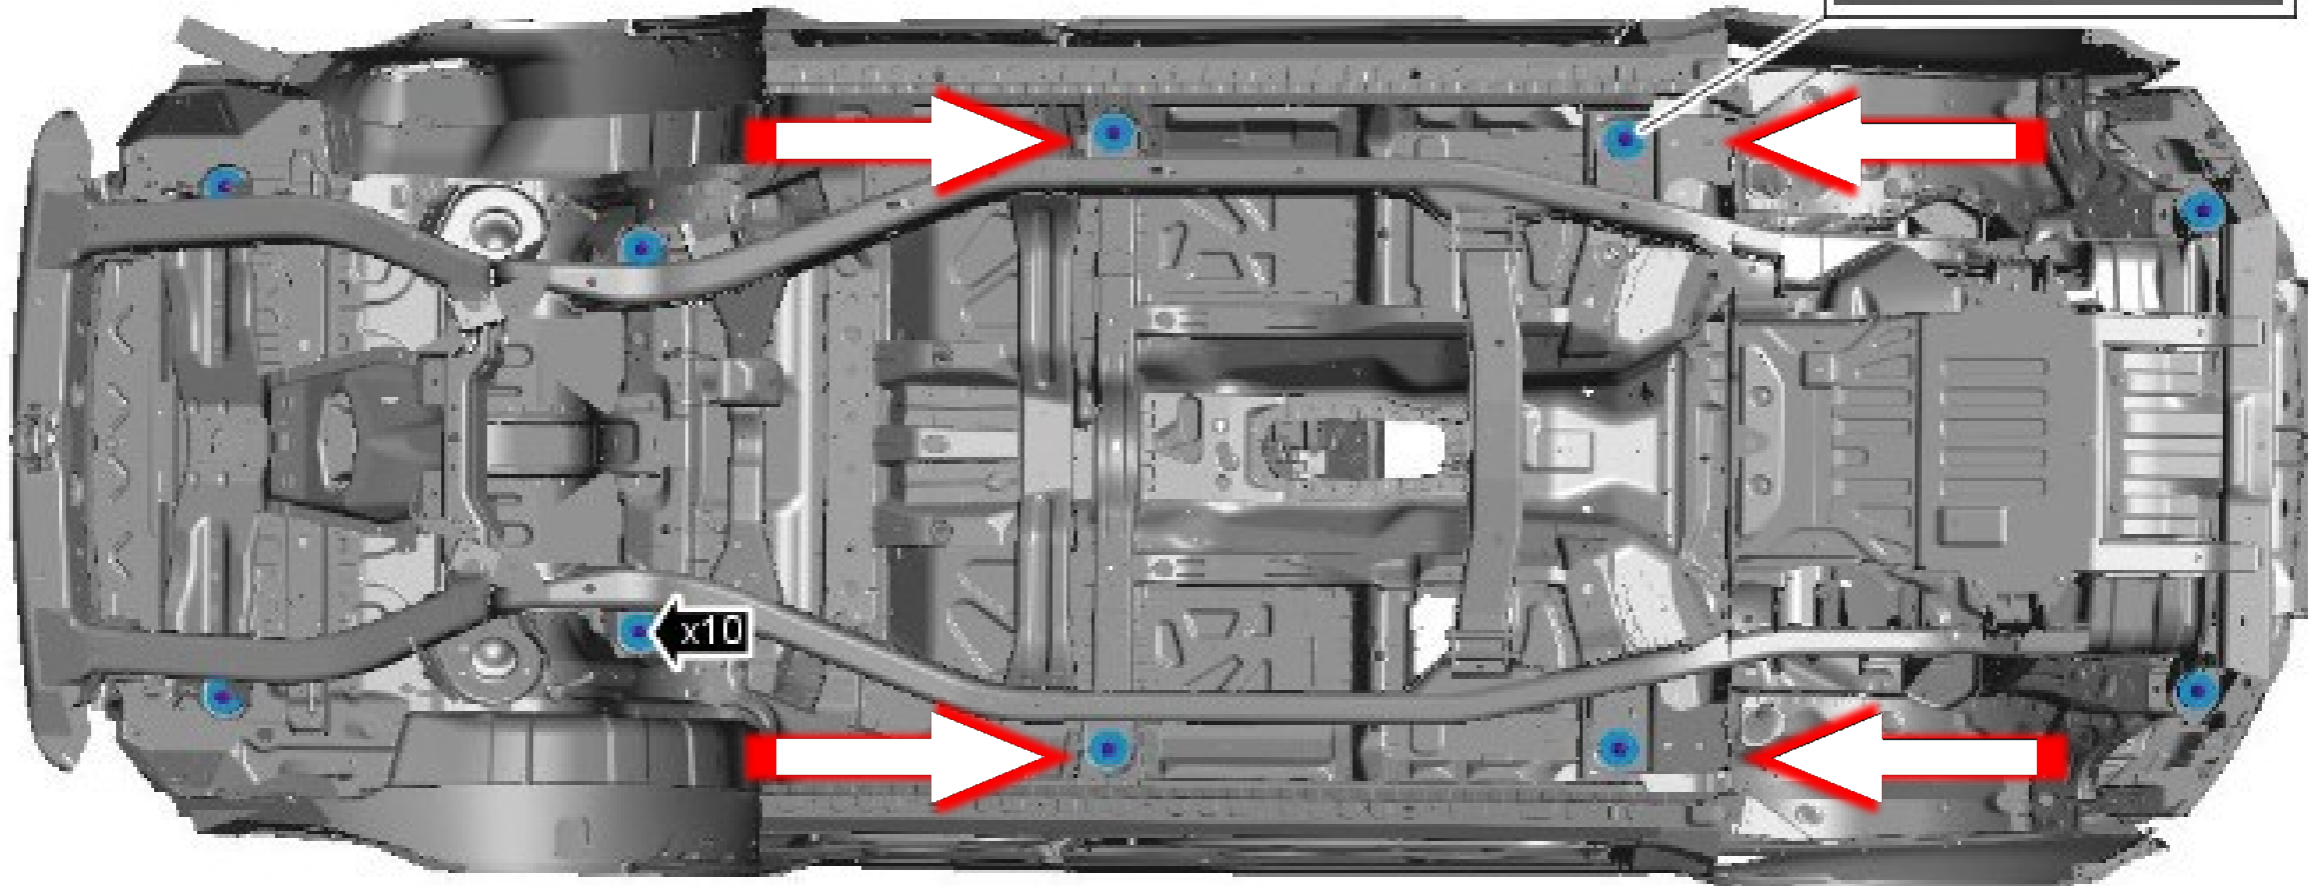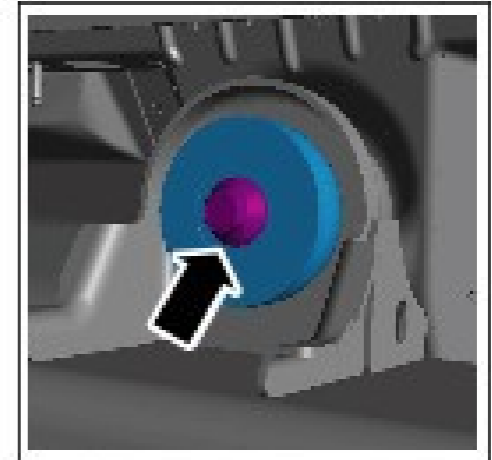

Remove the four (4) body bolts and rubber mount.



Aline the sliders to the two (2) body mounts with the rubber mount on the top. Bolt them to the truck but don't tighten down. They will need to come back off.



With the sliders in place mark the sill plastic for the bolt locations



Cut the plastic sill to allow for the bolt. We use a dremel tool but anything that neatly cuts the plastic will work.



With the plastic out of the way we recommended running a tap through the bolt hole. It's M8 x 1.25





Put the sliders back in place and loosely bolt to the body mounts.



Align and install the sill bolts.



With all the bolts in place, torque the body bolts to 133Nm and the sill bolts to 22Nm.



Job Done!  
Go teach some rocks a lesson!

