


- 3** Finally install the rear suspension arms and tail (in that order) to the rear of the vehicle using the 6mm x 50mm screws and flat washers (included in the package). Tighten the bolt.

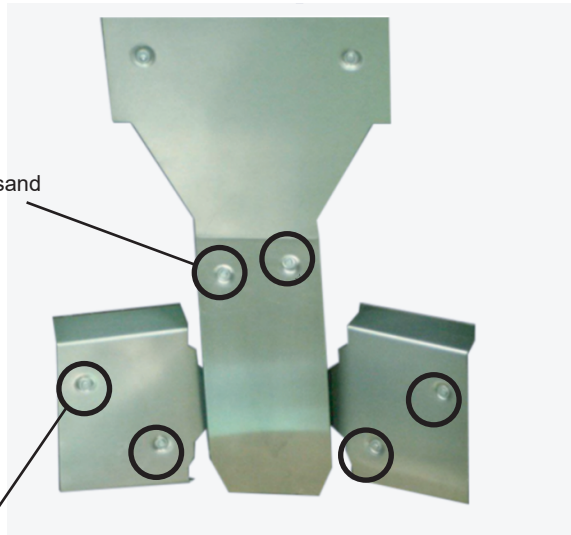

■ 6mm x 50mm screws and flat washer.

■ Hole Position

For technical support , please write us to:
info@afxmotorsports.com or call us at:
Ph. 956-242-6521


HAVE FUN AND A SAFE RIDE!



www.afxmotorsports.com
4610 Modern Lane, Laredo, TX 78041 Ph. 956-242-6521

THIS PRODUCT IS FOR OFF ROAD USE ONLY

ALUMINUM SKID PLATE INSTALLATION MANUAL

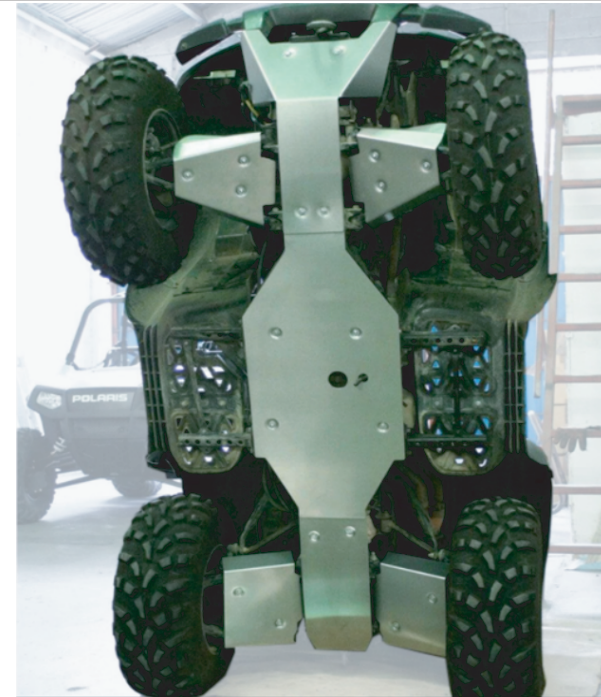

**KAWASAKI BRUTE
FORCE 650I/750**

**SKI002
SKI004**


THANK YOU!

FOR PURCHASING AT AFX MOTORSPORTS




HOW TO INSTALL


Pieces included:

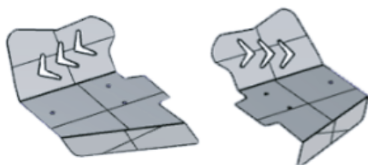

■ (x2) Front suspension arms

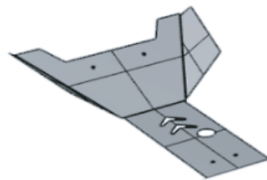


■ (x1) Front

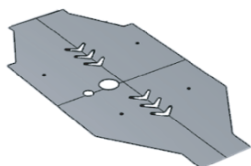

■ (x1) Belly



■ (x1) Tail

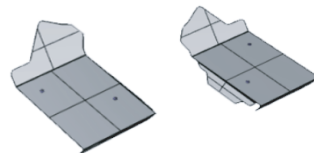

■ (x2) Rear suspension arms

Hardware:

- (24x) 6 x 50 mm Screw
- (24x) Flat Washer

Tools needed (Not Included):

- 3/4" Wrench.
- 7/32" Allen Key.
- 9/16" or 14 mm Combination Wrench.


Liability Statement

AF1 Motorsports products are designed to best fit user's ATV/UTV under stock conditions. Adding, modifying, or fabricating any factory or aftermarket parts will void any warranty provided by AF1 Motorsports and is not recommended. AF1 Motorsports products could interfere with other aftermarket accessories. If user has aftermarket products on machine, contact AF1 Motorsports to verify that they will work together. Although AF1 Motorsports has thousands of satisfied customers, user should be aware that installing bumpers, rock sliders, spare tire carriers, etc. will change the ride of machine and may increase maintenance and part wear. Operating any off-road machine while, or after, consuming alcohol and/or drugs increases risk of bodily harm or death. No warranty or representation is made as to this product's ability to protect user from severe injury or death. AF1 Motorsports urges operators and occupants to wear a helmet and appropriate riding gear at all times. By purchasing and installing AF1 Motorsports products, user agrees that should damages occur, AF1 Motorsports will not be held responsible for loss of time, use, labor fees, replacement parts, or freight charges. AF1 Motorsports, nor any 3rd party, will not be held responsible for any direct, indirect, incidental, special, or consequential damages that result from any product purchased from AF1 Motorsports. The total liability of seller to user for all damages, losses, and causes of action, if any, shall not exceed the total purchase price paid for the product that gave rise to the claim. AF1 Motorsports will warranty only parts provided by AF1 Motorsports. Any damage or problems with OEM housings, bearings, seals, or other manufacturers' products will not be covered by AF1 Motorsports. AF1 Motorsports parts and products are not warrantied if item was not installed properly, misused, or modified.

1

First attach the belly to the vehicle at the selected points with the 6mm x 50mm bolts (which come in the package) do not tighten the bolts yet.

■ Hole Position

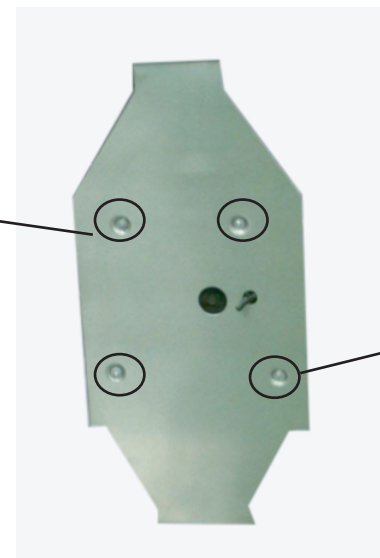

6mm x 50mm screws and flat washer.

2

Then attach the front suspension arms and the front (in that order) to the vehicle with the 6mm x 50mm screws and flat washers (included in the package). Do not tighten screws yet.

■ 6mm x 50mm screws and flat washer.

■ Hole Position

