
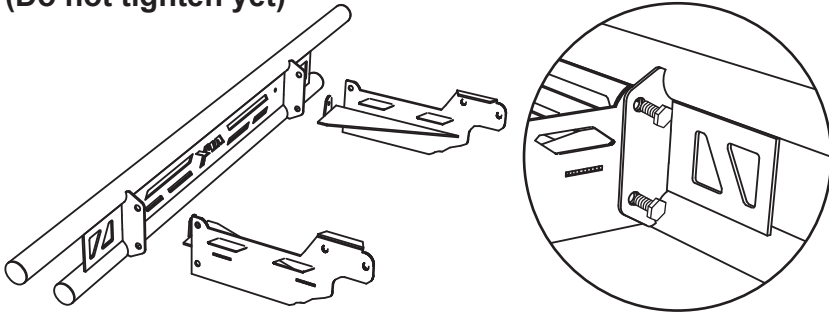


**3**

Attach the rear bumper to the Hardware anchors.  
Use two 3/8" x 1" Screws with lock nuts on each side.  
(Do not tighten yet)

**4**

Use two 1/4" x 1" screw with lock nuts to secure the front of the rear bumper to the hardware anchor.  
Tighten all the screws.

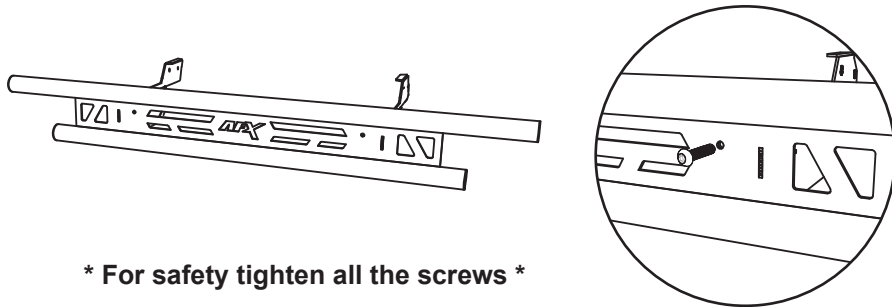

\* For safety tighten all the screws \*

For technical support , please write us to:  
info@afxmotorsports.com or call us at:  
Ph. 956-242-6521

**HAVE FUN AND A SAFE RIDE!**



www.afxmotorsports.com

4610 Modern Lane, Laredo, TX 78041 Ph. 956-242-6521

**THIS PRODUCT IS FOR OFF ROAD USE ONLY**

## REAR BUMPER INSTALLATION MANUAL



**POLARIS RANGER 570 AND 500**

**DEF082**


# THANK YOU!

## FOR PURCHASING AT AFX MOTORSPORTS



## HOW TO INSTALL

Pieces included:

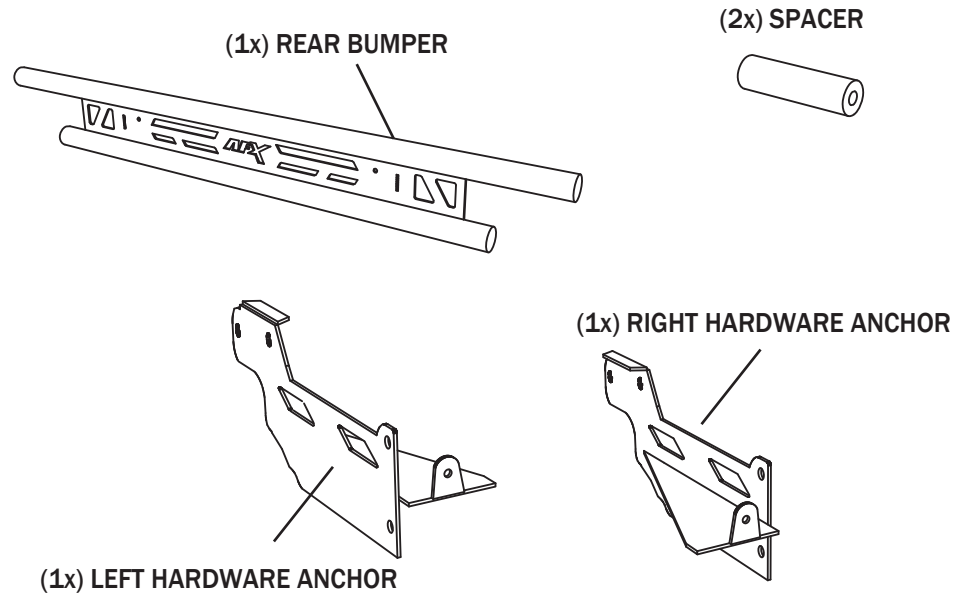

- (2x) 1/4" x 1" screw
- (2x) 1/4" lock nut
- (2x) 3/8" x 3" screw
- (4x) 3/8" x 1" screw
- (6x) 3/8" lock nut

Tools needed (Not Included):

- 5/32" Allen Key
- 15 mm Combination Wrench
- 7/16" Combination Wrench
- 10 mm Combination Wrench

### Liability Statement

AF1 Motorsports products are designed to best fit user's ATV/UTV under stock conditions. Adding, modifying, or fabricating any factory or aftermarket parts will void any warranty provided by AF1 Motorsports and is not recommended. AF1 Motorsports products could interfere with other aftermarket accessories. If user has aftermarket products on machine, contact AF1 Motorsports to verify that they will work together. Although AF1 Motorsports has thousands of satisfied customers, user should be aware that installing bumpers, rock sliders, spare tire carriers, etc. will change the ride of machine and may increase maintenance and part wear. Operating any off-road machine while, or after, consuming alcohol and/or drugs increases risk of bodily harm or death. No warranty or representation is made as to this product's ability to protect user from severe injury or death. AF1 Motorsports urges operators and occupants to wear a helmet and appropriate riding gear at all times. By purchasing and installing AF1 Motorsports products, user agrees that should damages occur, AF1 Motorsports will not be held responsible for loss of time, use, labor fees, replacement parts, or freight charges. AF1 Motorsports, nor any 3rd party, will not be held responsible for any direct, indirect, incidental, special, or consequential damages that result from any product purchased from AF1 Motorsports. The total liability of seller to user for all damages, losses, and causes of action, if any, shall not exceed the total purchase price paid for the product that gave rise to the claim. AF1 Motorsports will warranty only parts provided by AF1 Motorsports. Any damage or problems with OEM housings, bearings, seals, or other manufacturers' products will not be covered by AF1 Motorsports. AF1 Motorsports parts and products are not warrantied if item was not installed properly, misused, or modified.

1

Locate the anchor points at the rear of the vehicle, and remove the screws shown in the image. The bumper will be attached from these points.



2

Place the hardware anchor on the vehicle depending the side. Put a spacer as shown in the picture below. Secure the anchor with a 3/8" x 3" Screw and lock nut, also put the screws of the vehicle (**Do not tighten yet**)

