

4

With someone else's help, align the arms installed at the beginning to hold the grill (as it is shown in the image). Place one 3/8 x 1" screw with nut and tighten all screws.

**5**

Place the base for tire carrier (as it is shown in the image). Using four 3/8 x 1" screws with nut.



For technical support, please write us to:
info@afxmotorsports.com or call us at:
Ph. 956-242-6521

HAVE FUN AND A SAFE RIDE!



www.afxmotorsports.com

4610 Modern Lane, Laredo, TX 78041 Ph. 956-242-6521

THIS PRODUCT IS FOR OFF ROAD USE ONLY

STEEL TIRE CARRIER INSTALLATION MANUAL



**Maverick Sport
2/4 2019-2020**

SKU POR032

THANK YOU!


FOR PURCHASING AT AFX MOTORSPORTS



TIRE CARRIER FOR MAVERICK SPORT

HOW TO INSTALL

Pieces included:

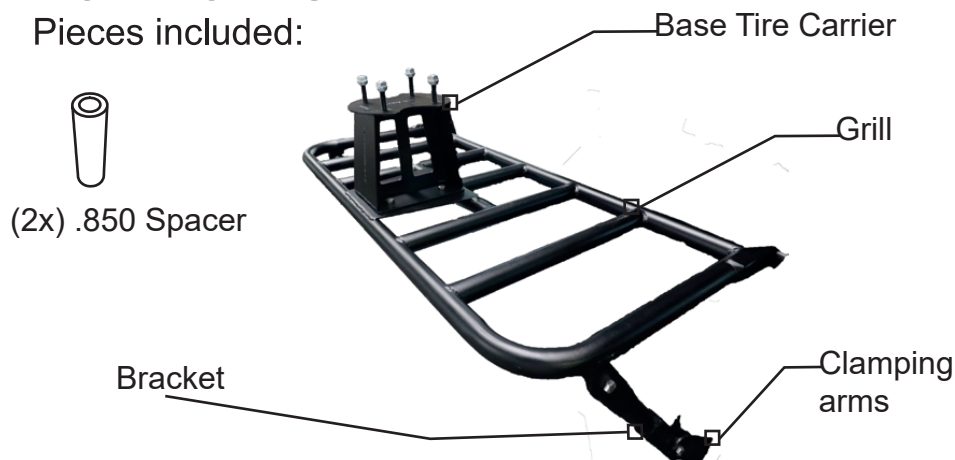

Hardware:

- (4x) 1/4 x 1 1/2" screws and nuts.
- (4x) 3/8 x 1" screws and nuts.
- (2x) 5/16 x 3" screws with washer and nuts.
- (4x) 5/16 x 1" screws with washer and nuts.

Tools needed (Not Included):

- T30 Torx Screwdriver.
- 5/32" Allen Key.
- 7/16" or 14 mm Combination Wrench.


Liability Statement

AFX Motorsports products are designed to best fit user's ATV/UTV under stock conditions. Adding, modifying, or fabricating any factory or aftermarket parts will void any warranty provided by AFX Motorsports and is not recommended. AFX Motorsports products could interfere with other aftermarket accessories. If user has aftermarket products on machine, contact AFX Motorsports to verify that they will work together. Although AFX Motorsports has thousands of satisfied customers, user should be aware that installing bumpers, rock sliders, spare tire carriers, etc. will change the ride of machine and may increase maintenance and part wear. Operating any off-road machine while, or after, consuming alcohol and/or drugs increases risk of bodily harm or death. No warranty or representation is made as to this product's ability to protect user from severe injury or death. AFX Motorsports urges operators and occupants to wear a helmet and appropriate riding gear at all times. By purchasing and installing AFX Motorsports products, user agrees that should damages occur, AFX Motorsports will not be held responsible for loss of time, use, labor fees, replacement parts, or freight charges. AFX Motorsports, nor any 3rd party, will not be held responsible for any direct, indirect, incidental, special, or consequential damages that result from any product purchased from AFX Motorsports. The total liability of seller to user for all damages, losses, and causes of action, if any, shall not exceed the total purchase price paid for the product that gave rise to the claim. AFX Motorsports will warranty only parts provided by AFX Motorsports. Any damage or problems with OEM housings, bearings, seals, or other manufacturers' products will not be covered by AFX Motorsports. AFX Motorsports parts and products are not warrantied if item was not installed properly, misused, or modified.

1

Set the clamping yourself with the tube (as it is shown in the image). Use two 1/4 x 1 1/2" screws with washer and nut (do not tighten yet).

1/4 x 1 1/2" crews

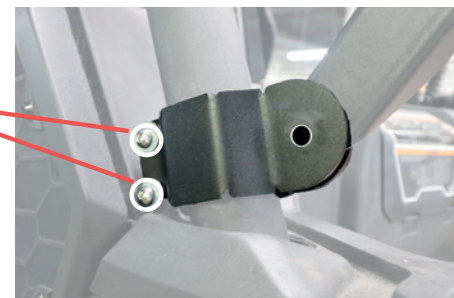

2

Place the bracket on the clamping arms (as it is shown in the image). Use one 3/8 x 1" screws with nut. (do not tighten yet). Repeat step #1 and step #2 on the other side.



1/4 x 1 1/2" crews

2

With someone else's help, place the grill starting from the driver's side, place one 5/16 x 3" screw with .850 spacer with nut (as it is shown in the image) (do not tighten yet) (repeat this step on the passenger's side).

5/16 x 3" screw

.850 spacer

