

- 4** Finally, put the last rivets on the remaining holes of the bottom part of the RockSlider.
- 5** Repeat this steps for the RockSlider of the other side of the Vehicle.
- 6** Thighten the bolts remaining and enjoy your ride!

For technical support , please write us to:
info@afxmotorsports.com or call us at:
Ph. 956-242-6521

HAVE FUN AND A SAFE RIDE!



www.afxmotorsports.com

4610 Modern Lane, Laredo, TX 78041 Ph. 956-242-6521

THIS PRODUCT IS FOR OFF ROAD USE ONLY

ALUMINIUM ROCKSLIDERS INSTALLATION MANUAL



CAN AM MAVERICK 2 SEATER

1/8" - 3/16" INCH THICKNESS

SKI064-A

THANK YOU!


FOR PURCHASING AT AFX MOTORSPORTS



KIT OF ALUMINIUM ROCKSLIDERS FOR CAN AM MAVERICK 2 SEATS 2013-2016

HOW TO MAKE THE INSTALLATION

Pieces included:

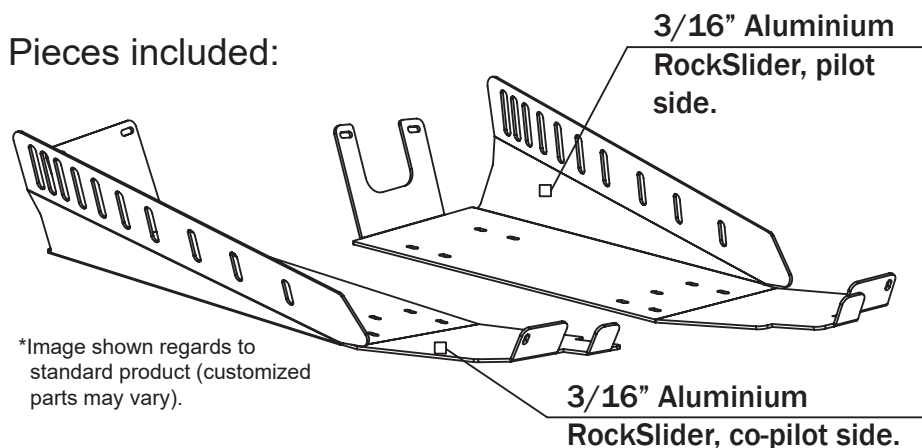

Hardware:

- (18x) 3/16" x 1/2" Rivets.
- (18x) 3/16" Flat washer.
- (2x) 6mm x 30mm screws.

Tools needed (Not Included):

- T-40 Torx Screwdriver.
- Rivet Tool.

Liability Statement

AFX Motorsports products are designed to best fit user's ATV/UTV under stock conditions. Adding, modifying, or fabricating any factory or aftermarket parts will void any warranty provided by AFX Motorsports and is not recommended. AFX Motorsports products could interfere with other aftermarket accessories. If user has aftermarket products on machine, contact AFX Motorsports to verify that they will work together. Although AFX Motorsports has thousands of satisfied customers, user should be aware that installing bumpers, rock sliders, spare tire carriers, etc. will change the ride of machine and may increase maintenance and part wear. Operating any off-road machine while, or after, consuming alcohol and/or drugs increases risk of bodily harm or death. No warranty or representation is made as to this product's ability to protect user from severe injury or death. AFX Motorsports urges operators and occupants to wear a helmet and appropriate riding gear at all times. By purchasing and installing AFX Motorsports products, user agrees that should damages occur, AFX Motorsports will not be held responsible for loss of time, use, labor fees, replacement parts, or freight charges. AFX Motorsports, nor any 3rd party, will not be held responsible for any direct, indirect, incidental, special, or consequential damages that result from any product purchased from AFX Motorsports. The total liability of seller to user for all damages, losses, and causes of action, if any, shall not exceed the total purchase price paid for the product that gave rise to the claim. AFX Motorsports will warranty only parts provided by AFX Motorsports. Any damage or problems with OEM housings, bearings, seals, or other manufacturers' products will not be covered by AFX Motorsports. AFX Motorsports parts and products are not warranted if item was not installed properly, misused, or modified.


1

Remove the screws from the rear and front part of the side plastic protectors of your Can Am Maverick. For this step, use a T-40 Torx Screwdriver. Keep the screws and remove the side plastic protectors of your vehicle.

2

Set the Aluminium RockSlider (Pilot or Co-pilot's side) in the vehicle, and fasten it using the original screws and holes of the side plastic protectors. It is recommended that you place the bolts on the rear part of the Aluminium RockSlider and then the front; Do not tight them yet.


Fasten the rear part first

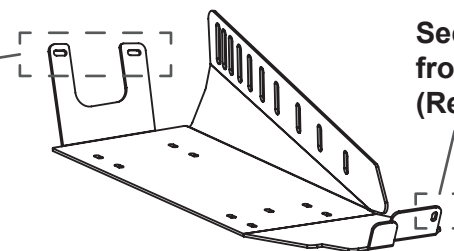

Secondly, the front part. (Recommended).

3

Using a riveting tool, place the rivets on the bottom part of the RockSlider in the holes provided. Use a washer for each rivet (Included). Recommended: First place the 2 rivets of the front holes, (Fig. 1), and then, place 2 rivets on the rear holes (Fig. 2). This will help to have an easier installation on the remaining rivets.

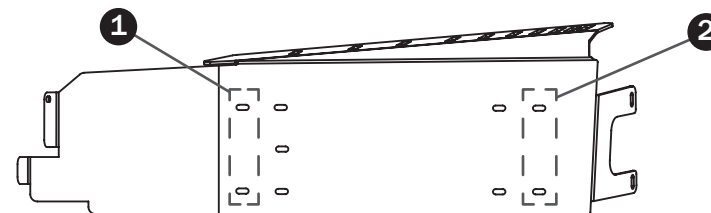

Bottom View, Drivers side.