



- 3** Then join the front to the bottom of the vehicle and the belly with the 1/4" x 1" Self drilling screws and the 1/4" x 1" Special washers (which come in the package) and finally the 1/4" x 1" Screws with nut and washer (also included in the package). As shown in the image

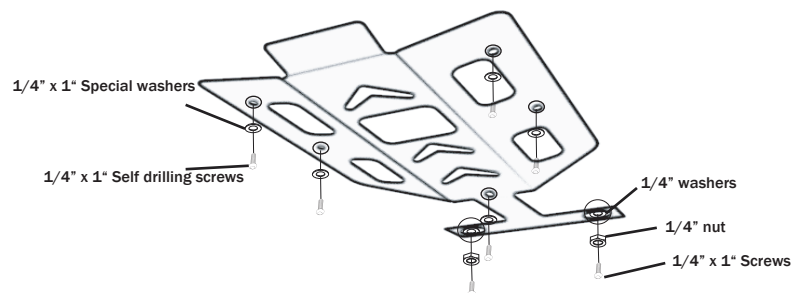

- 4** Finally attach the tail to the bottom of the vehicle with the 1/4" x 1" Self drilling screws and the 1/4" x 1" Special washers (included in the package) as shown in the image.

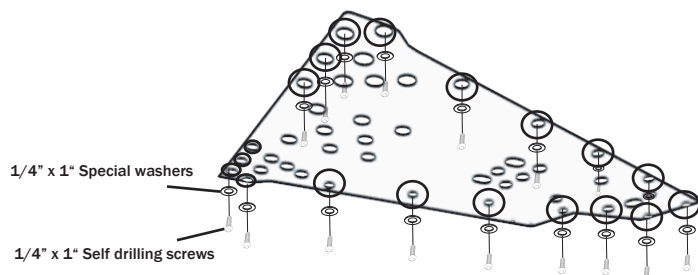

Now you have completed the installation.

For technical support , please write us to:
info@afxmotorsports.com or call us at:
Ph. 956-242-6521

HAVE FUN AND A SAFE RIDE!



www.afxmotorsports.com
4610 Modern Lane, Laredo, TX 78041 Ph. 956-242-6521

THIS PRODUCT IS FOR OFF ROAD USE ONLY

ALUMINUM SKID PLATE INSTALLATION MANUAL



**CAN AM X3 2 SEATER
2017-2021**

SKI102

THANK YOU!


FOR PURCHASING AT AFX MOTORSPORTS



FRONTAL RACK FOR CANAM MAVERICK X3

HOW TO INSTALL

Pieces included:

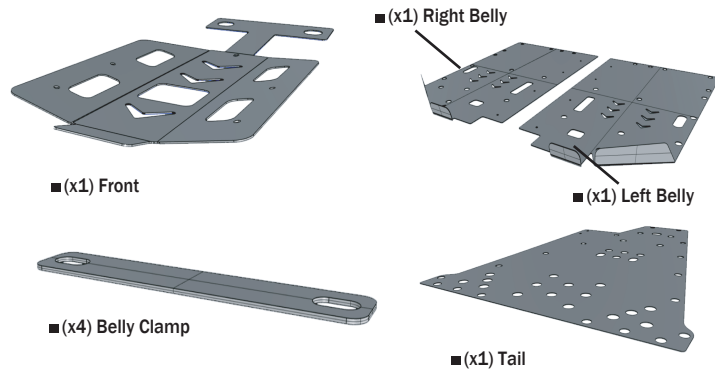

Hardware:

- (52x) 1/4" x 1" Self drilling screws
- (52x) 1/4" x 1" Special washers
- (10x) 1/4" x 1" Screws with nut and washer.
- (1x) 5/16" x 3" Screws with nut.

Tools needed (Not Included):

- 7/32" Allen Key
- 9/16" or 14mm Combination Wrench

TIP: Install the Bolts Finger tight at first until all hardware has been installed.

Liability Statement

AF1 Motorsports products are designed to best fit user's ATV/UTV under stock conditions. Adding, modifying, or fabricating any factory or aftermarket parts will void any warranty provided by AF1 Motorsports and is not recommended. AF1 Motorsports products could interfere with other aftermarket accessories. If user has aftermarket products on machine, contact AF1 Motorsports to verify that they will work together. Although AF1 Motorsports has thousands of satisfied customers, user should be aware that installing bumpers, rock sliders, spare tire carriers, etc. will change the ride of machine and may increase maintenance and part wear. Operating any off-road machine while, or after, consuming alcohol and/or drugs increases risk of bodily harm or death. No warranty or representation is made as to this product's ability to protect user from severe injury or death. AF1 Motorsports urges operators and occupants to wear a helmet and appropriate riding gear at all times. By purchasing and installing AF1 Motorsports products, user agrees that should damages occur, AF1 Motorsports will not be held responsible for loss of time, use, labor fees, replacement parts, or freight charges. AF1 Motorsports, nor any 3rd party, will not be held responsible for any direct, indirect, incidental, special, or consequential damages that result from any product purchased from AF1 Motorsports. The total liability of seller to user for all damages, losses, and causes of action, if any, shall not exceed the total purchase price paid for the product that gave rise to the claim. AF1 Motorsports will warranty only parts provided by AF1 Motorsports. Any damage or problems with OEM housings, bearings, seals, or other manufacturers' products will not be covered by AF1 Motorsports. AF1 Motorsports parts and products are not warrantied if item was not installed properly, misused, or modified.

1

Join both bellies by placing the belly clamps in the middle of both and screw them with the 1/4" x 1" Screws with nut and washer (which come in the package) as shown in the image 1.

2

After joining both sides of the bellies, screw them to the underside of the vehicle with the 1/4" x 1" Self drilling screws and 1/4" x 1" Special washers, as shown in image 2.

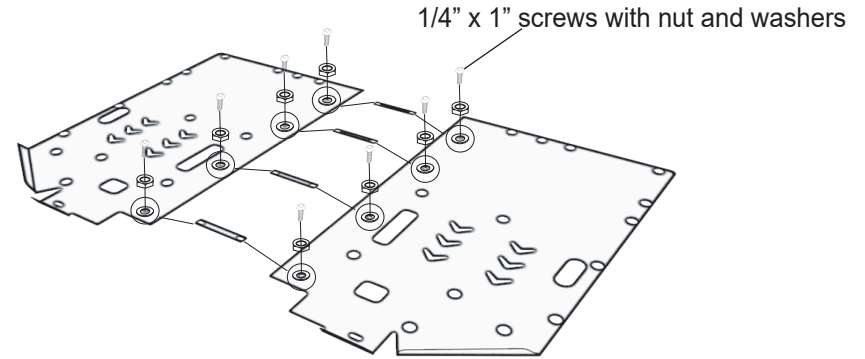


Image 1. Union of pieces with belly clamps

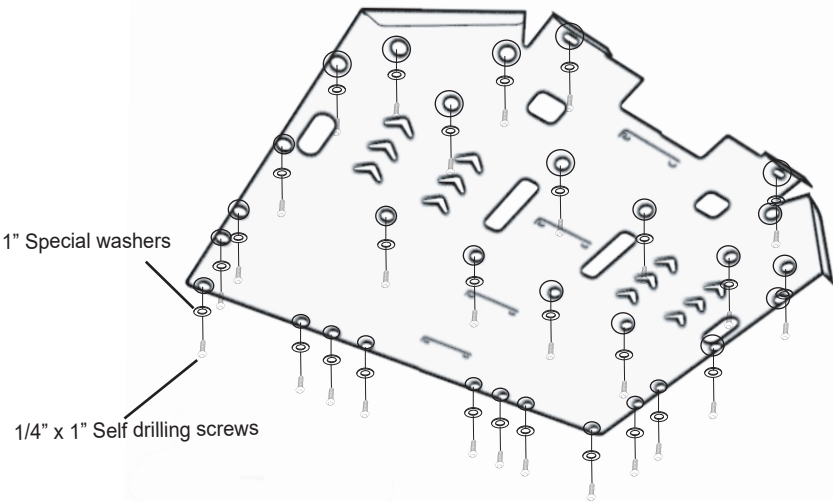


Image 2. Union of pieces with belly clamps