

- 5** Place the upper side of the roof adjusting it in order for it to match with the holes at the rear, place the 3 1/4 x 1" screws that are included. (Do not tighten yet)



- 6** Next, the front side must be placed fitting it to the front drillings and aligning them up to the central holes. Place the 1/4 x 1" screws with flat washer and 1 1/2" spacer that are provided in the installation kit.



- (1) 1/4 x 1" screw
- (1) 1/4" washer
- (1) 1 1/2" Spacer

- 7** Tighten all the screws to finish with the installation.

HAVE FUN AND A SAFE RIDE!




www.afxmotorsports.com

4610 Modern Lane, Laredo, TX 78041 Ph. 956-242-6521

THIS PRODUCT IS FOR OFF ROAD USE ONLY

ALUMINUM ROOF INSTALLATION MANUAL

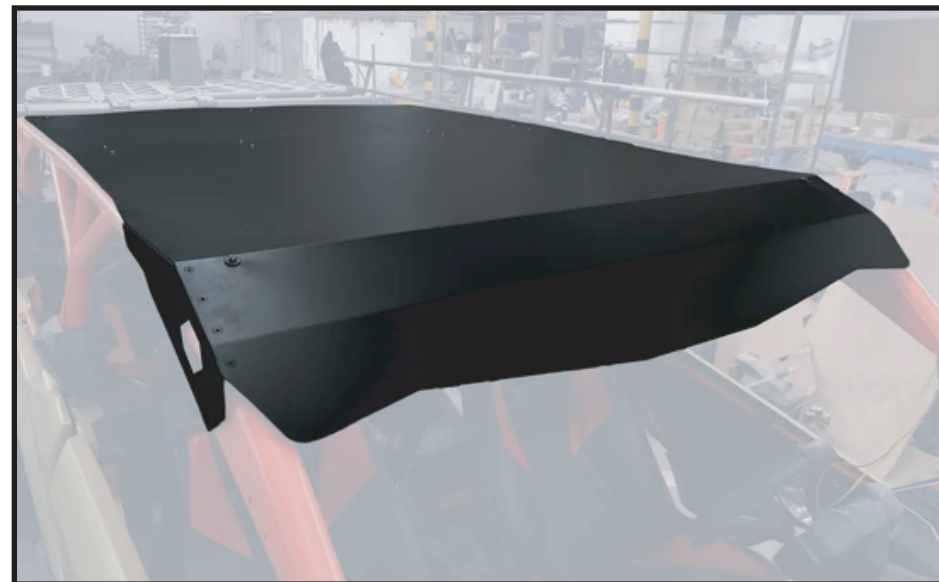

CAN AM X3 MAX

SKU TEC034-L
SKU TEC034-D

THANK YOU!


FOR PURCHASING AT AFX MOTORSPORTS



ALUMINUM ROOF FOR CAN AM X3 2 SEATER

HOW TO INSTALL

Pieces included:

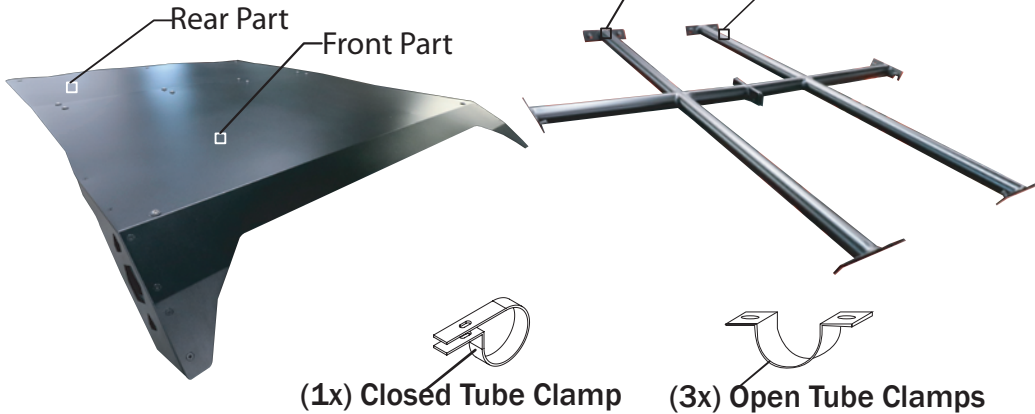

- (9x) 1/4" x 1" Bolts with washers and nuts.
- (2x) 1/4" x 2 1/2" Bolts with washers and nuts.
- (2x) 1 1/2" Spacers.
- (1x) 1/2" Anti-rattling Strip.

Tools needed (Not Included):

- 3/4" Wrench.

TIP: Install the hardware Finger tight at first until all hardware has been installed.

Liability Statement


AFX Motorsports products are designed to best fit user's ATV/UTV under stock conditions. Adding, modifying, or fabricating any factory or aftermarket parts will void any warranty provided by AFX Motorsports and is not recommended. AFX Motorsports products could interfere with other aftermarket accessories. If user has aftermarket products on machine, contact AFX Motorsports to verify that they will work together. Although AFX Motorsports has thousands of satisfied customers, user should be aware that installing bumpers, rock sliders, spare tire carriers, etc. will change the ride of machine and may increase maintenance and part wear. Operating any off-road machine while, or after, consuming alcohol and/or drugs increases risk of bodily harm or death. No warranty or representation is made as to this product's ability to protect user from severe injury or death. AFX Motorsports urges operators and occupants to wear a helmet and appropriate riding gear at all times. By purchasing and installing AFX Motorsports products, user agrees that should damages occur, AFX Motorsports will not be held responsible for loss of time, use, labor fees, replacement parts, or freight charges. AFX Motorsports, nor any 3rd party, will not be held responsible for any direct, indirect, incidental, special, or consequential damages that result from any product purchased from AFX Motorsports. The total liability of seller to user for all damages, losses, and causes of action, if any, shall not exceed the total purchase price paid for the product that gave rise to the claim. AFX Motorsports will warranty only parts provided by AFX Motorsports. Any damage or problems with OEM housings, bearings, seals, or other manufacturers' products will not be covered by AFX Motorsports. AFX Motorsports parts and products are not warranted if item was not installed properly, misused, or modified.

1

In case of having the OEM Plastic Roof: Uninstall the original plastic roof of the vehicle, removing the screws located on the rear and front part of the roof.

2

With an 3/4" wrench, the 12 nuts located at the rollcage must be removed (Located at the image shown below)

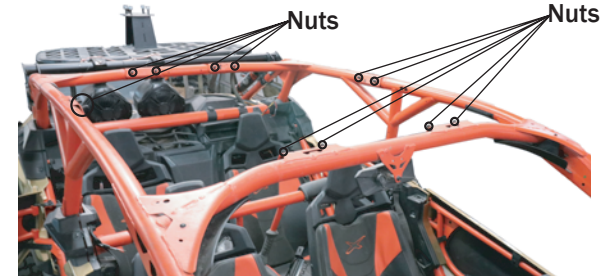

3

The passenger's side structure must be placed first, the central part of the "H" must fit in the screws that are shown in the image below. Repeat this step in the driver's side.



4

Once the structure is overlaid, 2 screws must be placed in the center of the structure to hold both parts. Tight all the nuts to the OEM specifications.

