

# BYOB161

16' Portable Player Bench With Back



Customer Service  
(800) 247-7668

## PARTS LIST

Item	Qty	Description	Item	Qty	Description
A	3	Leg Assembly	F	18	3/8" Lock Washer
B	12	3/8-16 x 4" Carriage Bolt	G	12	Plastic Tube Plug
C	6	3/8-16 x 1 1/2" Hex Bolt	H	6	Rubber Feet
D	18	3/8" Hex Nut	I	2	2" X 10" X 16' Wooden Plank (provided by customer)
E	6	3/8" Flat Washer			

- ♦ Inspect all contents prior to installation. Report any missing parts to dealer immediately.
- ♦ Read all instructions before proceeding.

### Recommended:

Sand and finish customer supplied wood planks to reduce sharp edges, splinters and extend life.

1. Attach the *Rubber Feet* (H) to the *Leg Assemblies* (A) with 3/8" x 1 1/2" *Hex Bolts* (C), 3/8" *Flat Washers* (E), 3/8" *Lock Washers* (F) and 3/8" *Hex Nuts* (D). See Figure 1
2. Insert the *Plastic Tube Plugs* (G) in all open tube ends on the *Leg Assemblies* (A). See Figure 1.

### Notice:

For best results this player bench should be assembled on a flat and level surface.

3. Position *Leg Assemblies* (A) 76" apart. Clamp one 2" X 10" X 16' *Wooden Plank* (I) to the seat portion of *Leg Assemblies* (A) with approximately 20" extending from each end of *Leg Assembly* (A). Make sure the *Leg Assemblies* (A) are perpendicular to the 2" X 10" X 16' *Wooden Plank* (I). Clamp the second 2" X 10" X 16' *Wooden Plank* (I) to the back rest area of the *Leg Assemblies* (A) with approximately 20" extending from each end. See Figure 2.

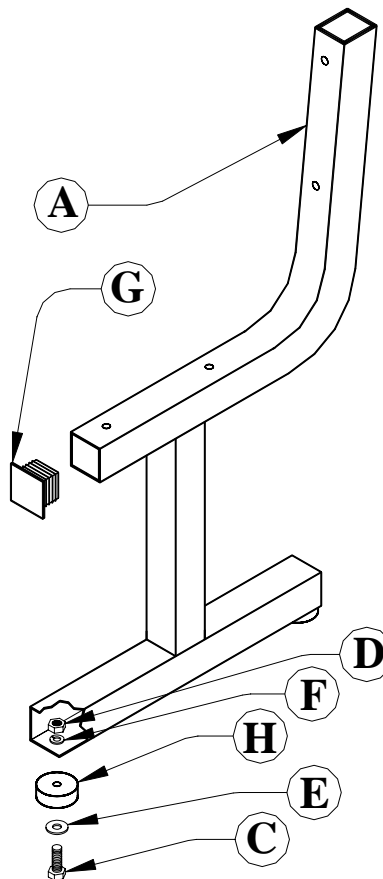


Figure 1

4. Using the mounting holes in the *Leg Assembly* (A) as a guide to drill through the 2" X 10" X 16' *Wooden Plank* (I) with a 3/8" drill bit. Use the 3/8" X 4" *Carriage Bolts* (B), 3/8" *Lock Washer* (F) and 3/8" *Hex Nuts* (D) to secure the 2" X 10" X 16' *Wooden Plank* (I) to the *Leg Assemblies* (A). See Figure 2.

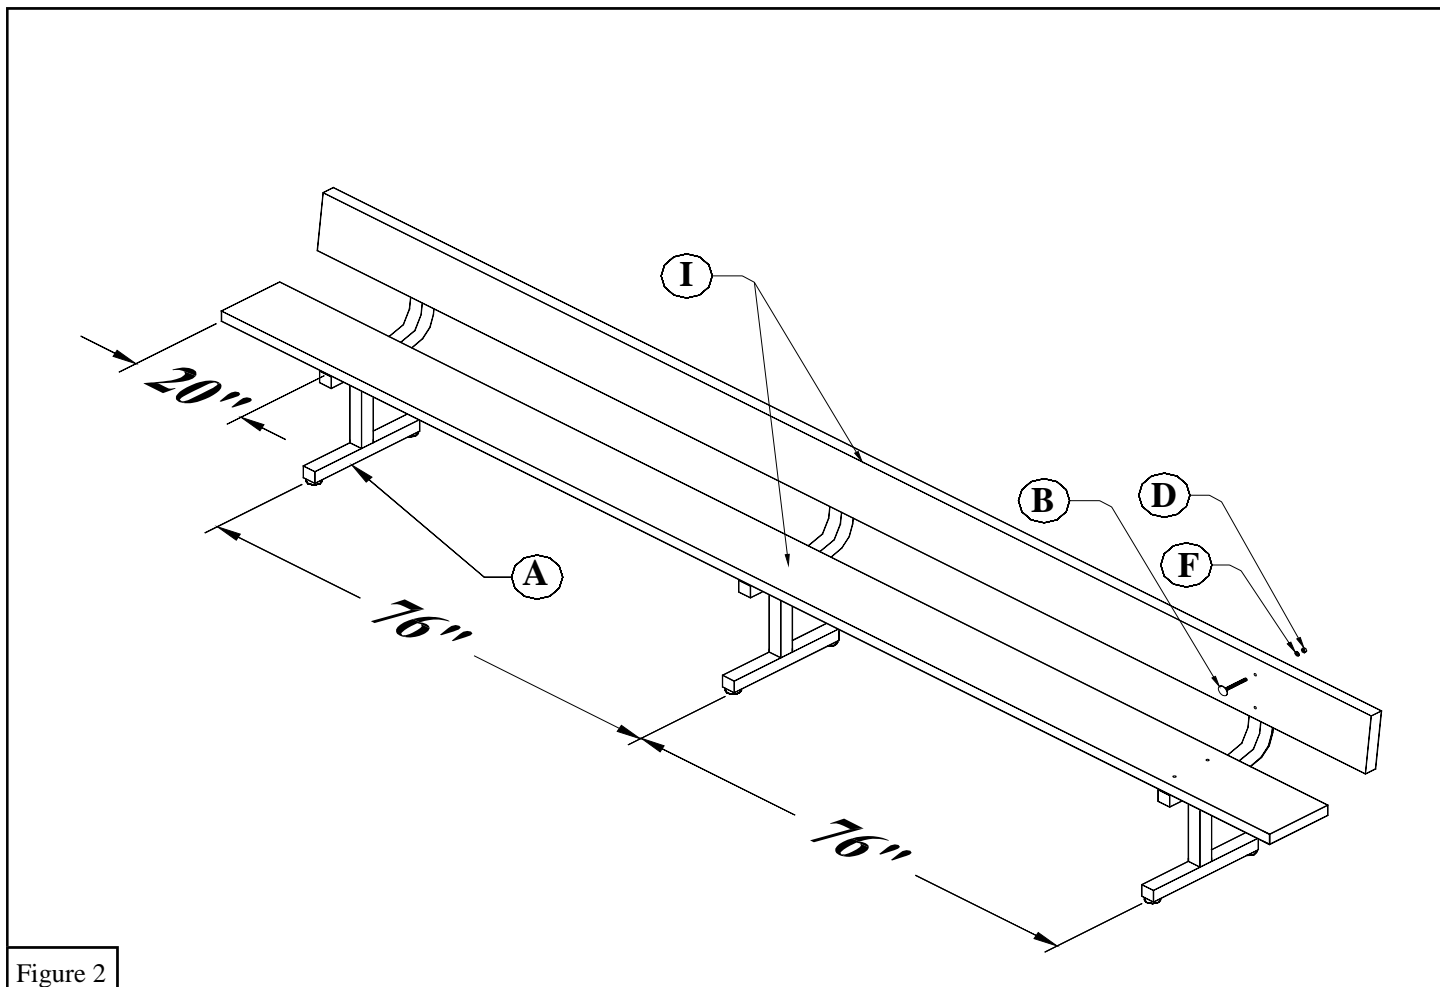


Figure 2