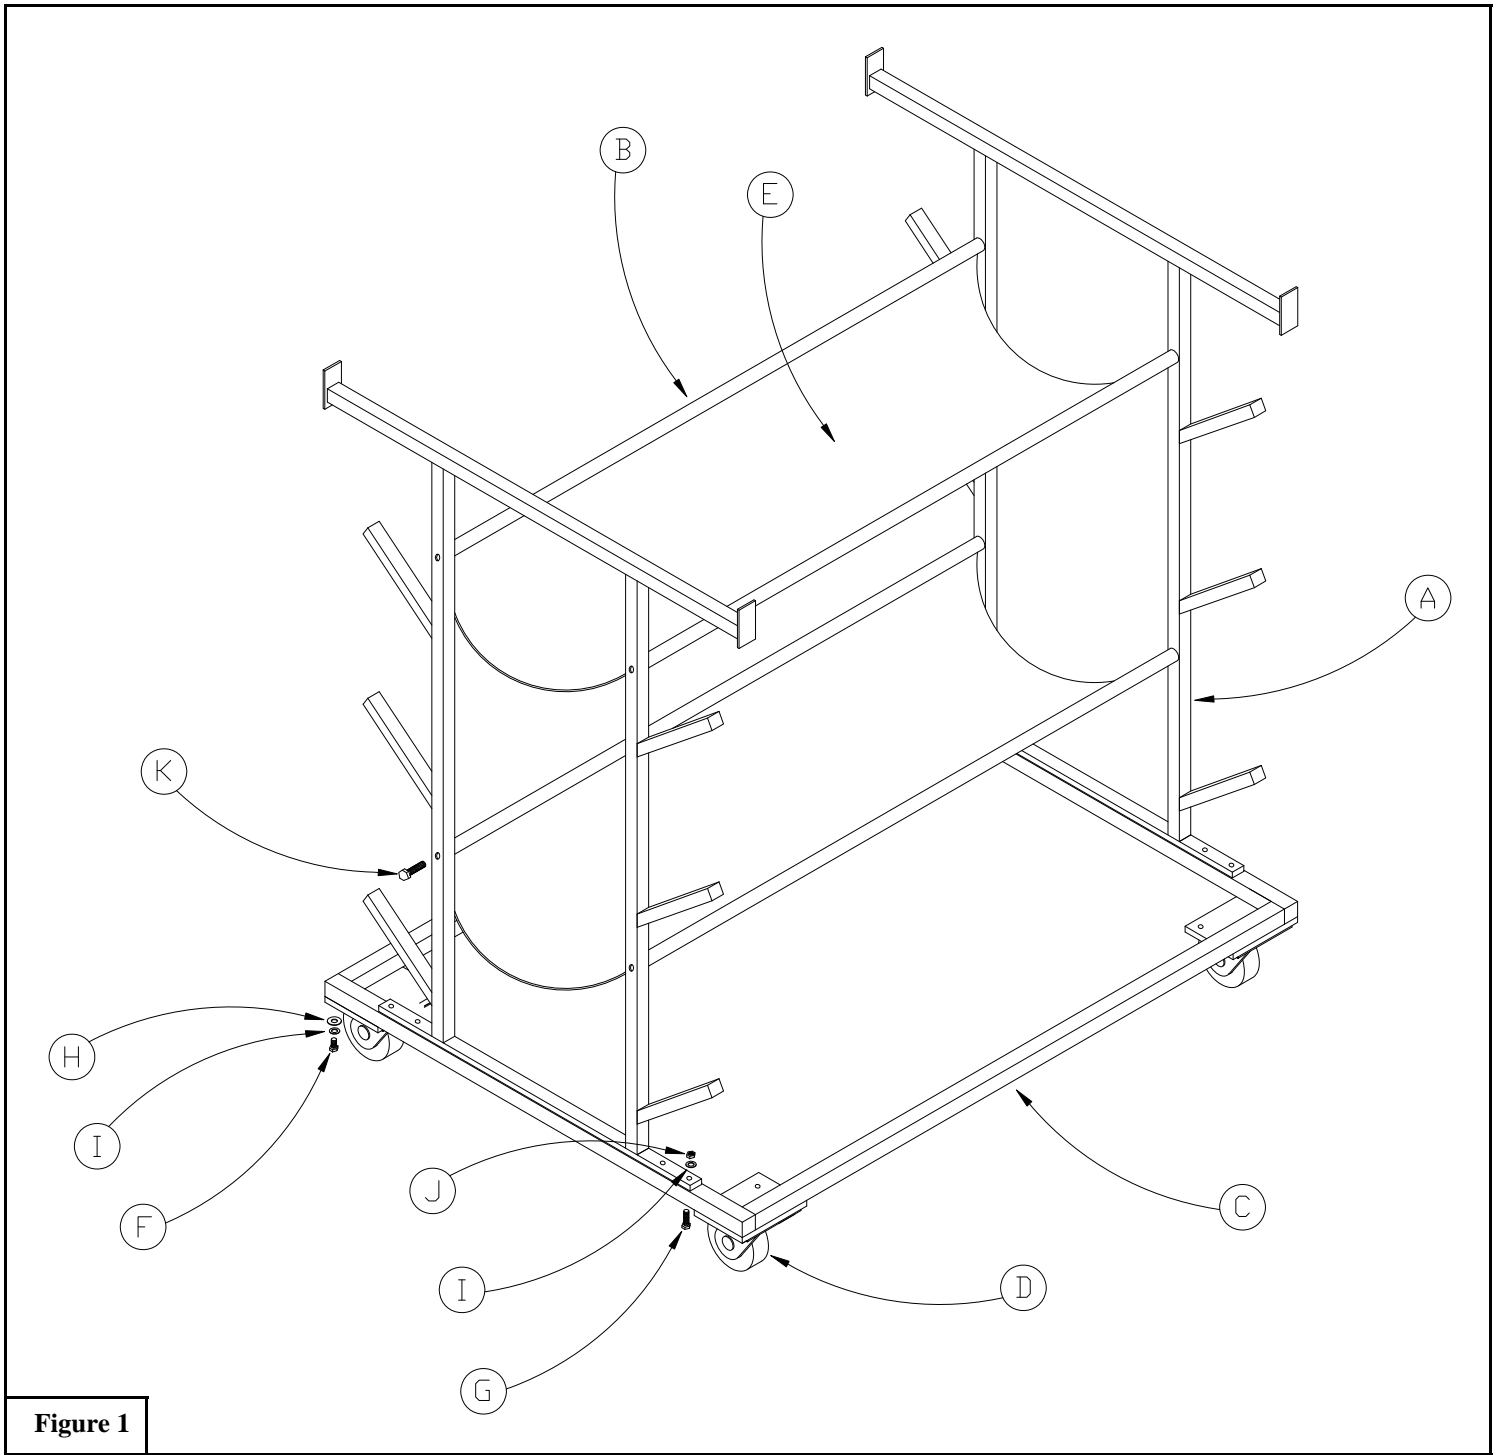


# VB96

## Six Post Deluxe Volleyball Cart

PARTS LIST					
Item	Qty	Description	Item	Qty	Description
A	2	Cart Side	G	8	3/8 x 2" Hex Bolt
B	4	Horizontal Tube	H	16	3/8" Flat Washer
C	1	Cart base	I	24	3/8" Lock Washer
D	4	Caster	J	8	3/8 Hex Nut
E	2	Black Vinyl Hammock	K	8	1/2 x 2" Hex Bolt
F	16	3/8 x 3/4" Hex Bolt			

- ◆ Inspect all contents prior to installation. Report any missing parts to dealer immediately.
  - ◆ Read all instructions before proceeding.
1. Attach the four *Casters* (D) to the *Cart Base* (C) using *3/8-16 x 3/4" Hex Bolts* (F), *3/8" Flat Washer* (H) and *3/8" Lock Washer* (I). Set the assembly aside. See Figure 1.
  2. Attach the *Horizontal Tubes* (B) to one of the *Cart Sides* (A) using the *1/2 x 2" Hex Bolts* (K).
  3. With all of the *Horizontal Tubes* (B) attached to one of the *Cart Sides* (A) slide the *Black Vinyl Hammocks* (E) over the *Horizontal Tubes* (B). The *Black Vinyl Hammocks* (E) should drape down to hold your nets, ect. See Figure 1.
  4. Attach the remaining *Cart Side* (A) to the other end of the *Horizontal Tubes* (B) using the remaining *1/2 x 2" Hex Bolts* (K). See Figure 1.
  5. Place the *Cart Side* (A), *Horizontal Tube* (B), and *Black Vinyl Hammock* (E) assembly on the *Cart Base* (C) and attach using *3/8 x 2" Hex Bolts* (G), *3/8" Lock Washers* (I) and *3/8 Hex Nuts* (J). See Figure 1.



**Figure 1**