## **Extension Carbon Patten (No paint needed)**

## **Assembly guide**

Note: Sport model need to remove oem aero side skirt in order to fit.

1.- Remove the package. Take out the side skirt extension.





2.- Hardware come with one roll of double side tapes, one roll of glossy red vinyl strip and a bag of screws. Next install the red vinyl sticker on the side skirt extension. Note: Clean the area first



3. – Before assembly the side skirt on the car. Clean side skirt inside tape area with alcohol and clean out any dust or oil on the car.


4.- Install the double sided tapes on the side skirt inside area first.

5.- On the rear of the Side skirt extension it require double the layer of the tapes. Cut two strip out and tape over on the strip.



6.- Install the front of the side skirt extension on the car first. Make sure no gap with extension and oem side skirt. Remove the double side tapes then push it toward the oem side skirt. While pushing in use a self tapping screw and a washer, screw it throught the gold bracket in from the bottom to

secure it from falling down.

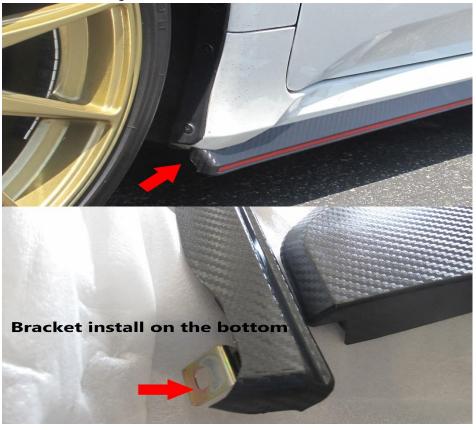

- 7. –Then remove the double side tape toward the rear of the car. Press firmly
- 8.- After remove all the tapes the rear of the side skirt extension will need to secure with two screws.



9.- Now we are moving down to the bottom of the side skirt extension. We need to secure four tapes on the bottom with the supply screws.



10. When all tapes were screw in then you are done with the installation on the Type-r Side Extension on one side. Use the same steps on the other side skirt.

Enjoy the FK8 Type-r Style Side skirt extension. Stay tune for more FK item on our website. www.absdynamics.com