

## **Assembly guide**

Note: Rear Diffuser only fit on all hatch back model bumper.

1.- First rear bumper need to remove off the car. Remove following screw and hex bolts on each side.



2.- Remove the clips on the bottom of the bumper.



3. – Take the diffuser out of the package. There should be one big diffuser and one small piece in the package.



4.- Remove the stock rear diffuser off the bumper. You need to remove two small screws that attach the upper piece to the rear diffuser, two push in clips. And finally need to pry out all the push taps away from the bumper. Then the diffuser will come off.





5.- Next step is to put the Type-r diffuser and the upper piece together but do not screw it together until install on the bumper.

Now put the diffuser on the bumper. Insert the upper piece taps into the bumper exactly like how the oe lip goes.



6.- Reuse the stock screws for the two holes that attach the upper piece to the bumper.



7. – Now tight the lower diffuser with the upper piece together with the supply gold small screws.

Reuse the stock screws for the two holes that attach the upper piece to the bumper.



8.- Line up the side edge of the diffuser to the bumper. Then drill two holes by using the stock bumper as guide. You can either reuse the stock push in taps or use our supply bolts and nuts to secure it. Both can be use.



Figure 1 RIGTH SIDE


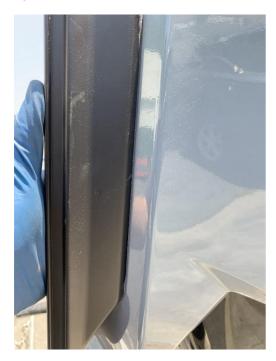


Figure 2LEFT SIDE





9.- Next close the gap between the bumper and the lip on the middle section. Use the supply gold screws to screw in the same direction as our arrow show in the picture top to bottom. By doing this hold the both together then start screw in from one side to the other. .

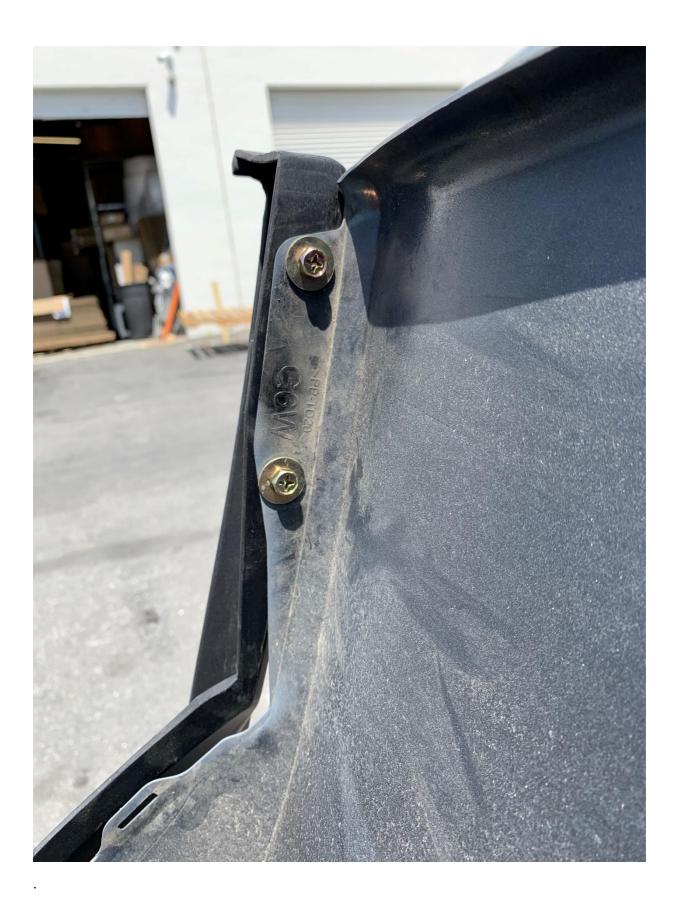

10. Install the two straight side brackets on the lip. Make sure you use the correct bracket on each side. Measure the length from the edge down. Place the bracket then drill the holes. Install the brackets on with gold bolts, washer and nuts.









11. Last install the center bracket on the bumper. Align the bracket on the lip then drill holes. Insert the bolts, washer and nuts. Attach the bracket on the bottom of the car with factory push in clips.







Enjoy the FK7 Type-r Style Rear Diffuser Stay tune for more FK item on our website. www.absdynamics.com