



2017-2018 Honda Civic 5DR TYPE-R Spoiler

Assembly guide

Note: Type-r spoiler require re-drill holes on trunk.

1.- Spoiler take it out from the package.



2.- Screws, bolts, Hex screws and (4mm Hex key, and Philip screw driver needed not Included.)



3. – Look for R and L letters on the brackets and caps, put them together before assembly.



4.- Align the bracket with the side blade, use the 3pcs silver screws on each side. Do the same on Right and Left side.



5.- Use 2pcs of the gold screws to secure the side blade bracket with the center blade. (Do not over tight the bolts)



6.- At the end use the Hex screws secure the cap cover over the bottom of the bracket.



7. -Assemble the wing together with legs with 2pcs gold screws. Do the same on both side. Make sure everything is line up.



8.- Finish assembly the spoiler together. Ready to install the spoiler using the last 4pcs gold screws.



9.- Spoiler leg template.

10. Before install the spoiler on the trunk. Remove all trunk plastic panel first.




11. There are two bolts need to remove under the handle. Do the same on each side. Then the whole panel should come off with just clips.



12.

Locate the position of the spoiler holes need to be drill. We suggest use a small drill bit to drill first. Then place the template of the hole to align the position.

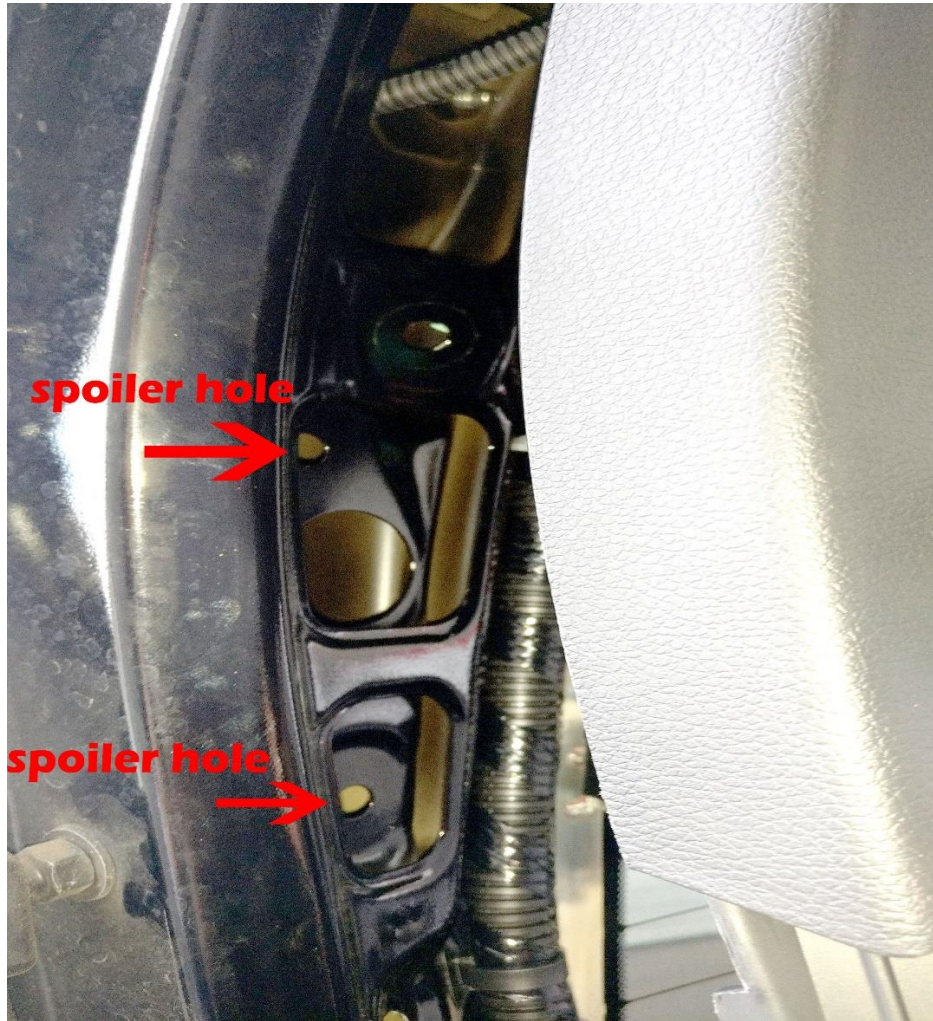

13. After the holes done. You are ready to bolt the spoiler on we suggest a helper needed.

Note:(Double side tape suggested on the bottom of the base or silicone glue. Do not over tight the bolt use finger tight first then use 10mm hex driver to help tight it a little.) Too much force will strip the nuts off from the spoiler.

Using the silver or gold color long bolts to install. Use one hand insert the bolt through the big circle. The other hand use a Philip screw drive screw the bolt into the holes. We suggest take it to the body shop do it for you.

14. We attach a template of the spoiler holes. Please print it as Fill page to get correct size of the template. After print out compare it with the bottom of the bracket see it is matching before drilling.

We do sell silicone glue if needed.

We are not responsible for any incorrect drilling happen.

Enjoy the Real FK8 REP Spoiler.

Stay tune for more FK item on our website.

www.absdynamics.com