
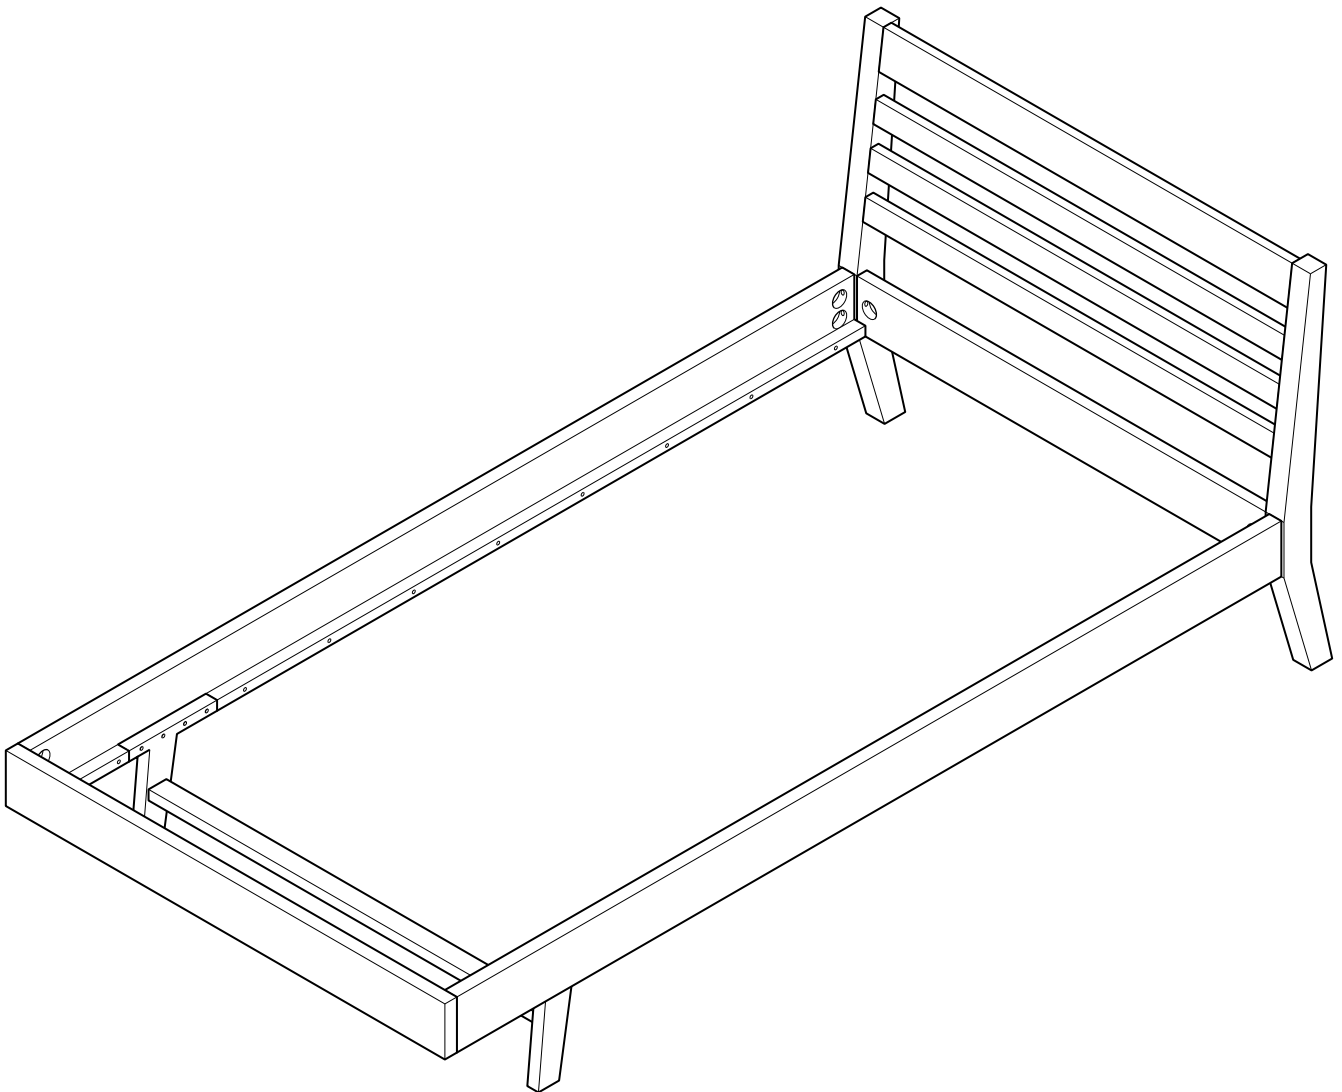



 KROK WOOD

MARY




BETTRAHMEN
MONTAGEANWEISUNG

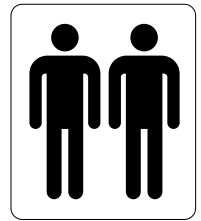

PLAN


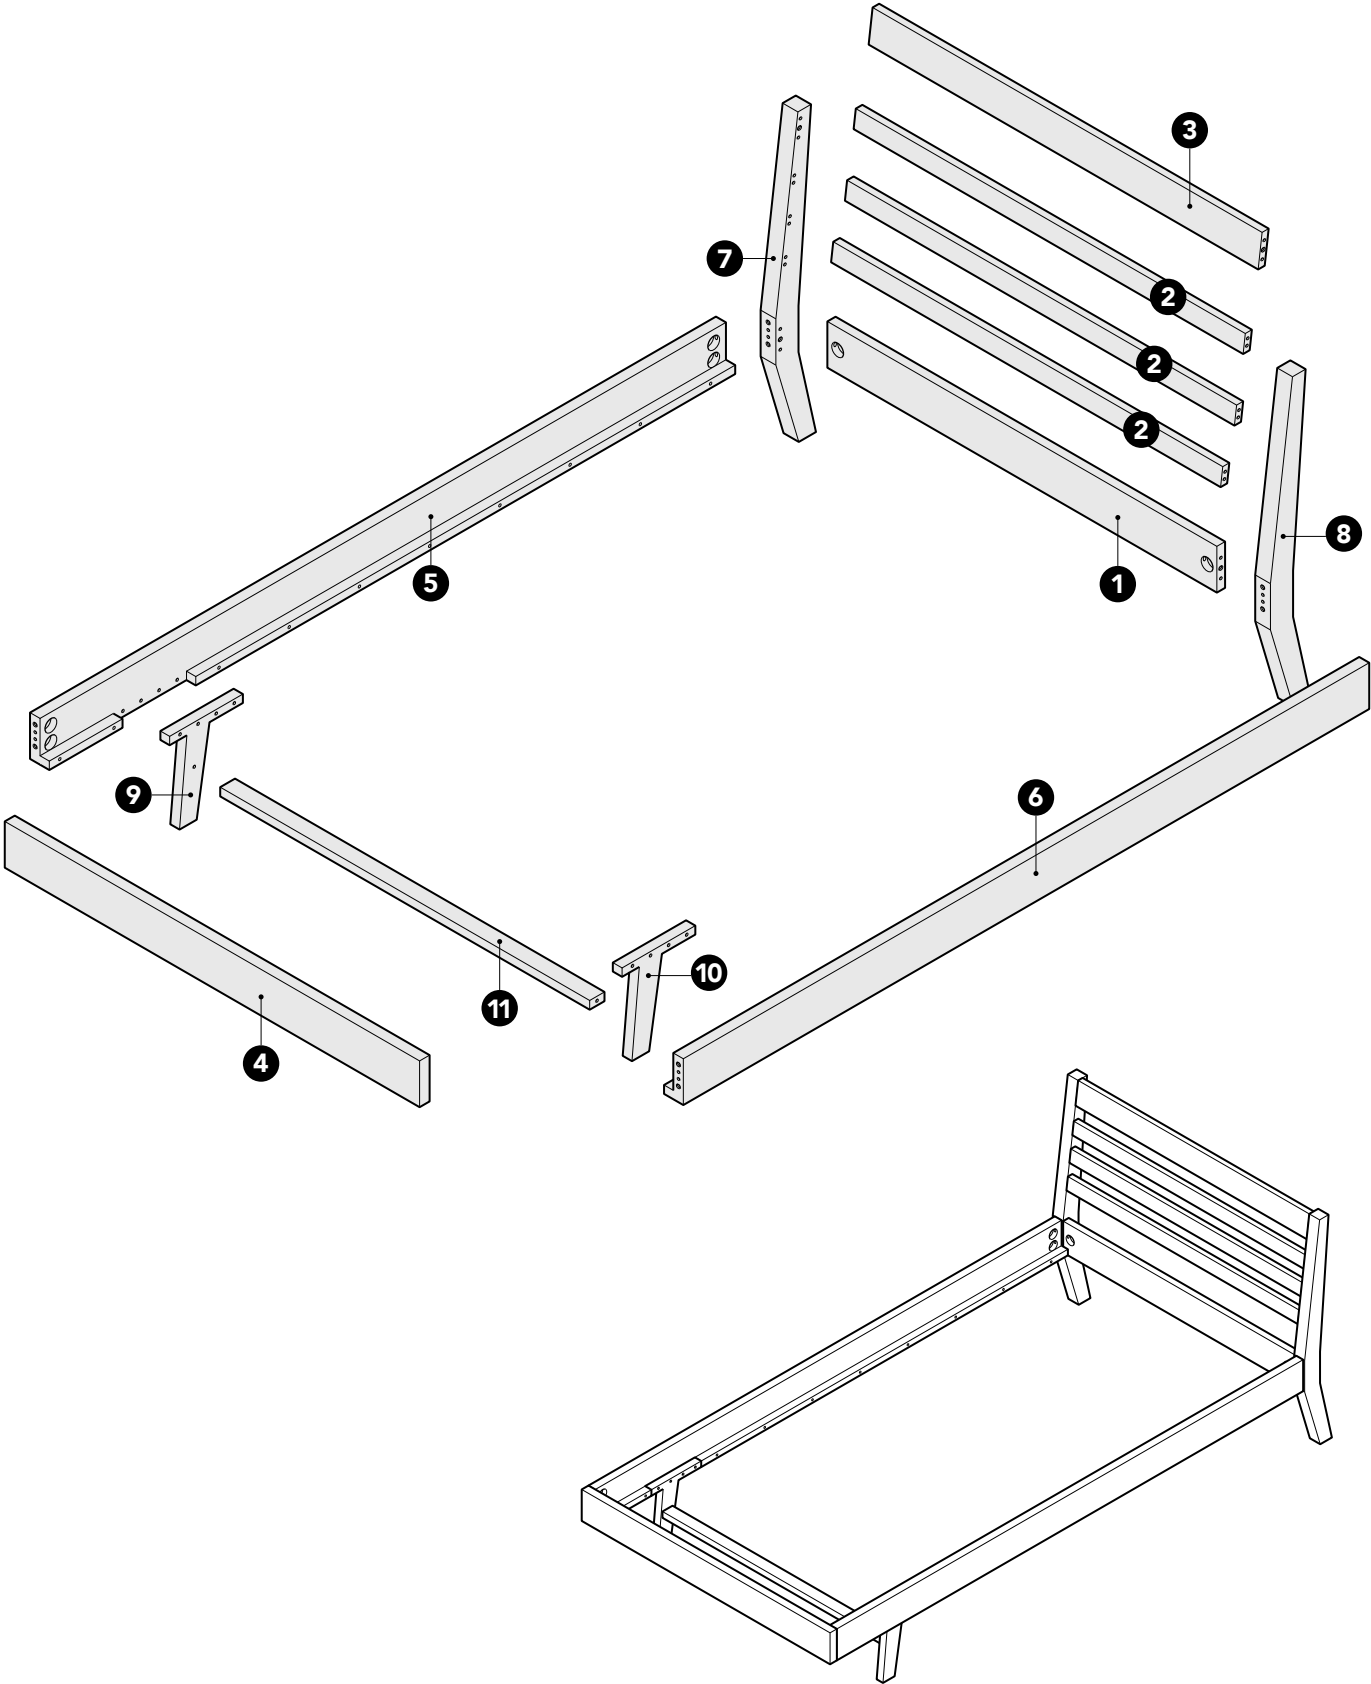


ENTHALTEN

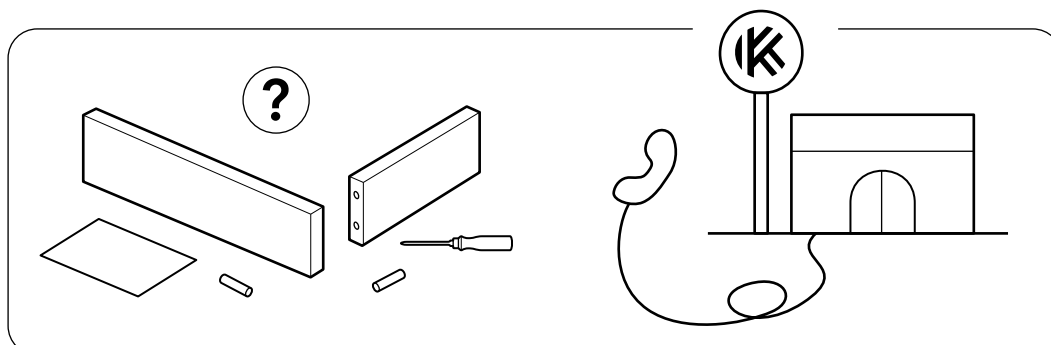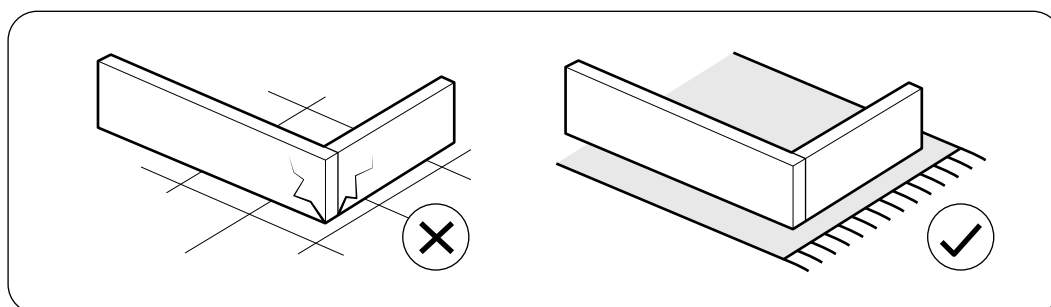
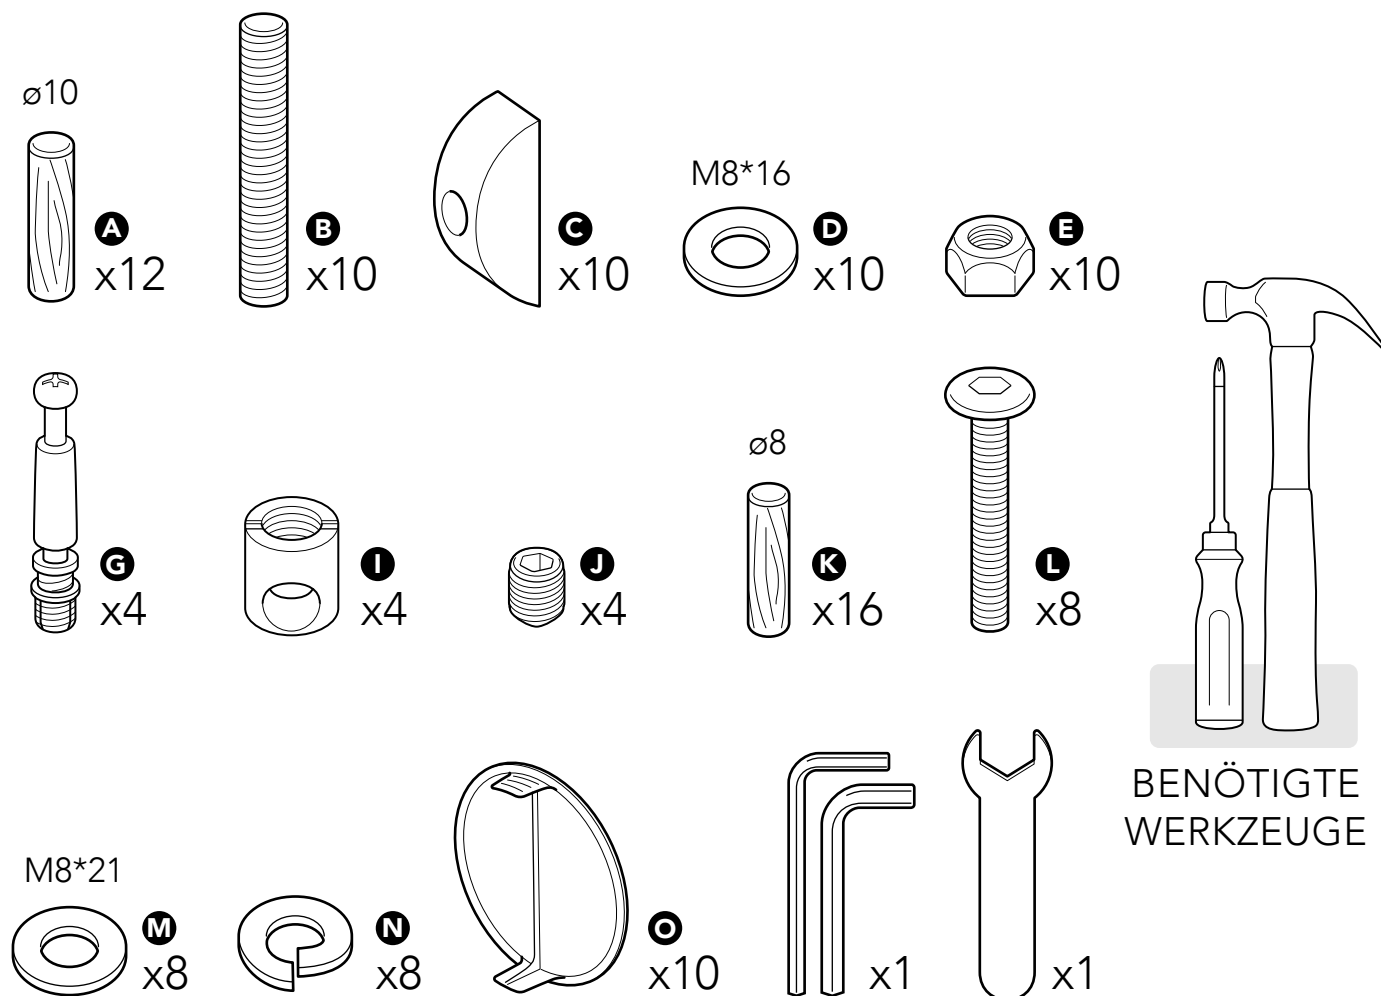


MONTAGE


1

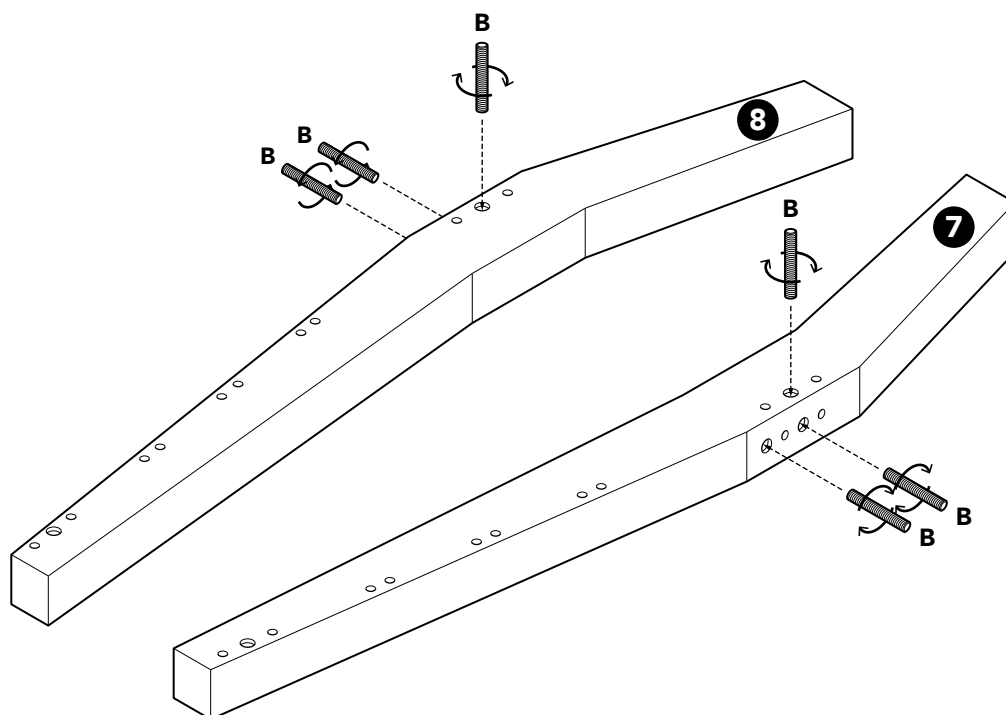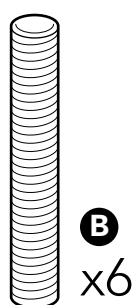


2

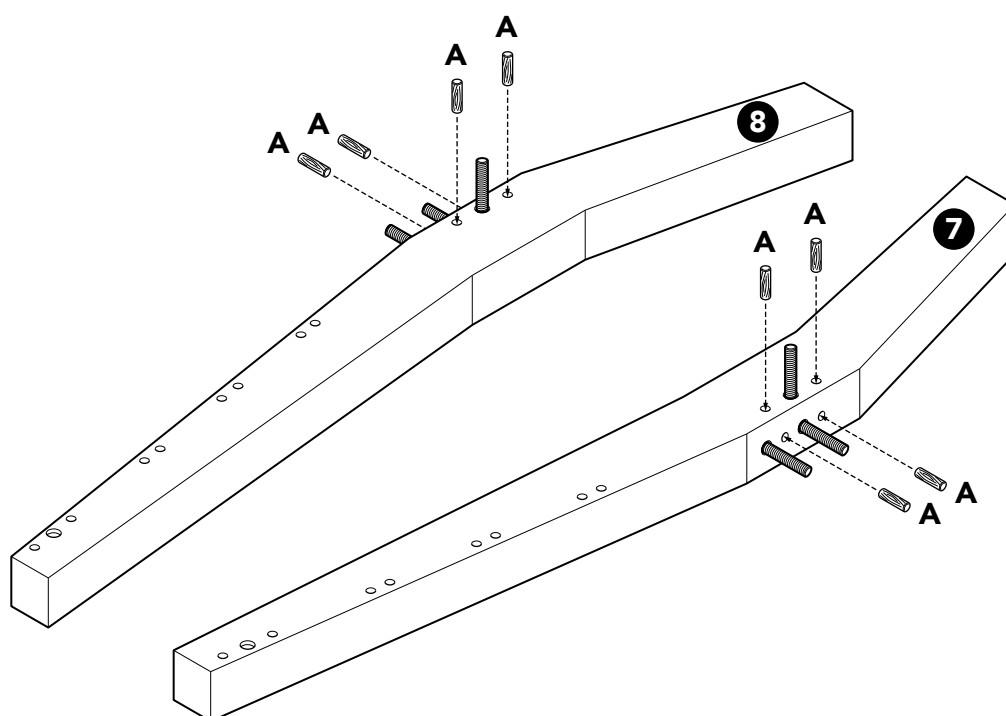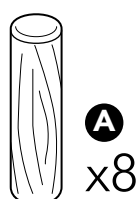



3

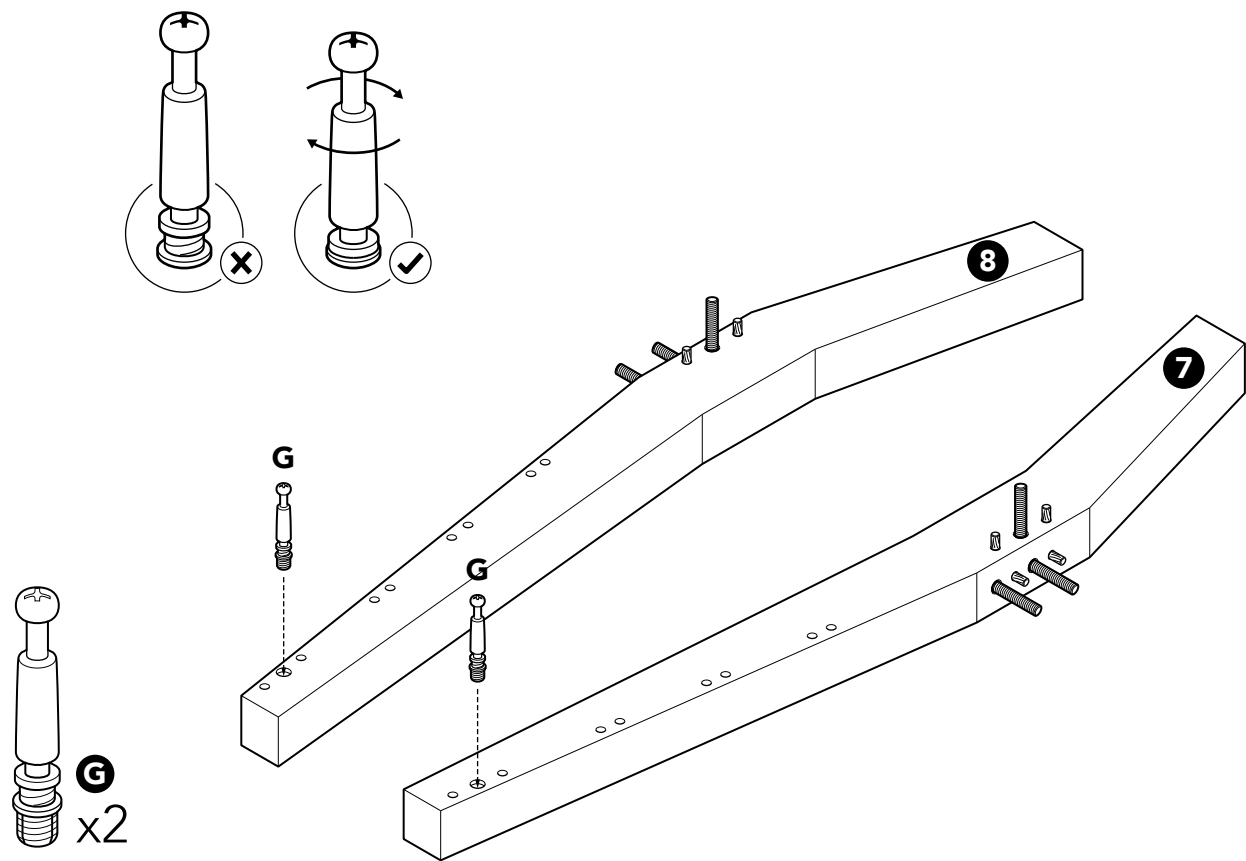


4

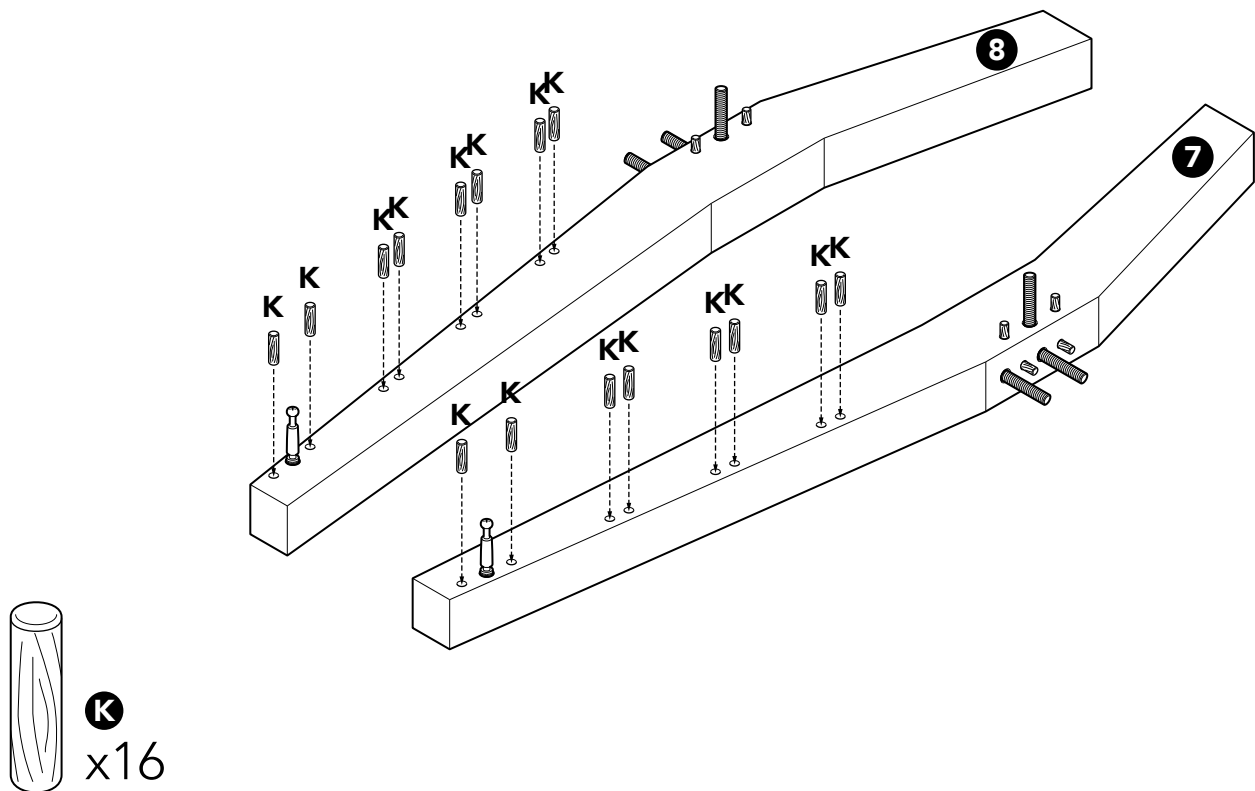


5

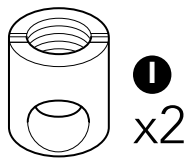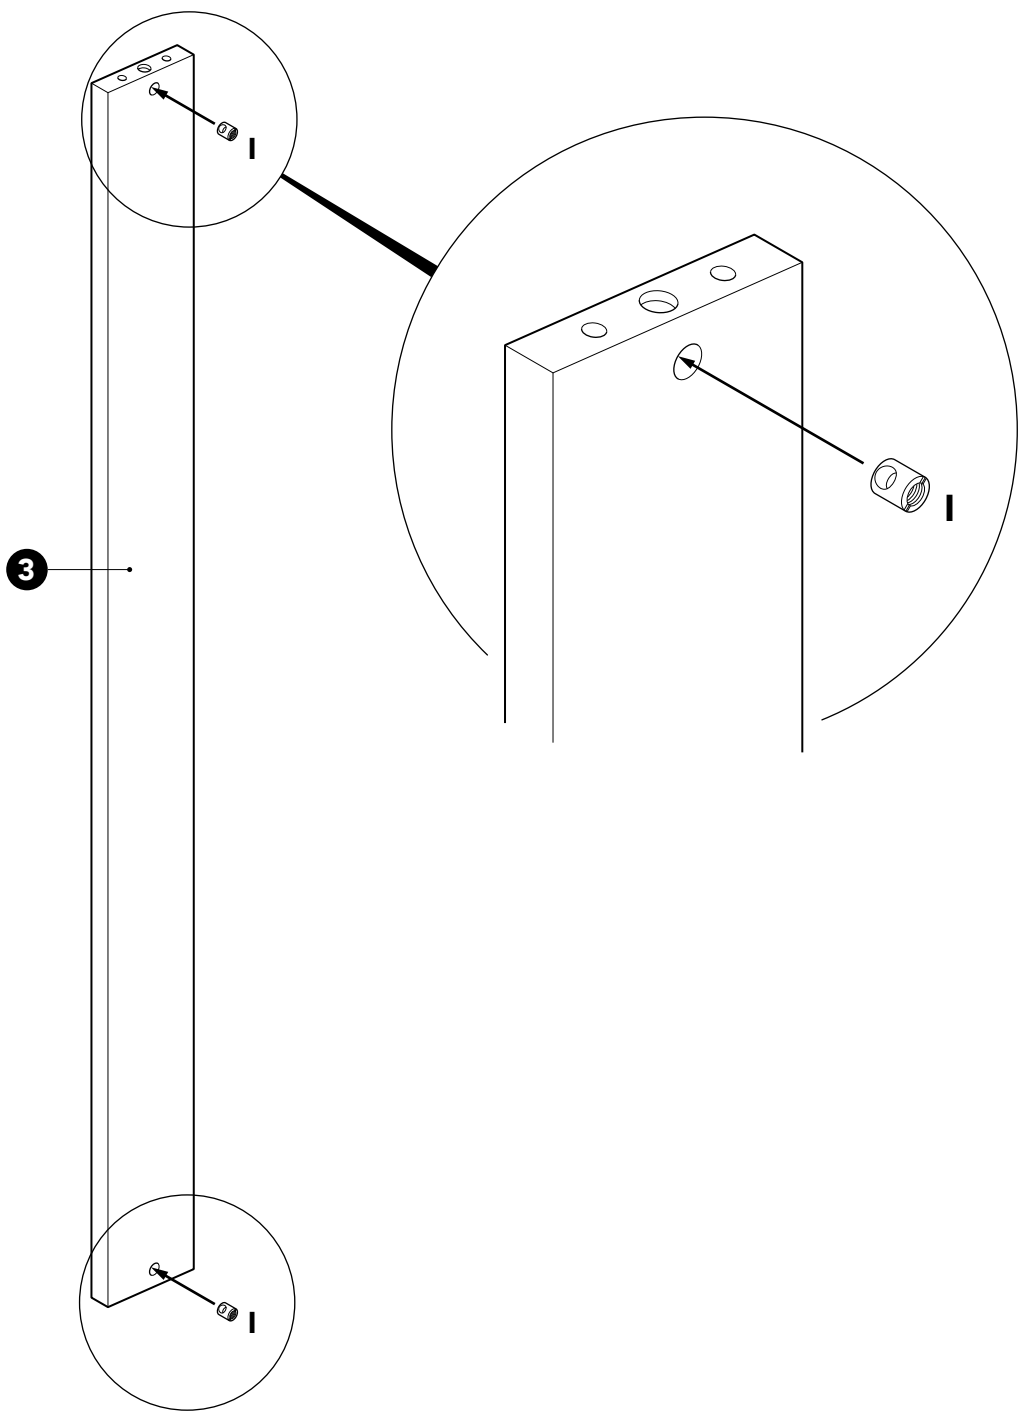


6

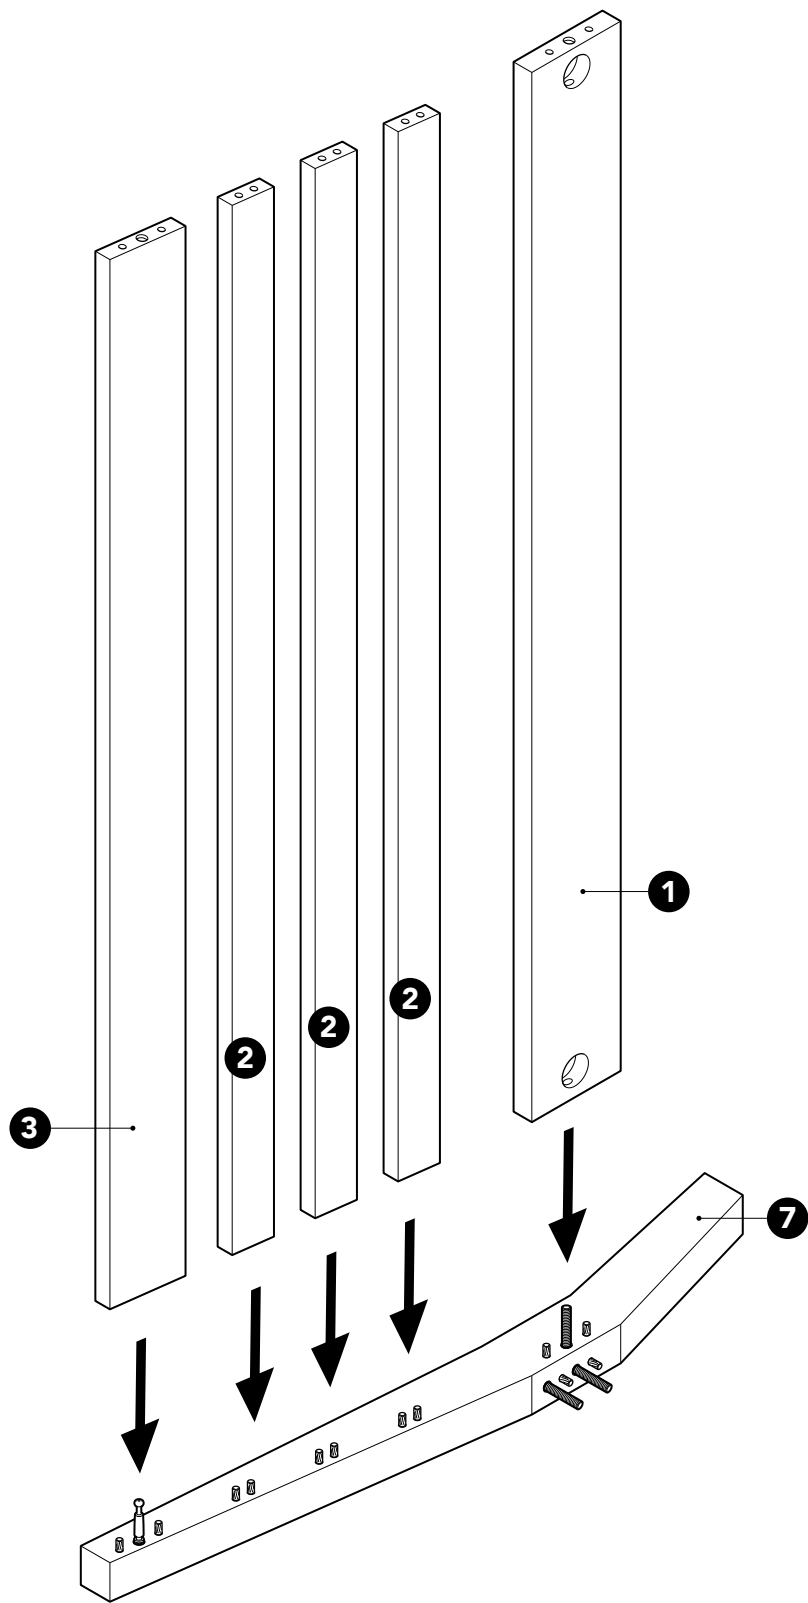


7

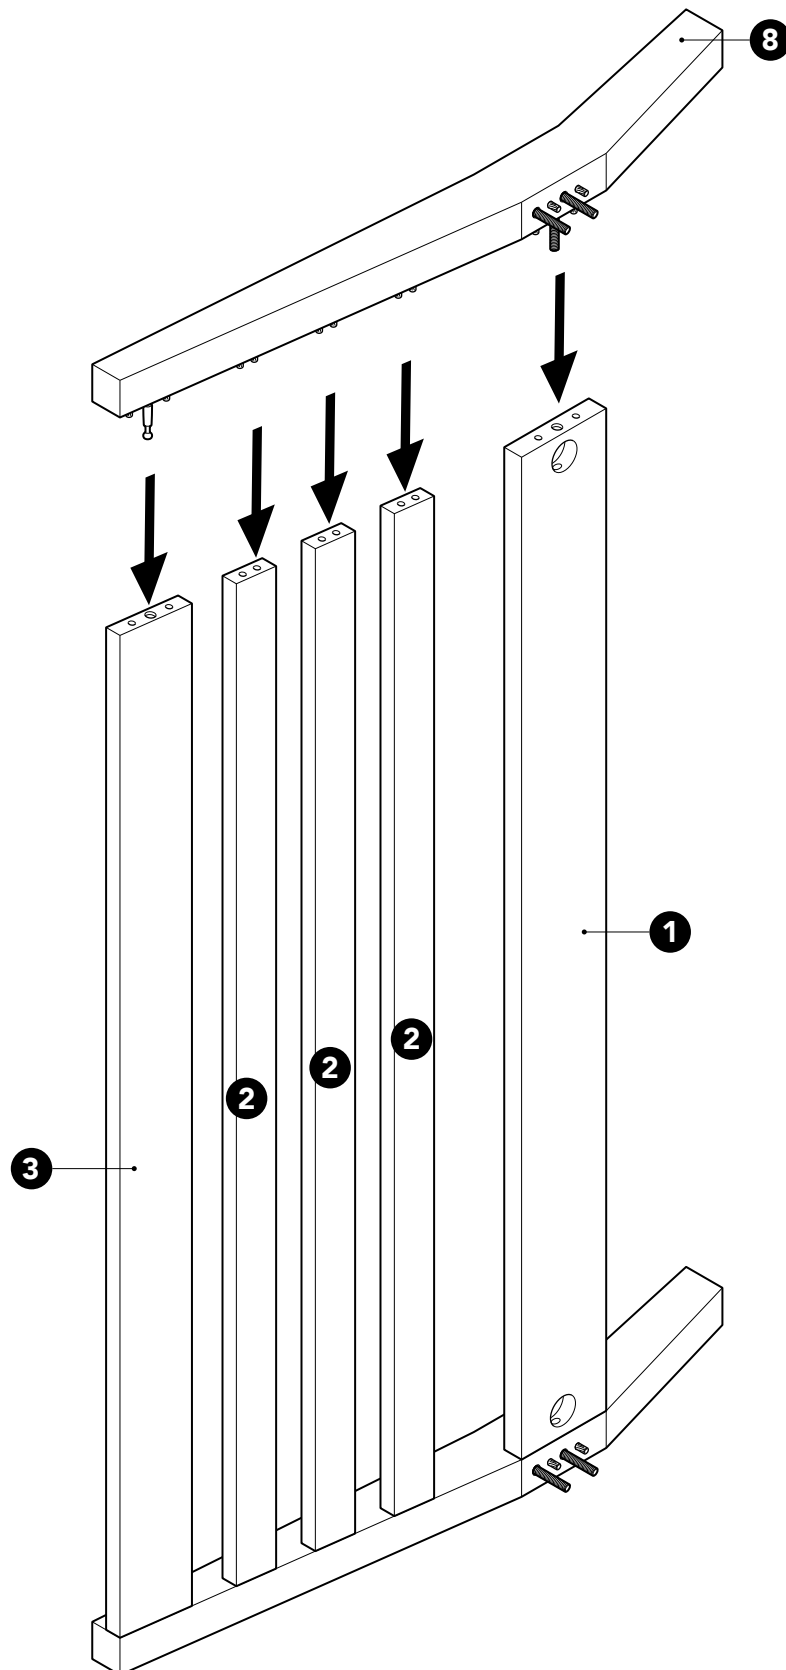


8

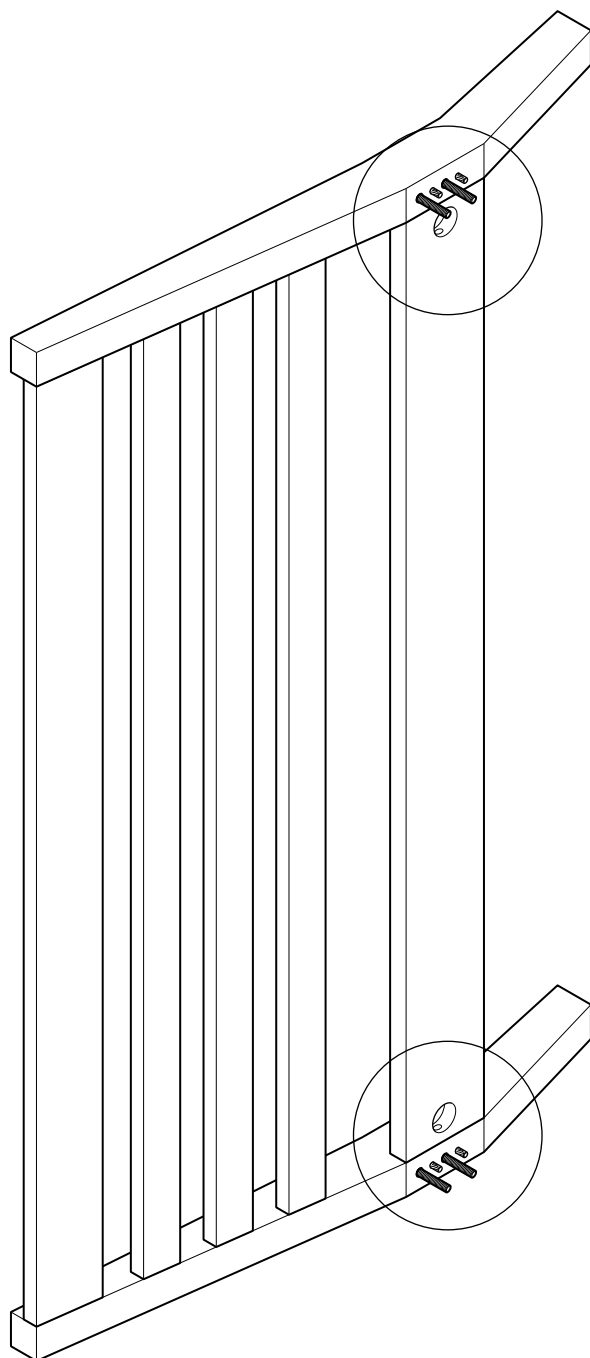


a

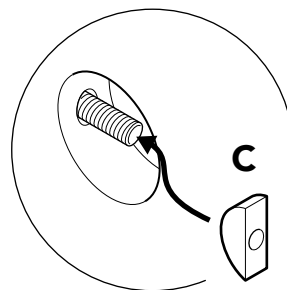



b

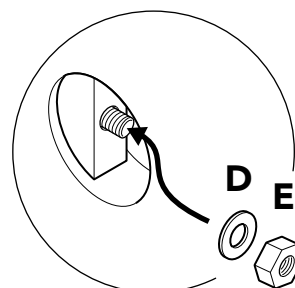


c

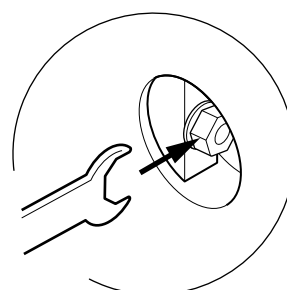


d

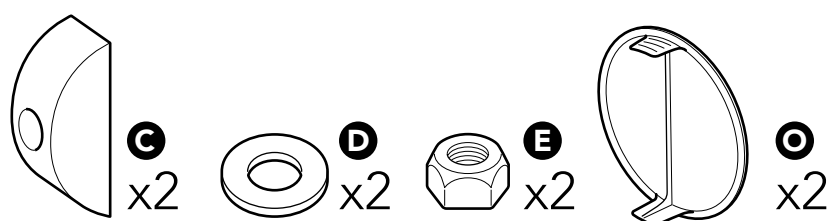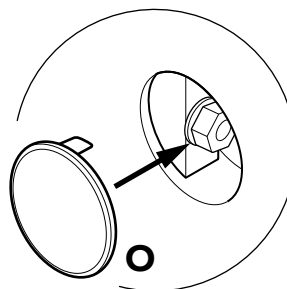


9

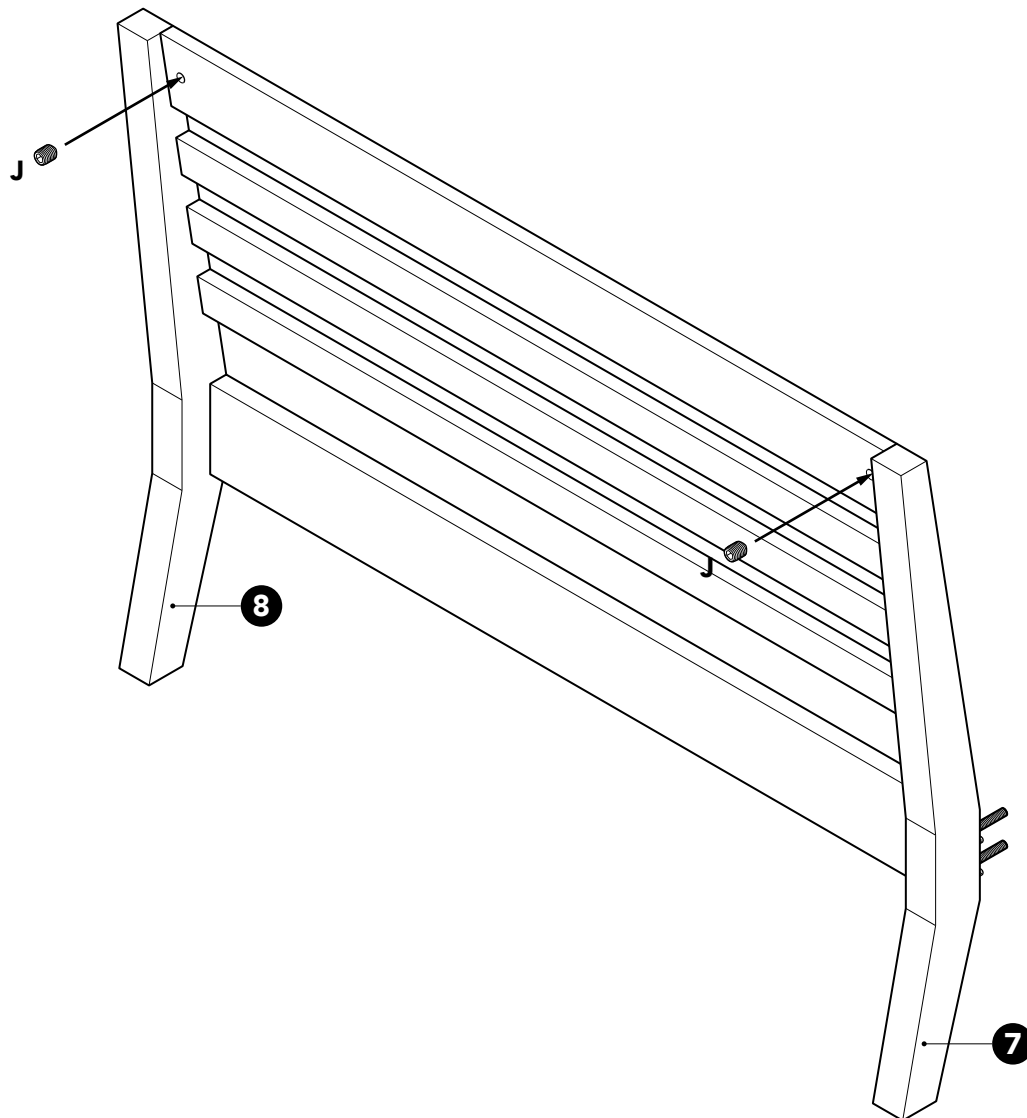


10

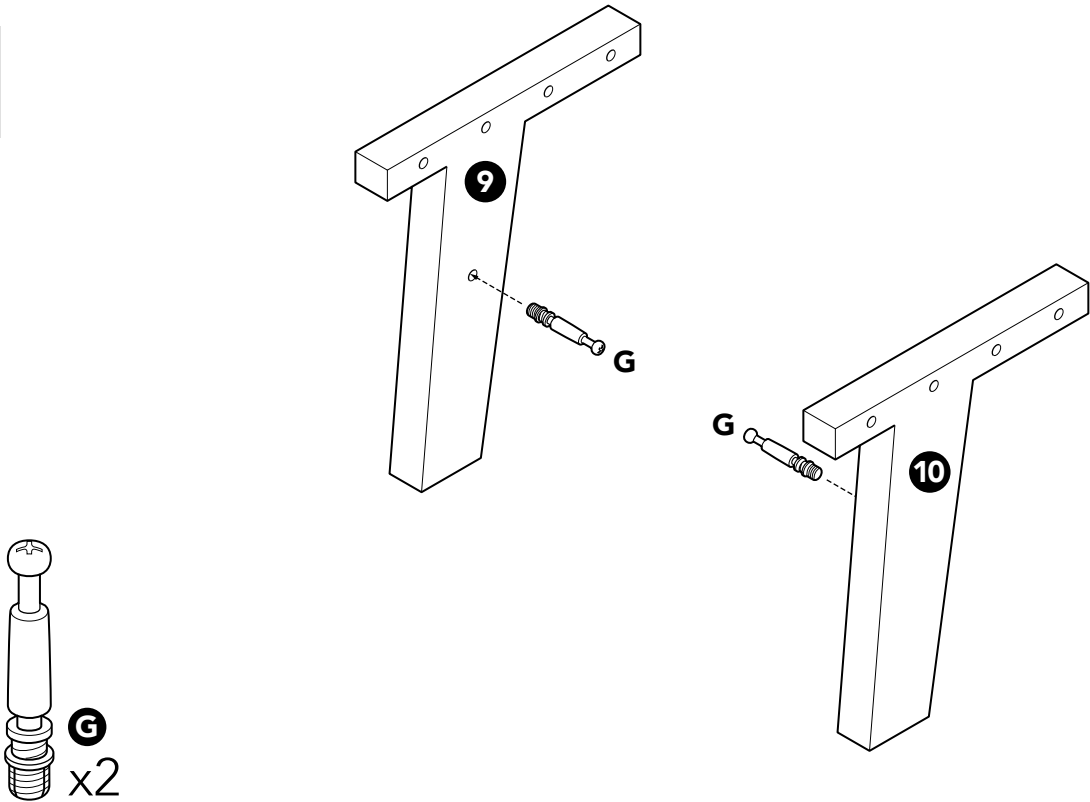


11

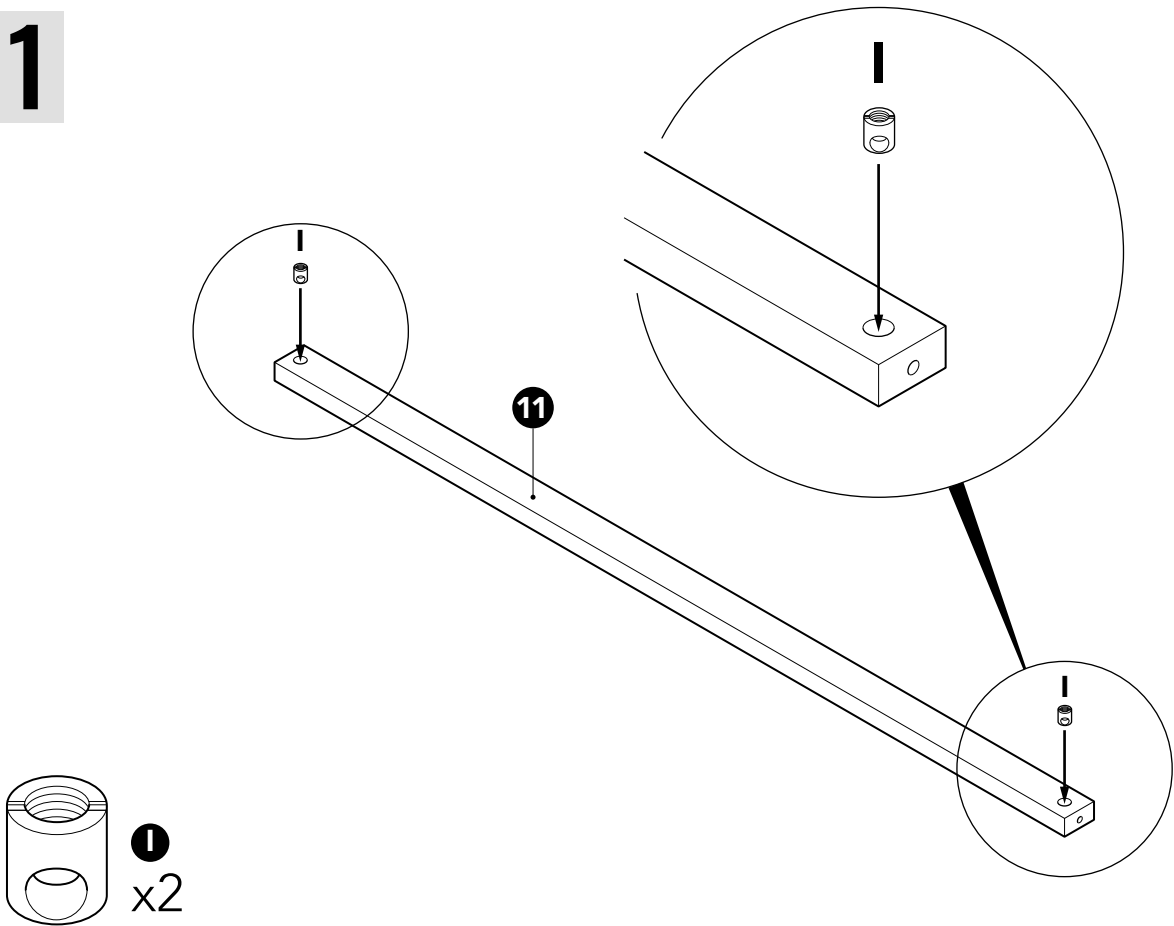


12

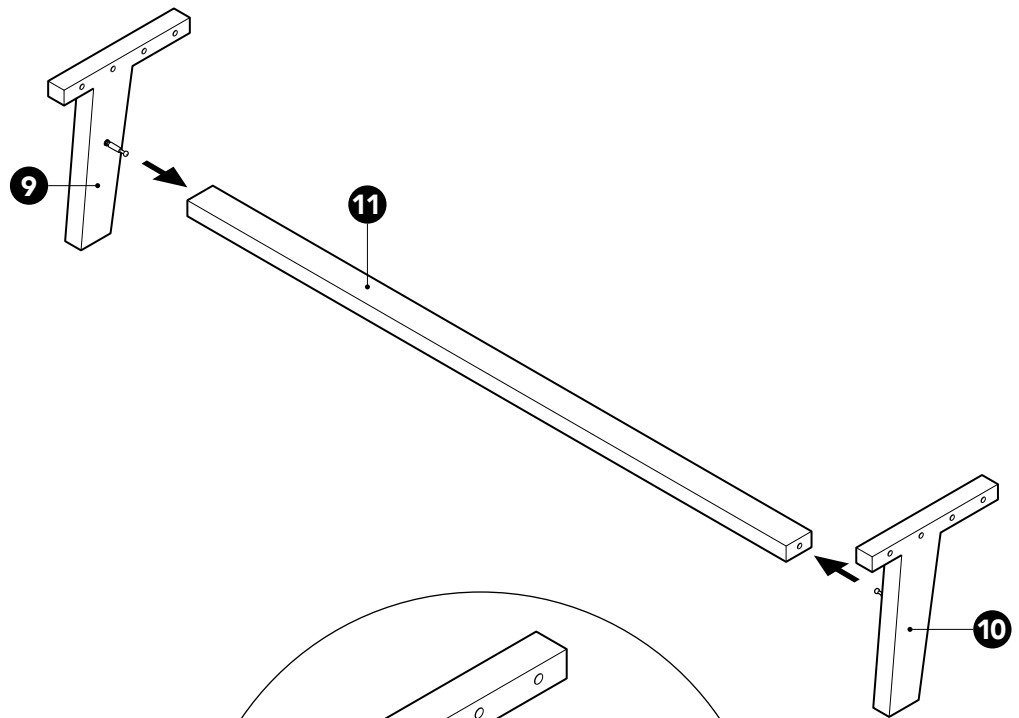




13

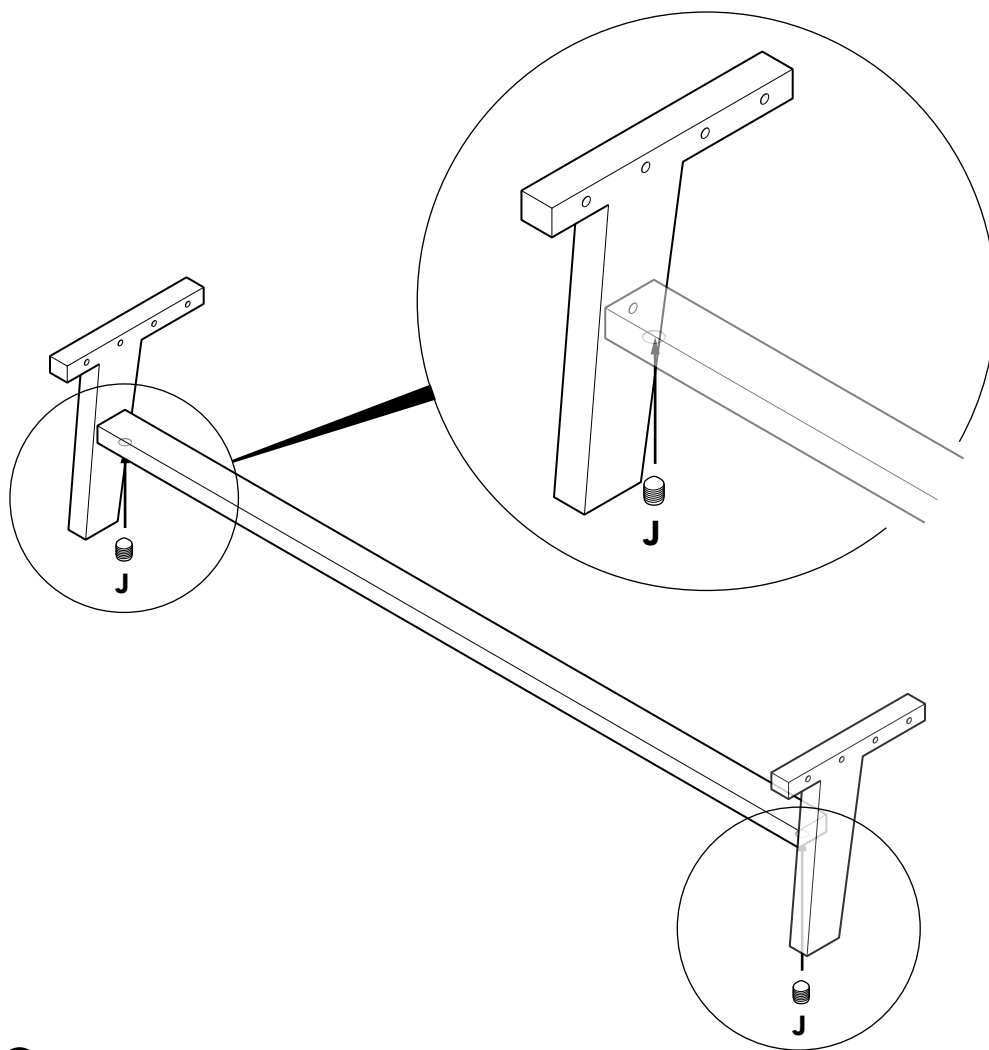



14

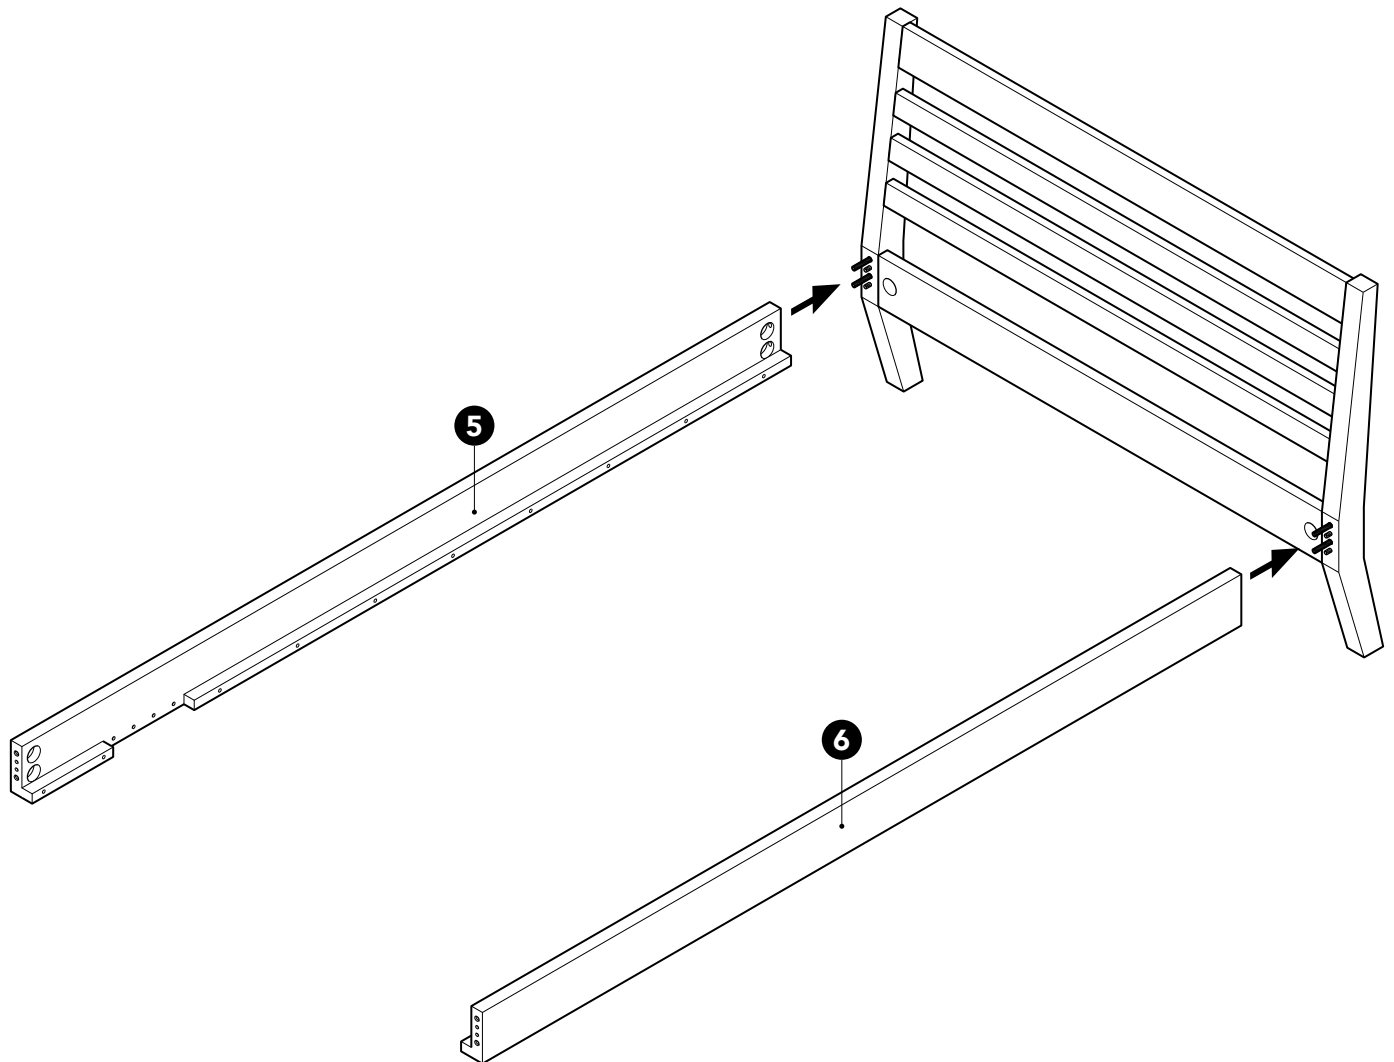



15

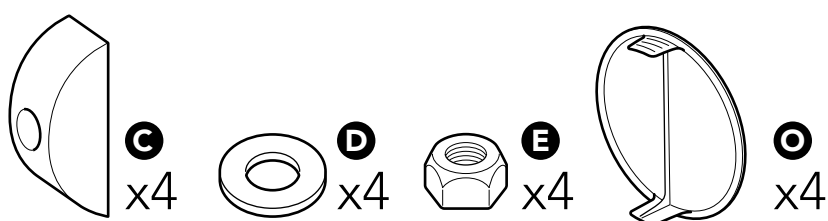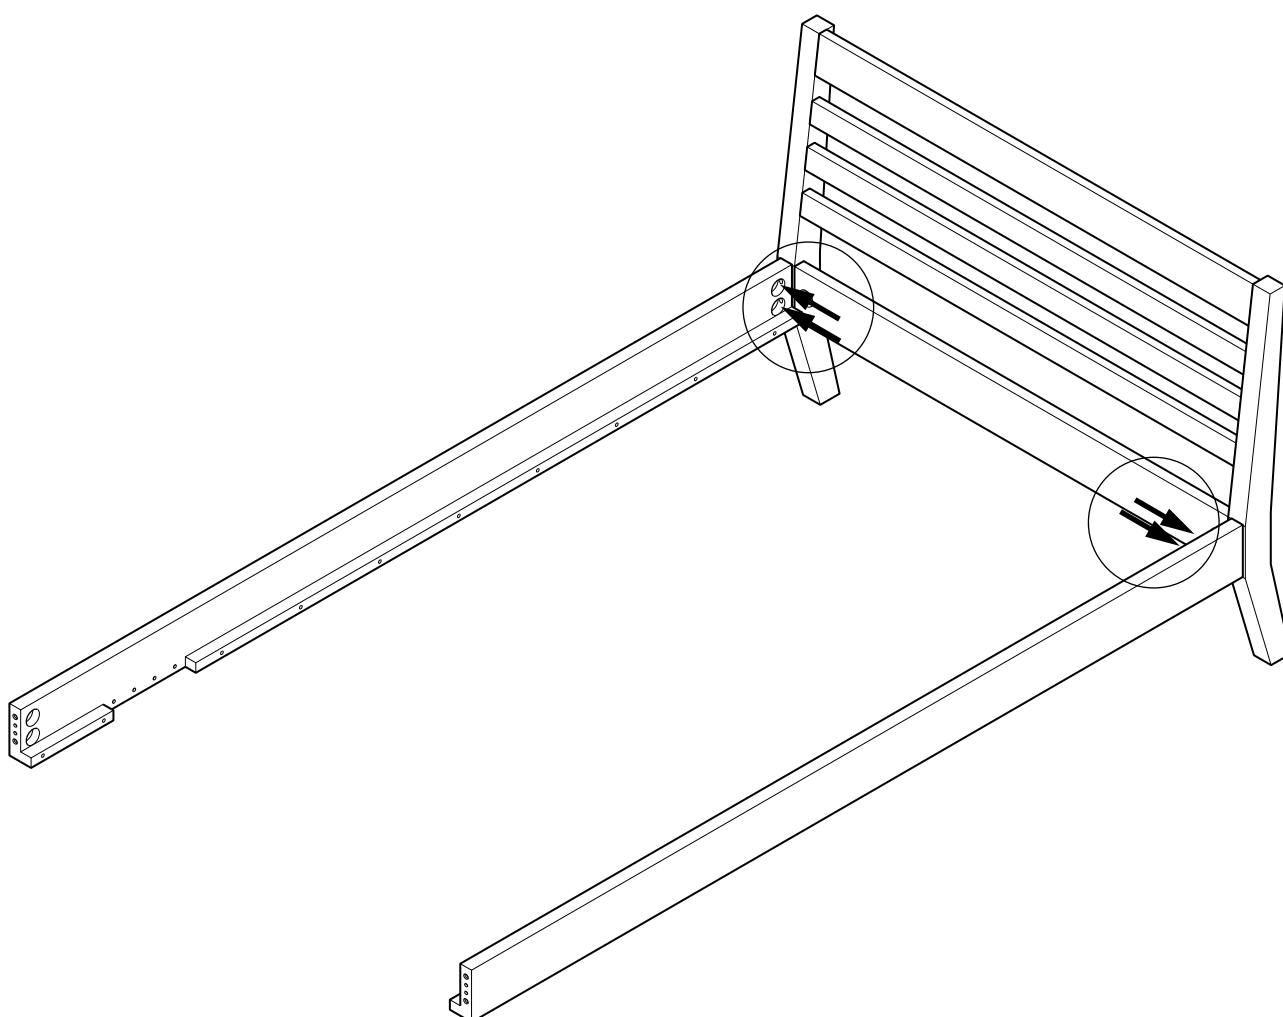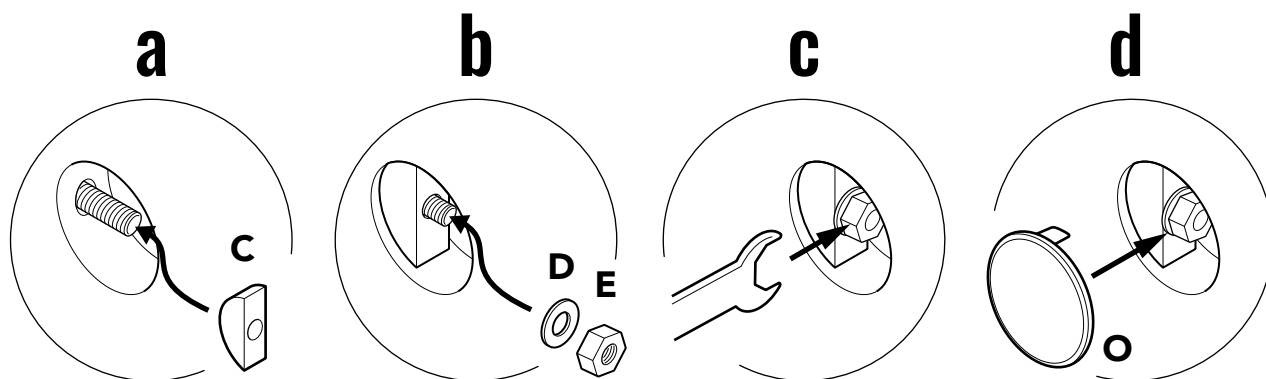




16

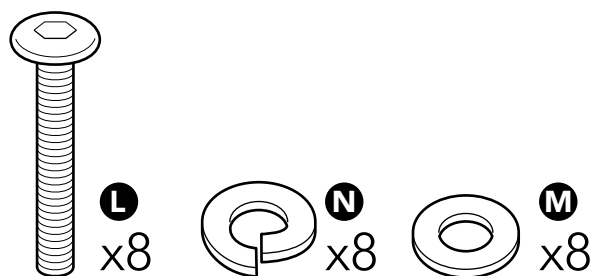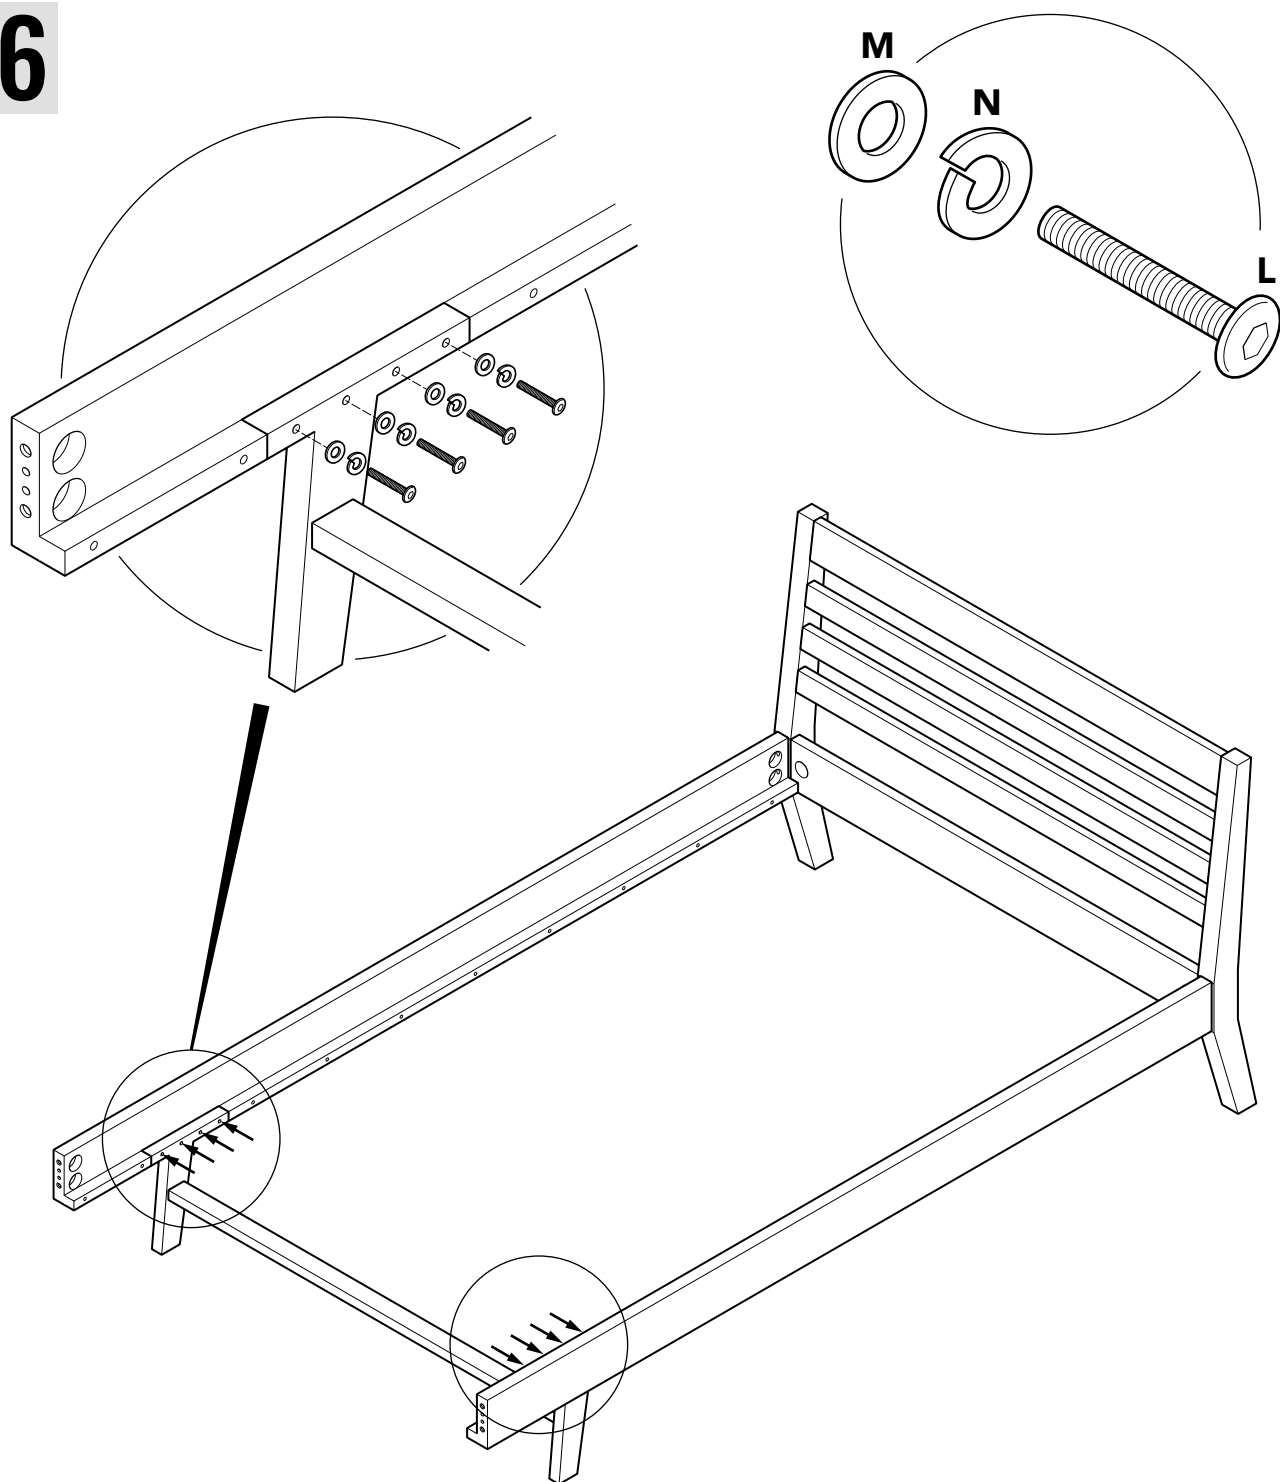

17

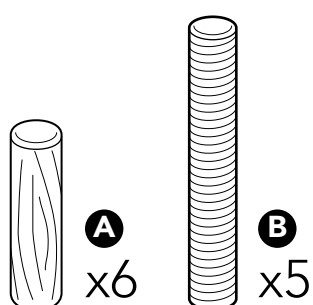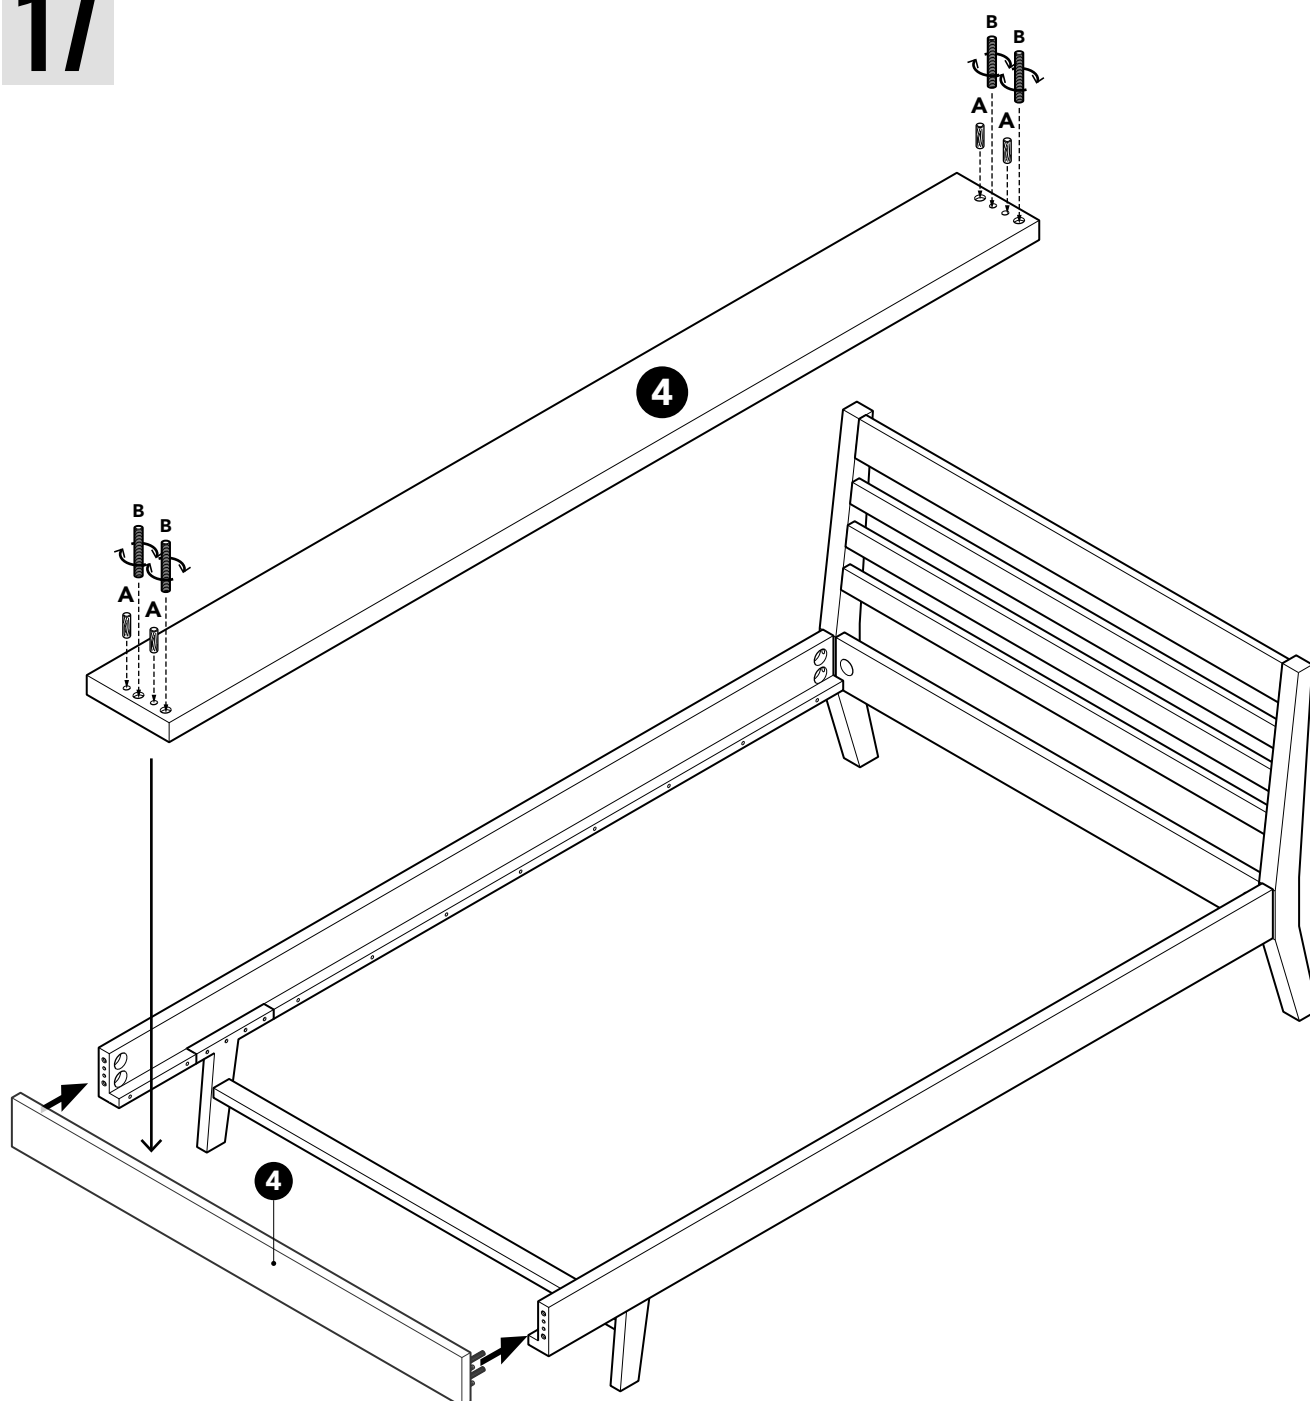

18

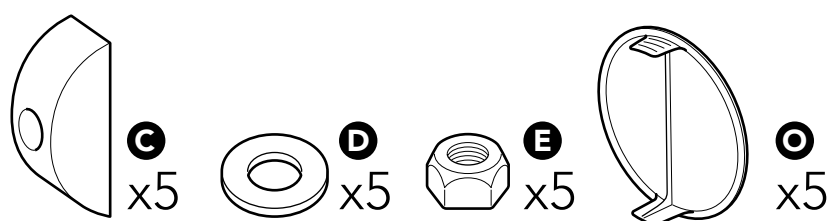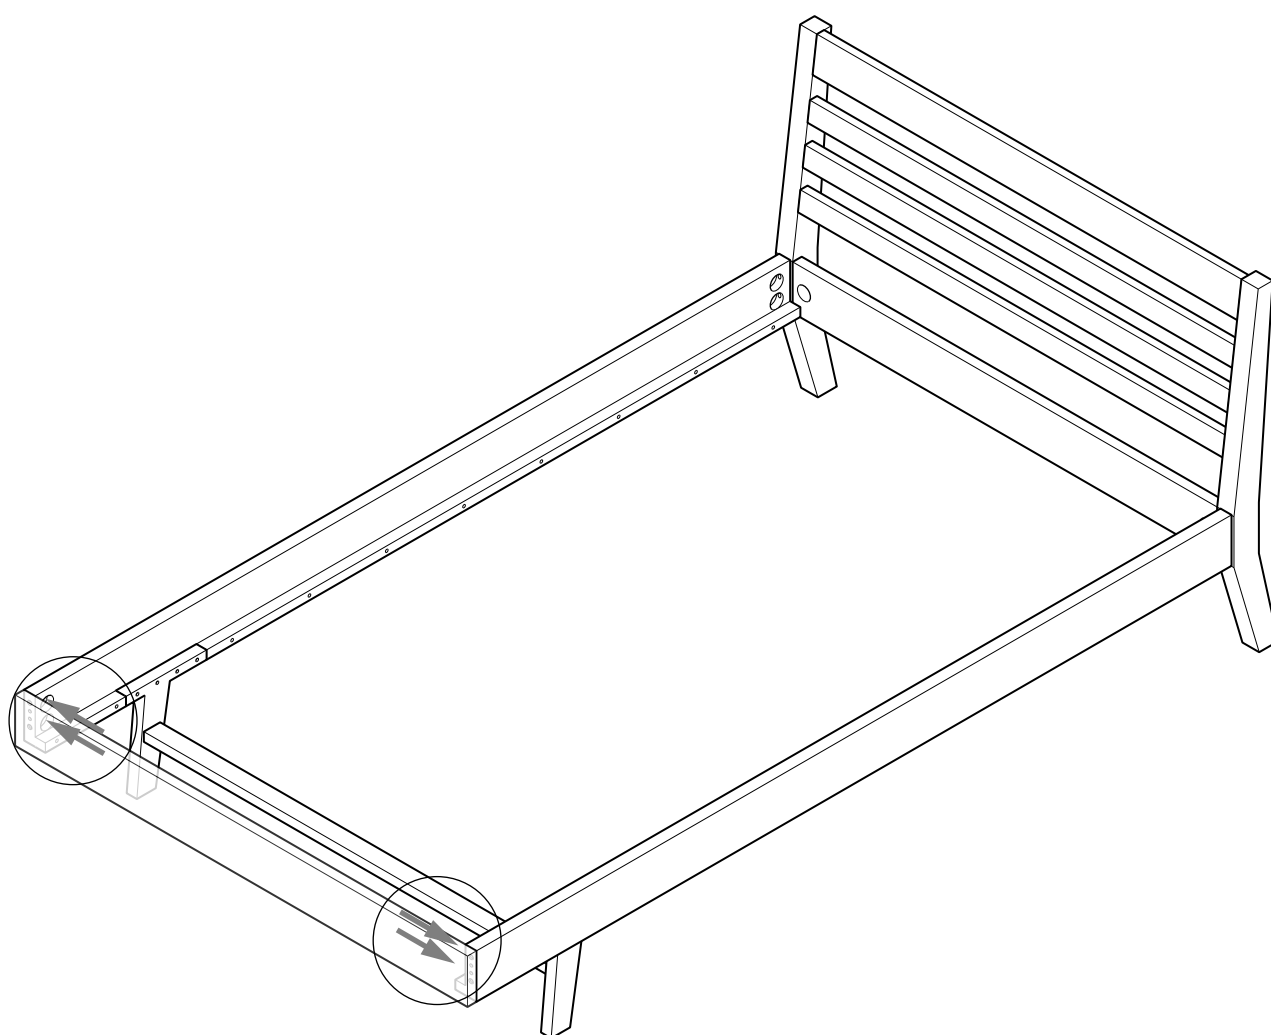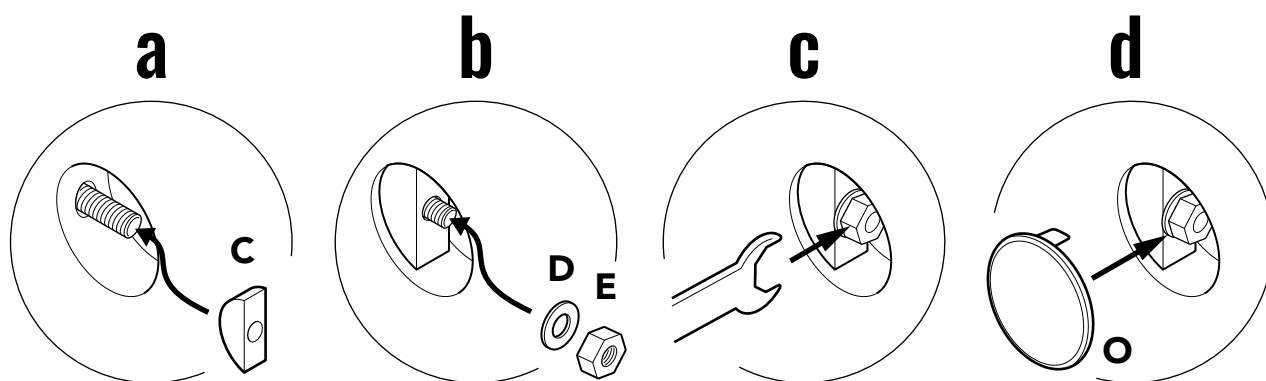

19

