


 KROKWOOD


SOFIA

BEDFRAME


ASSEMBLY INSTRUCTIONS

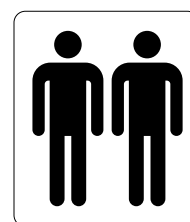




PLAN

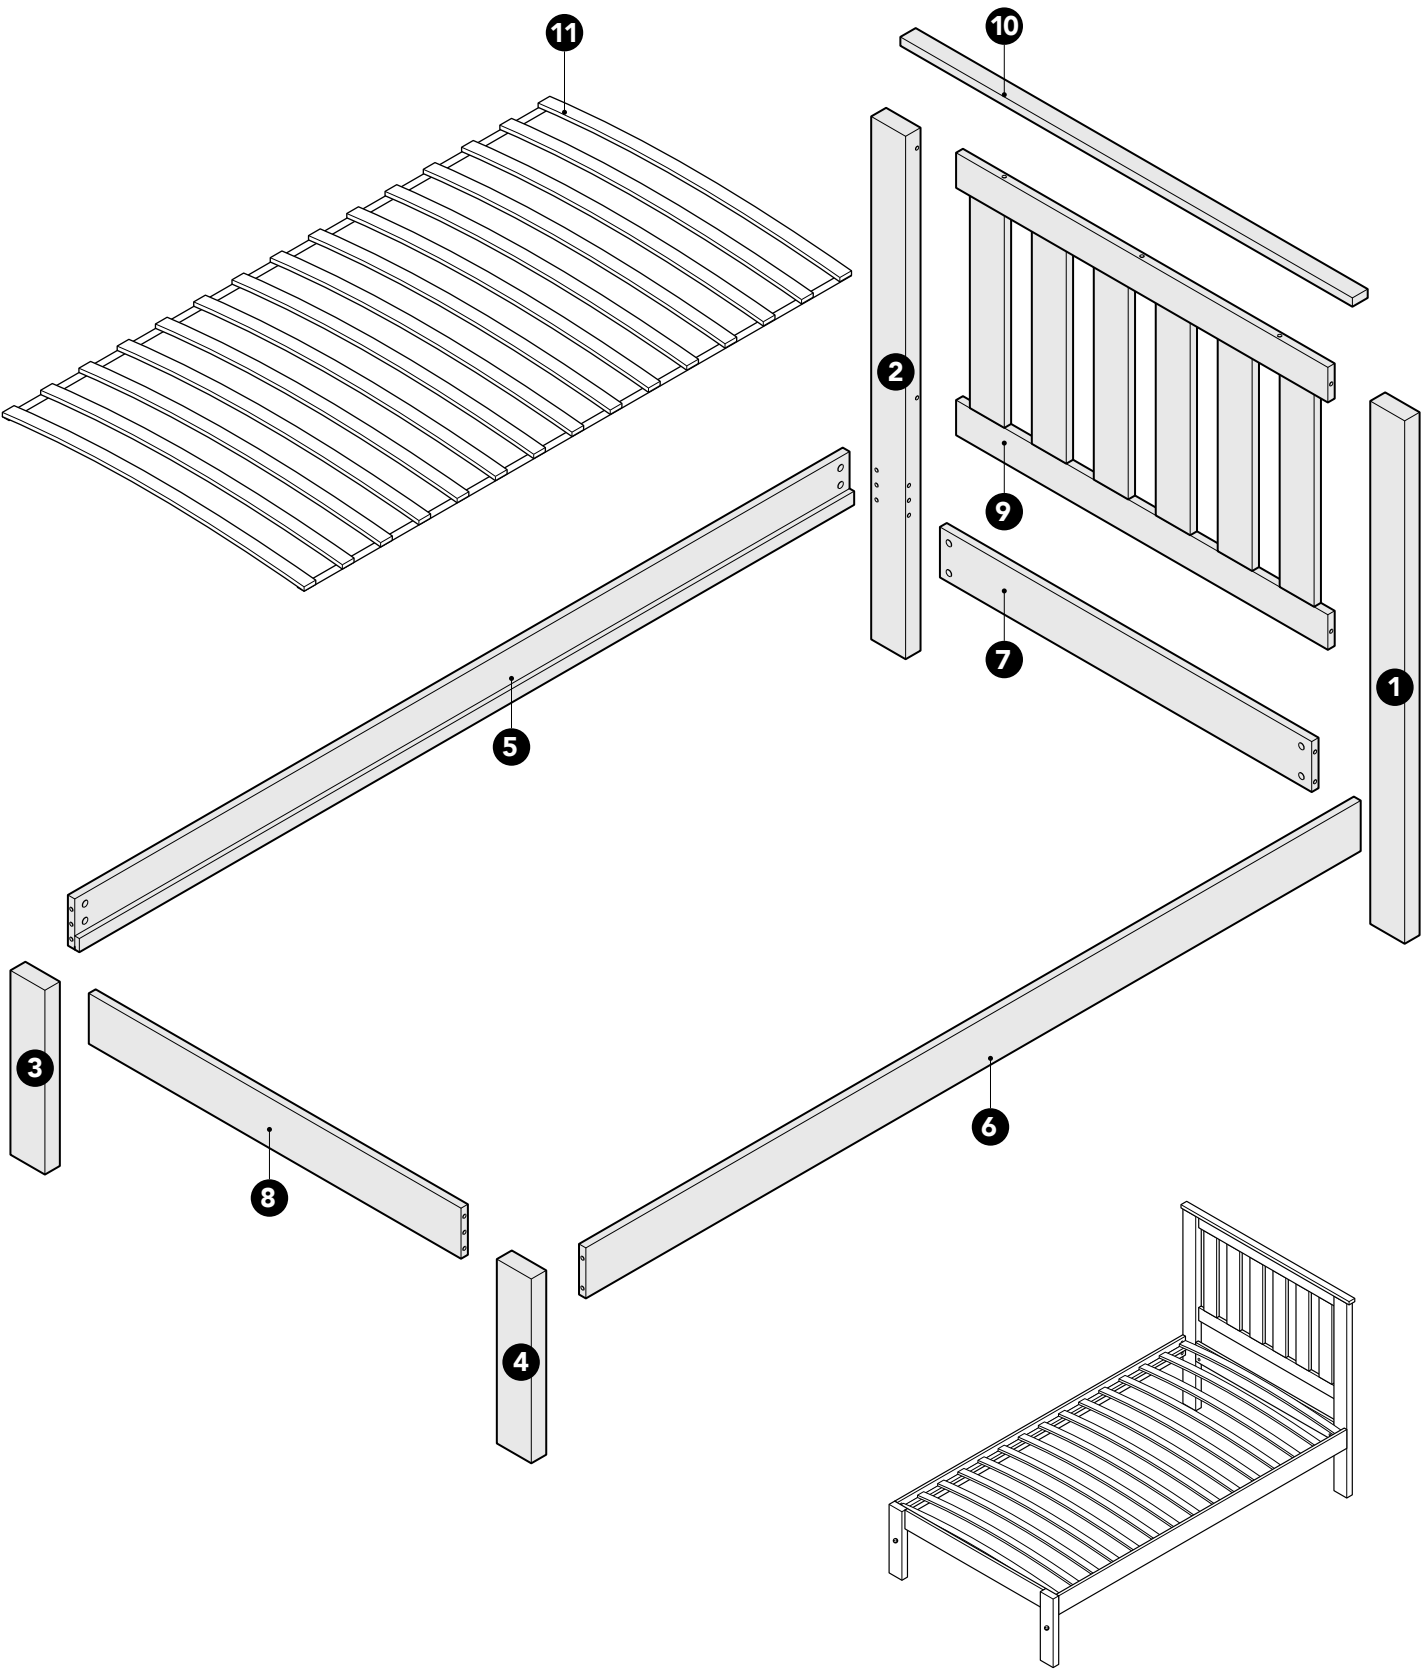

INCLUDED

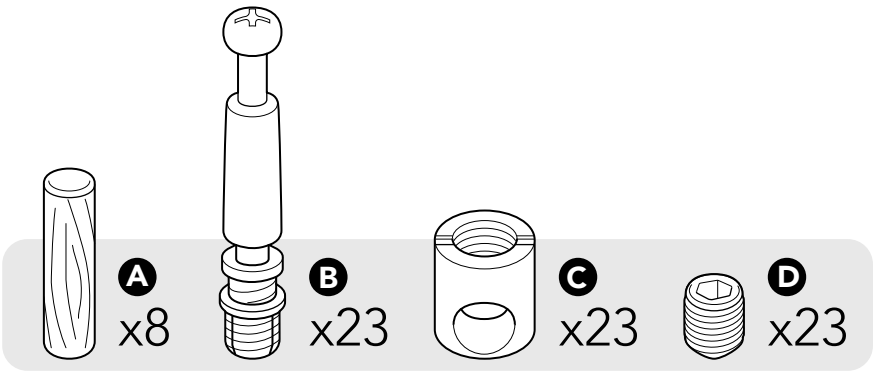


TOOLS NEEDED

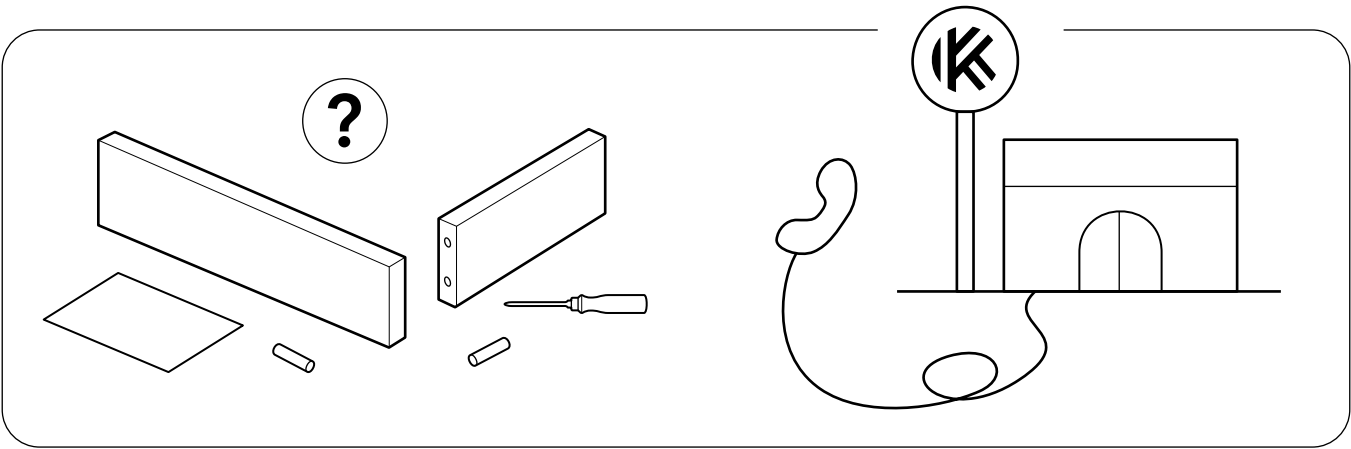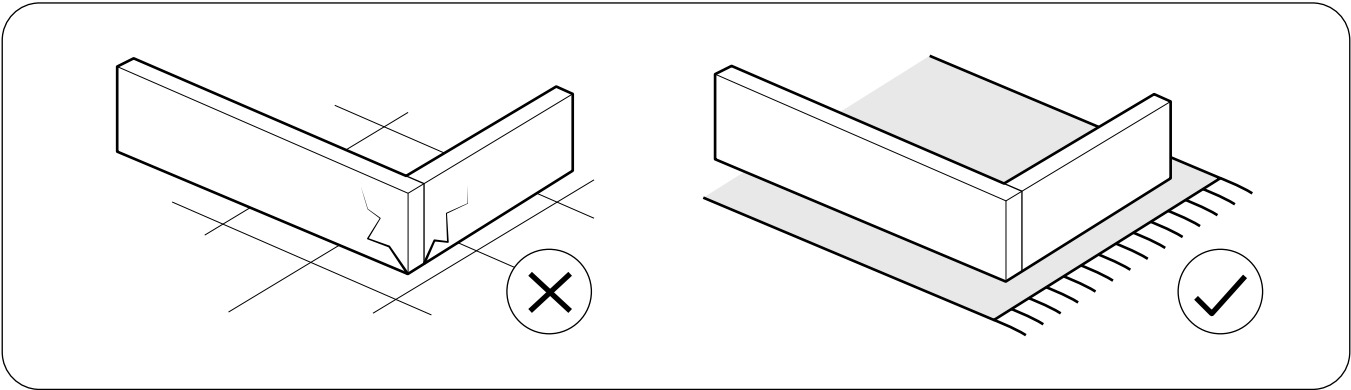
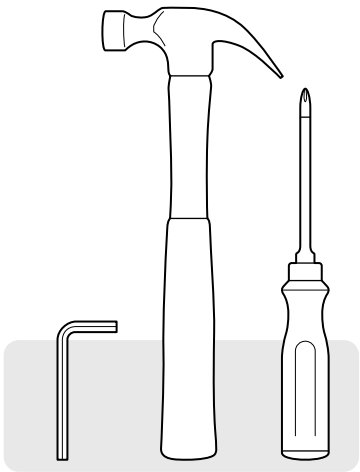


ASSEMBLY



1

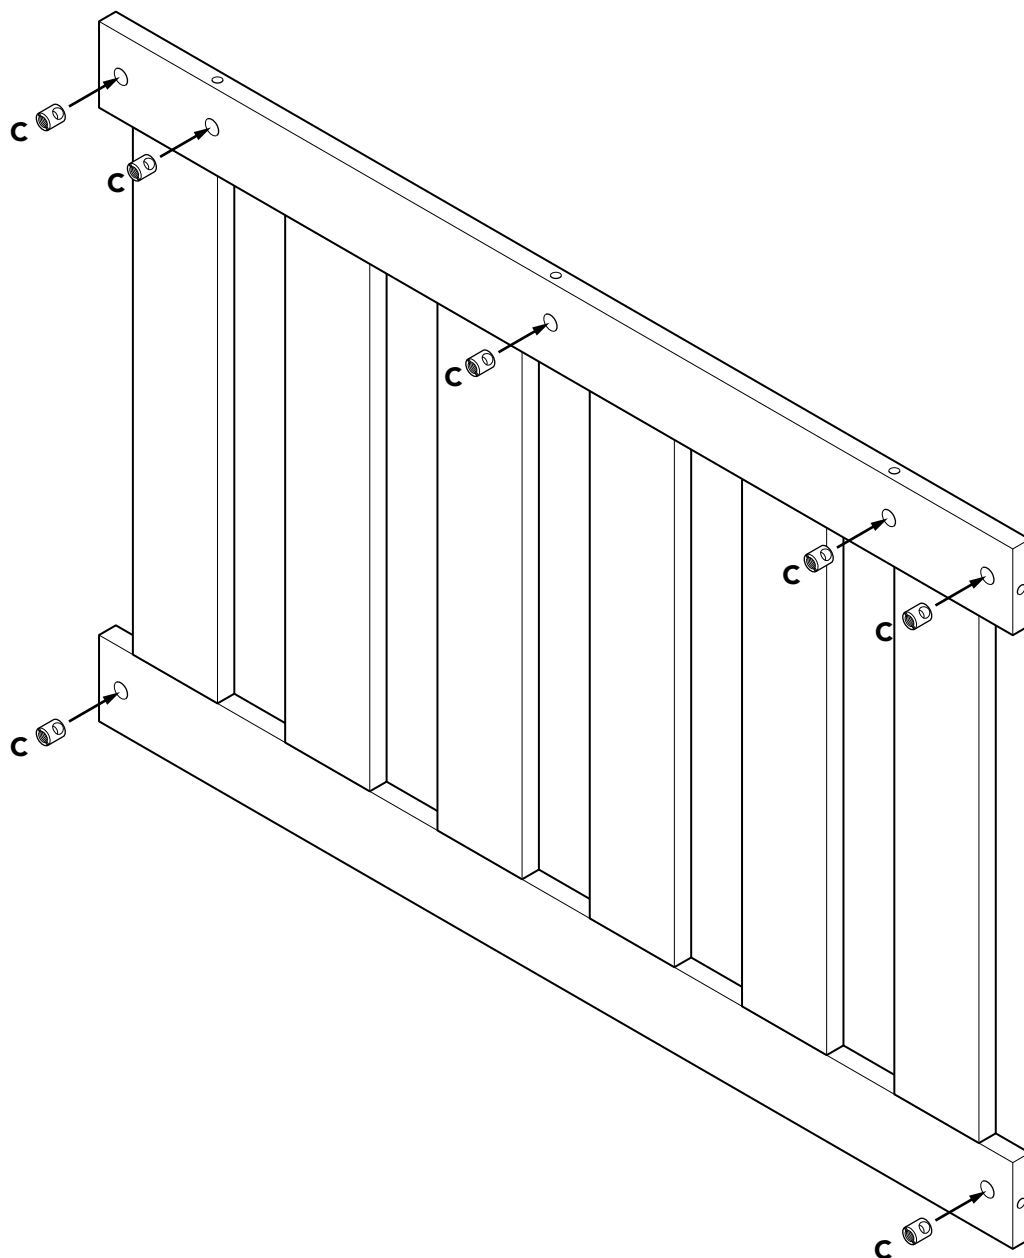



2

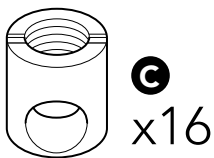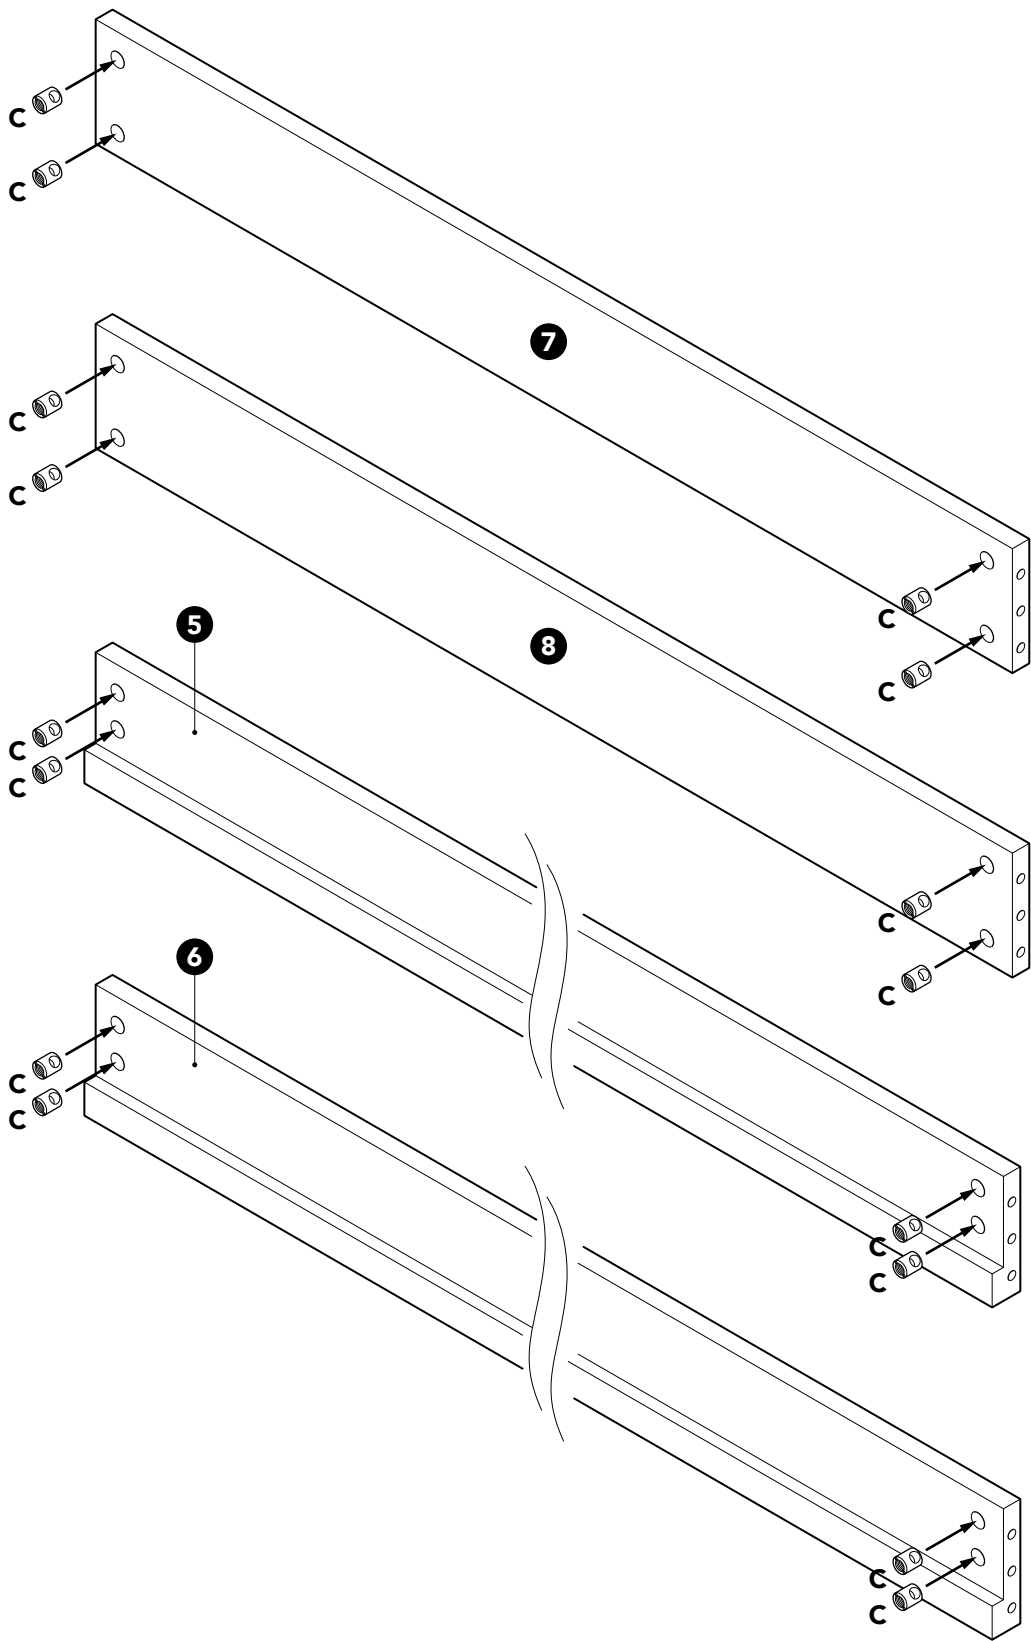


3

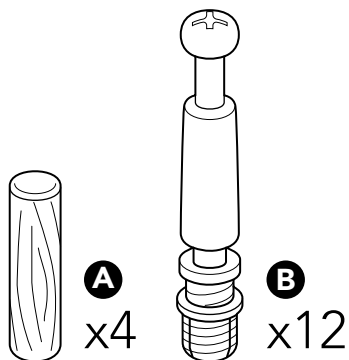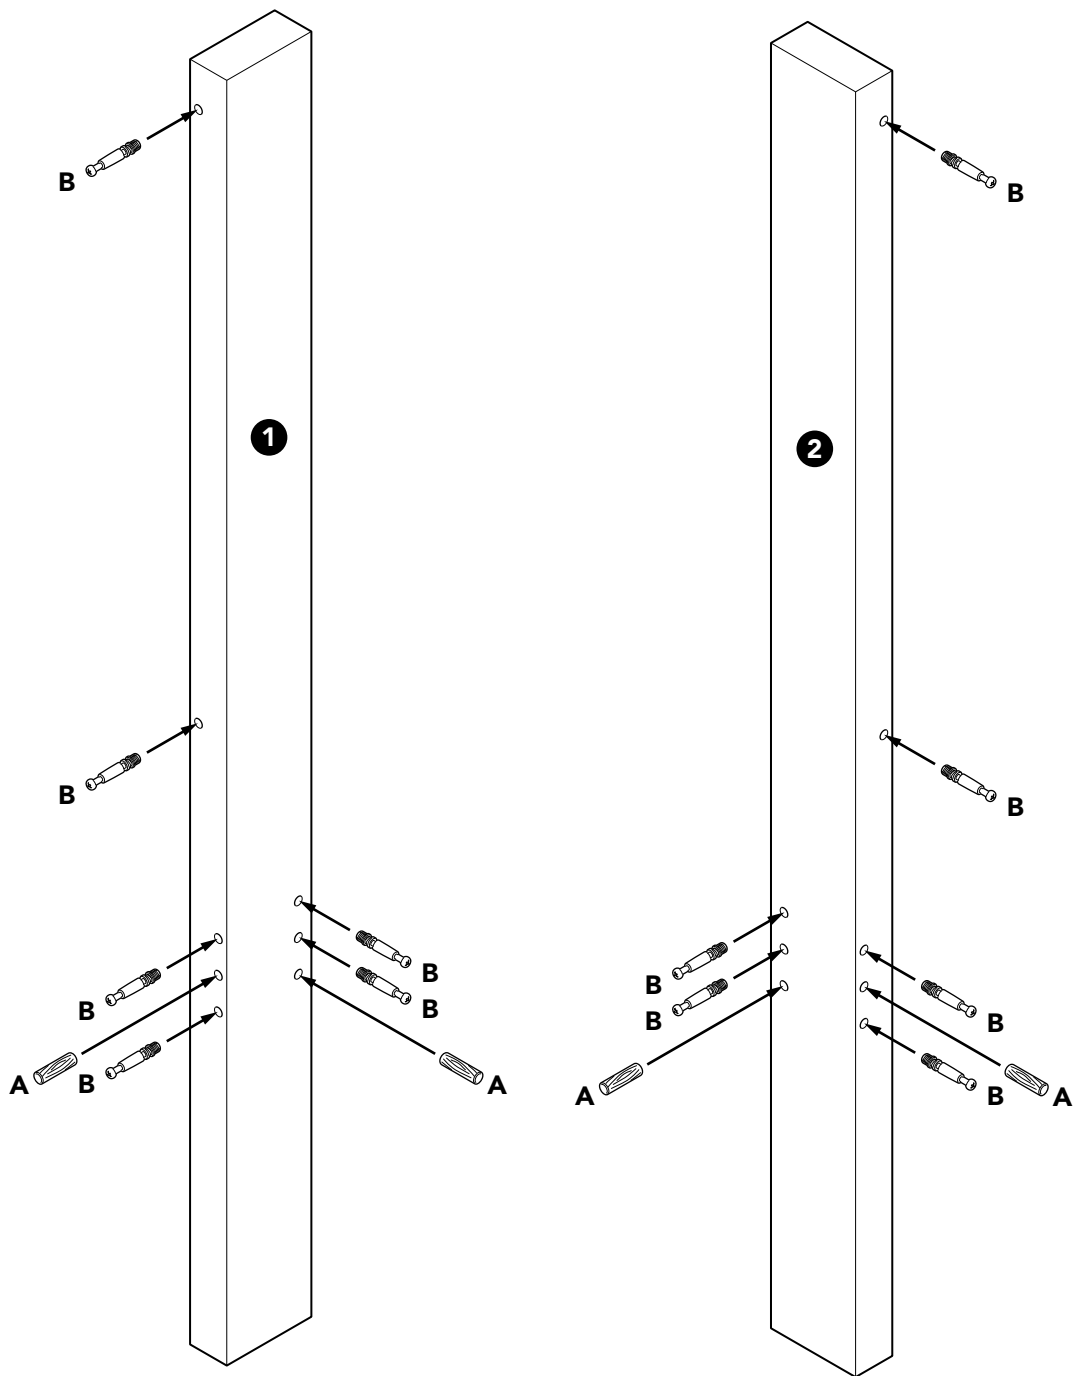


4

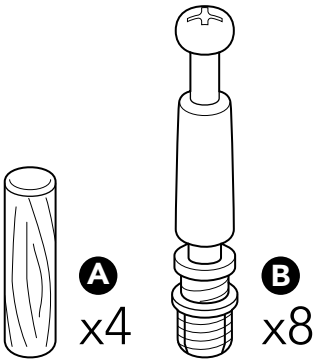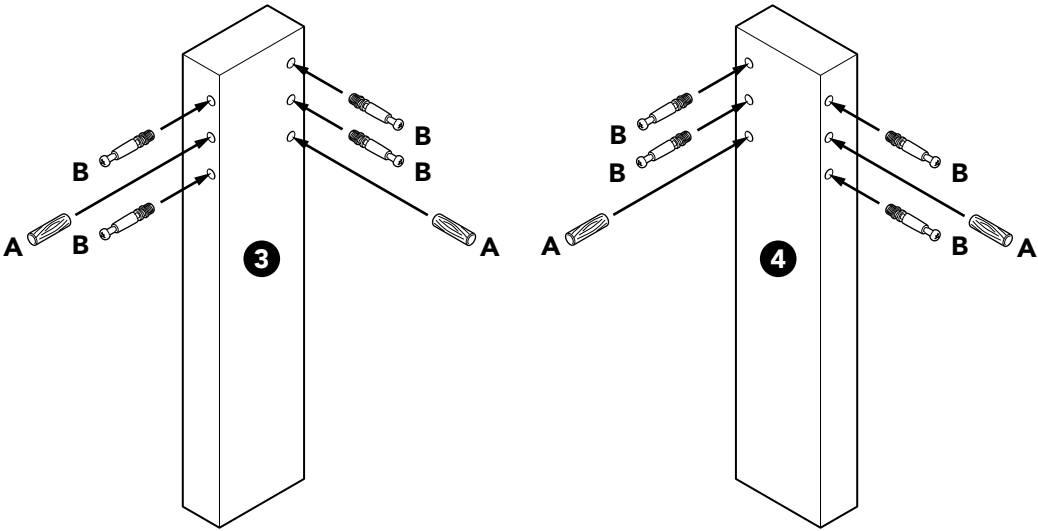


5

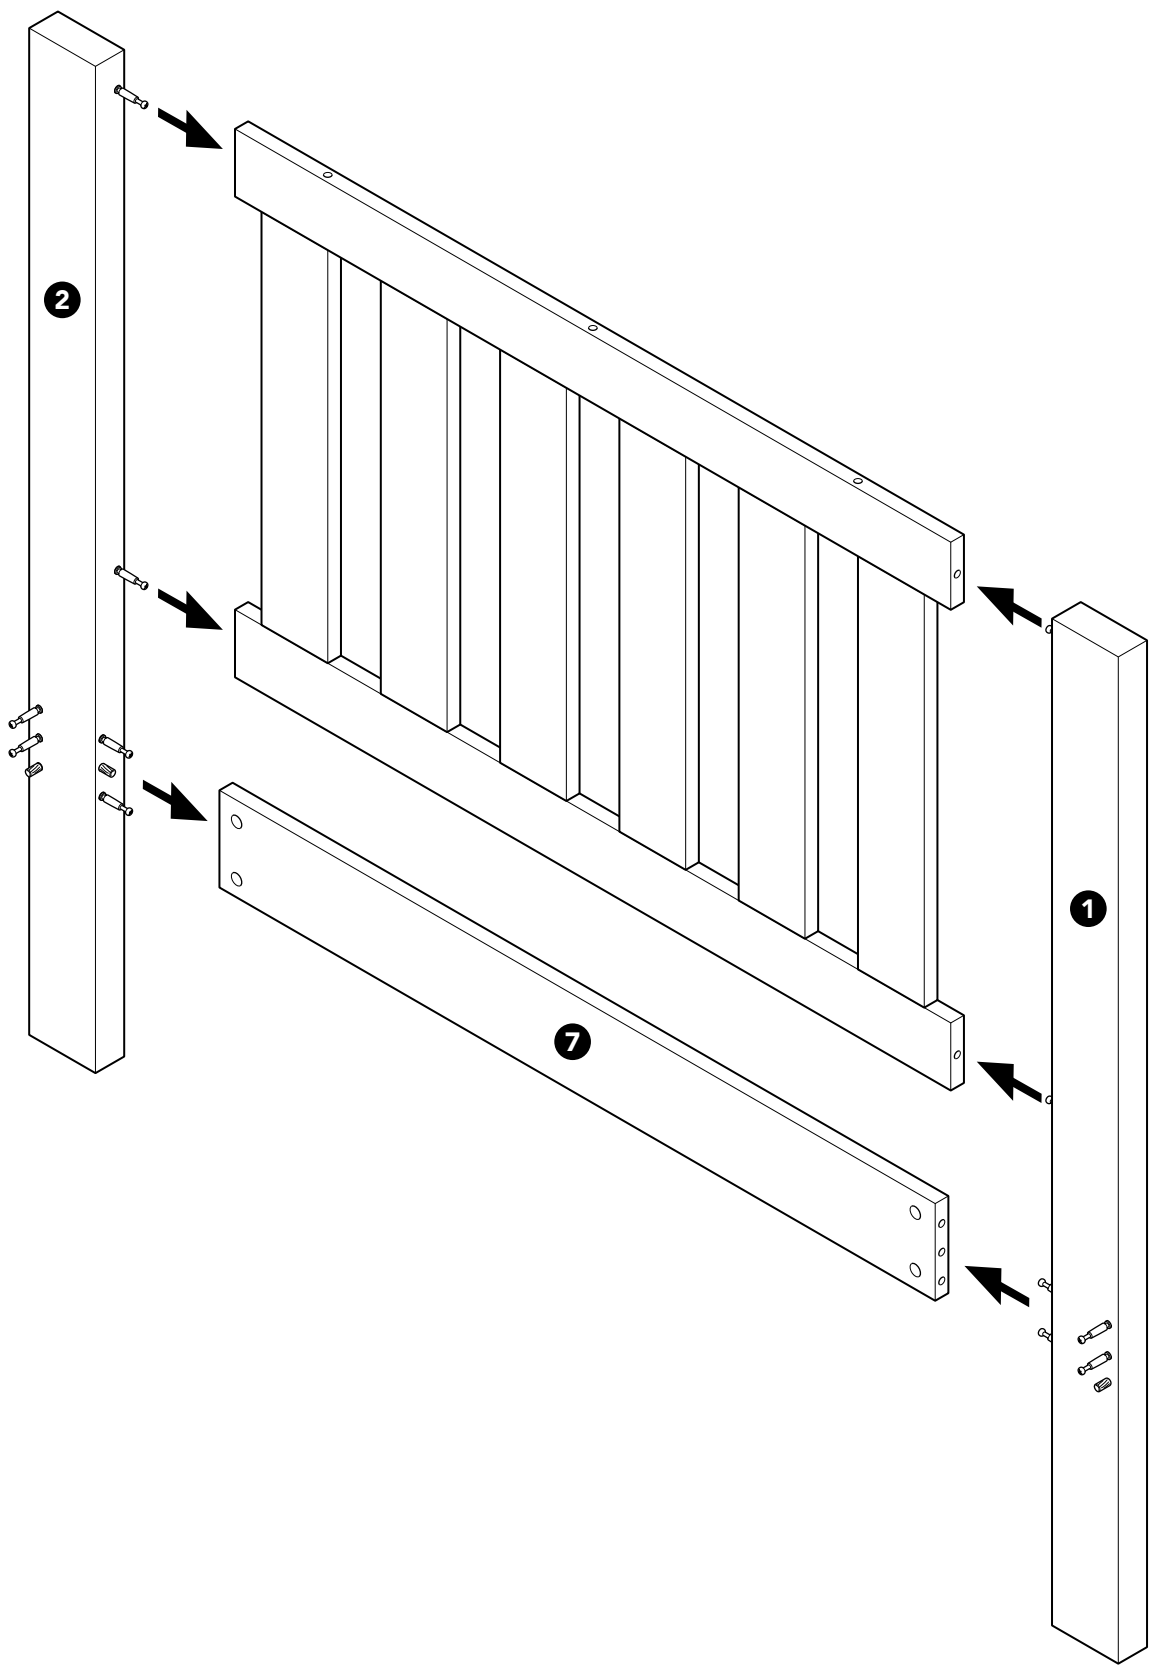


6

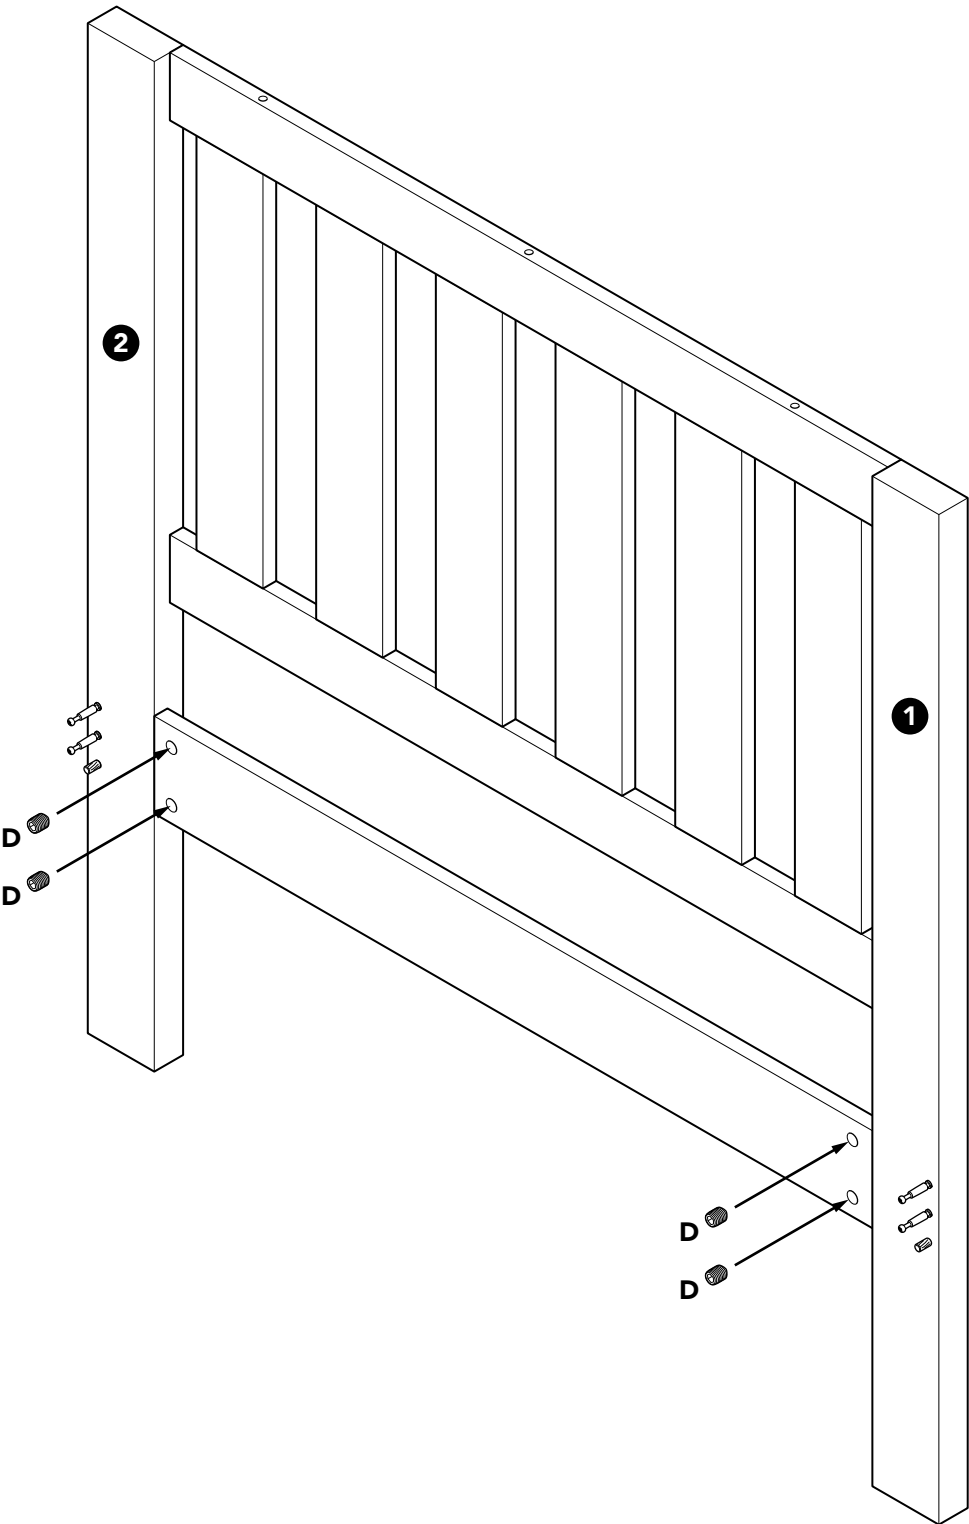


7

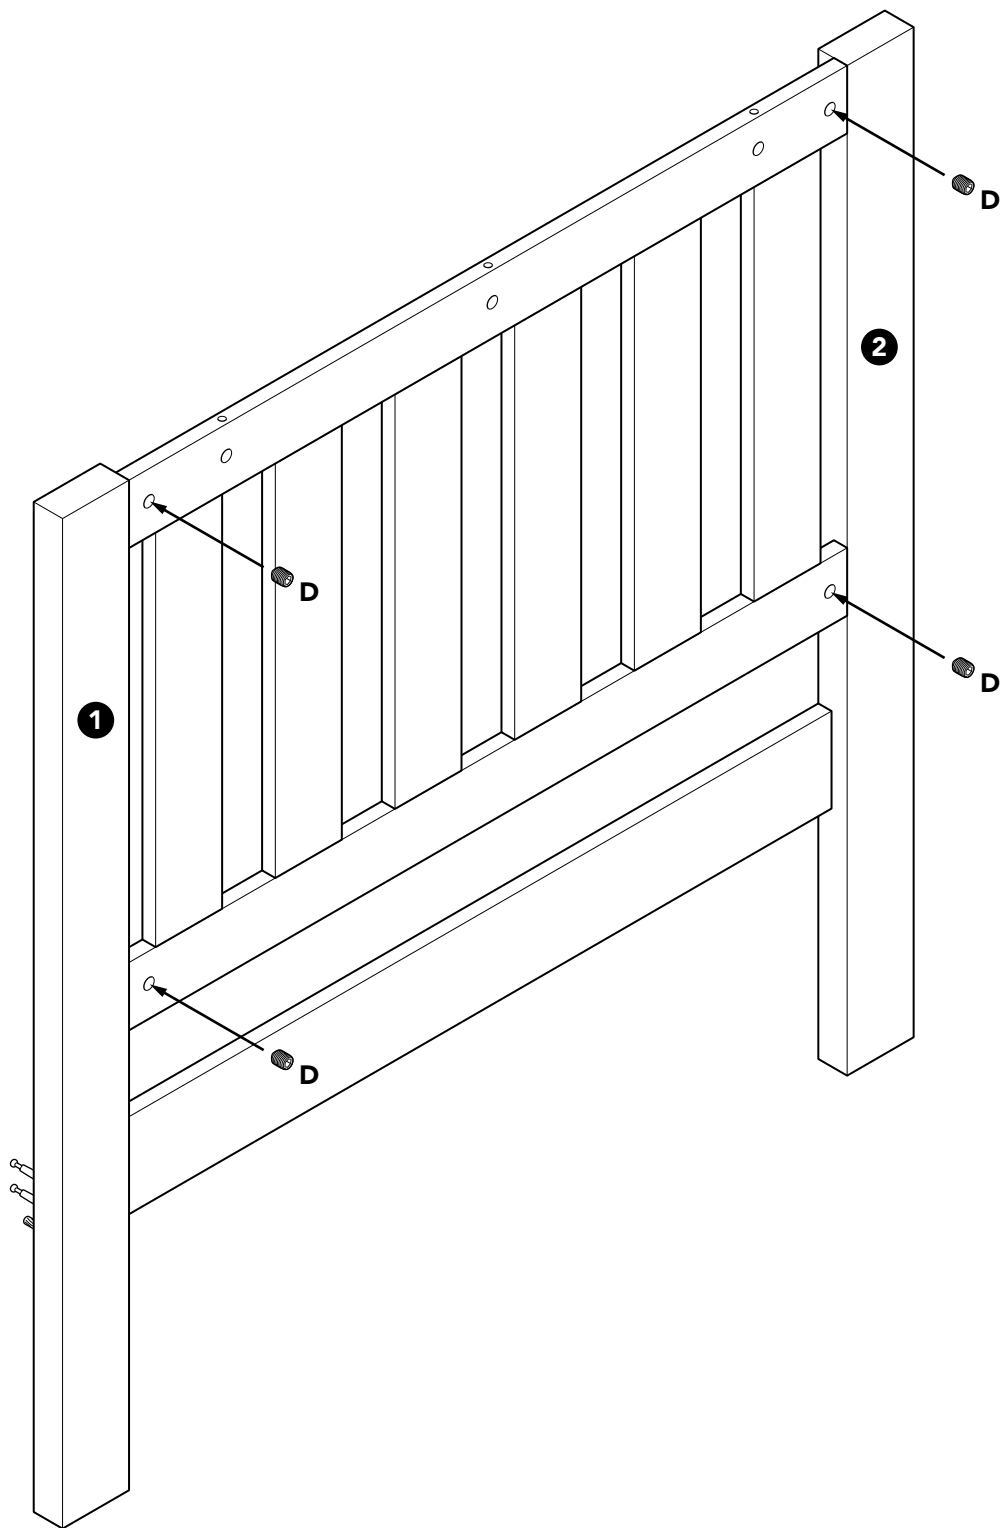


8

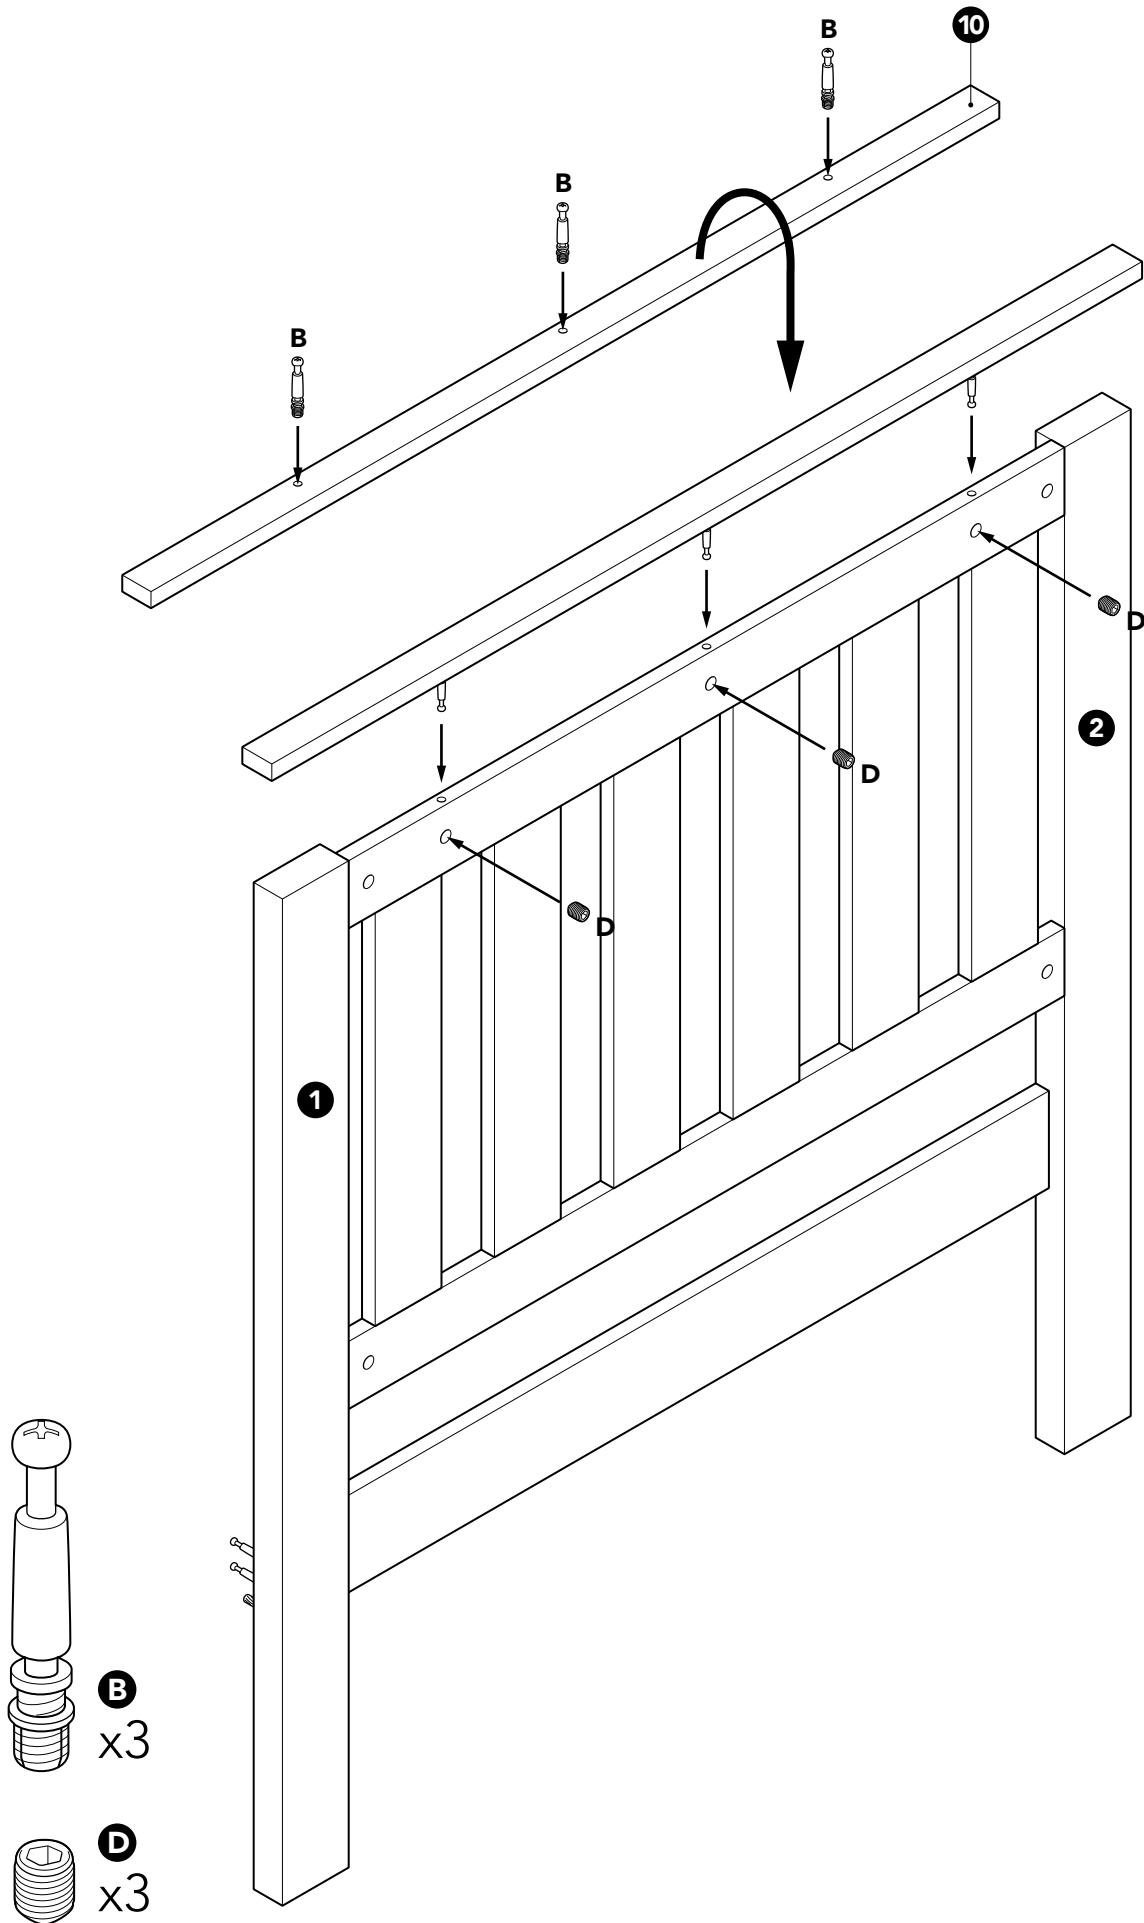


9

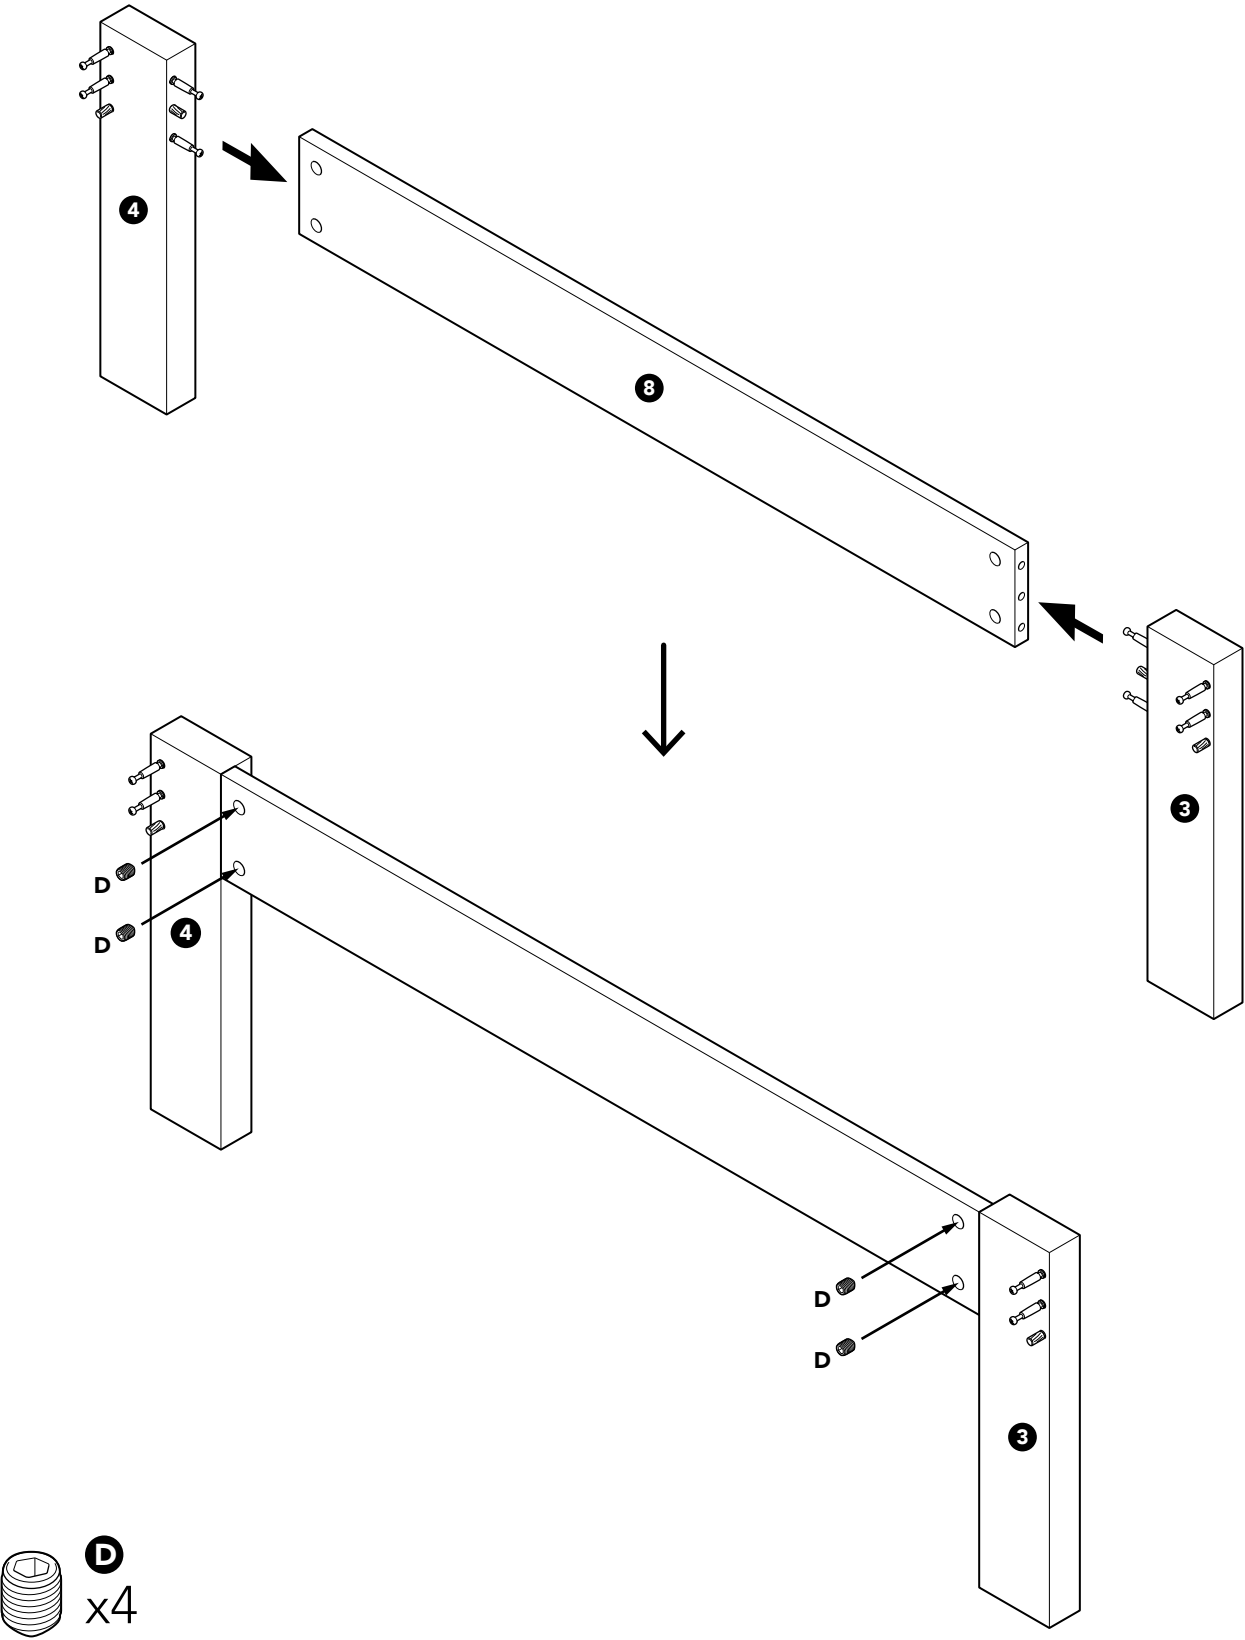


10

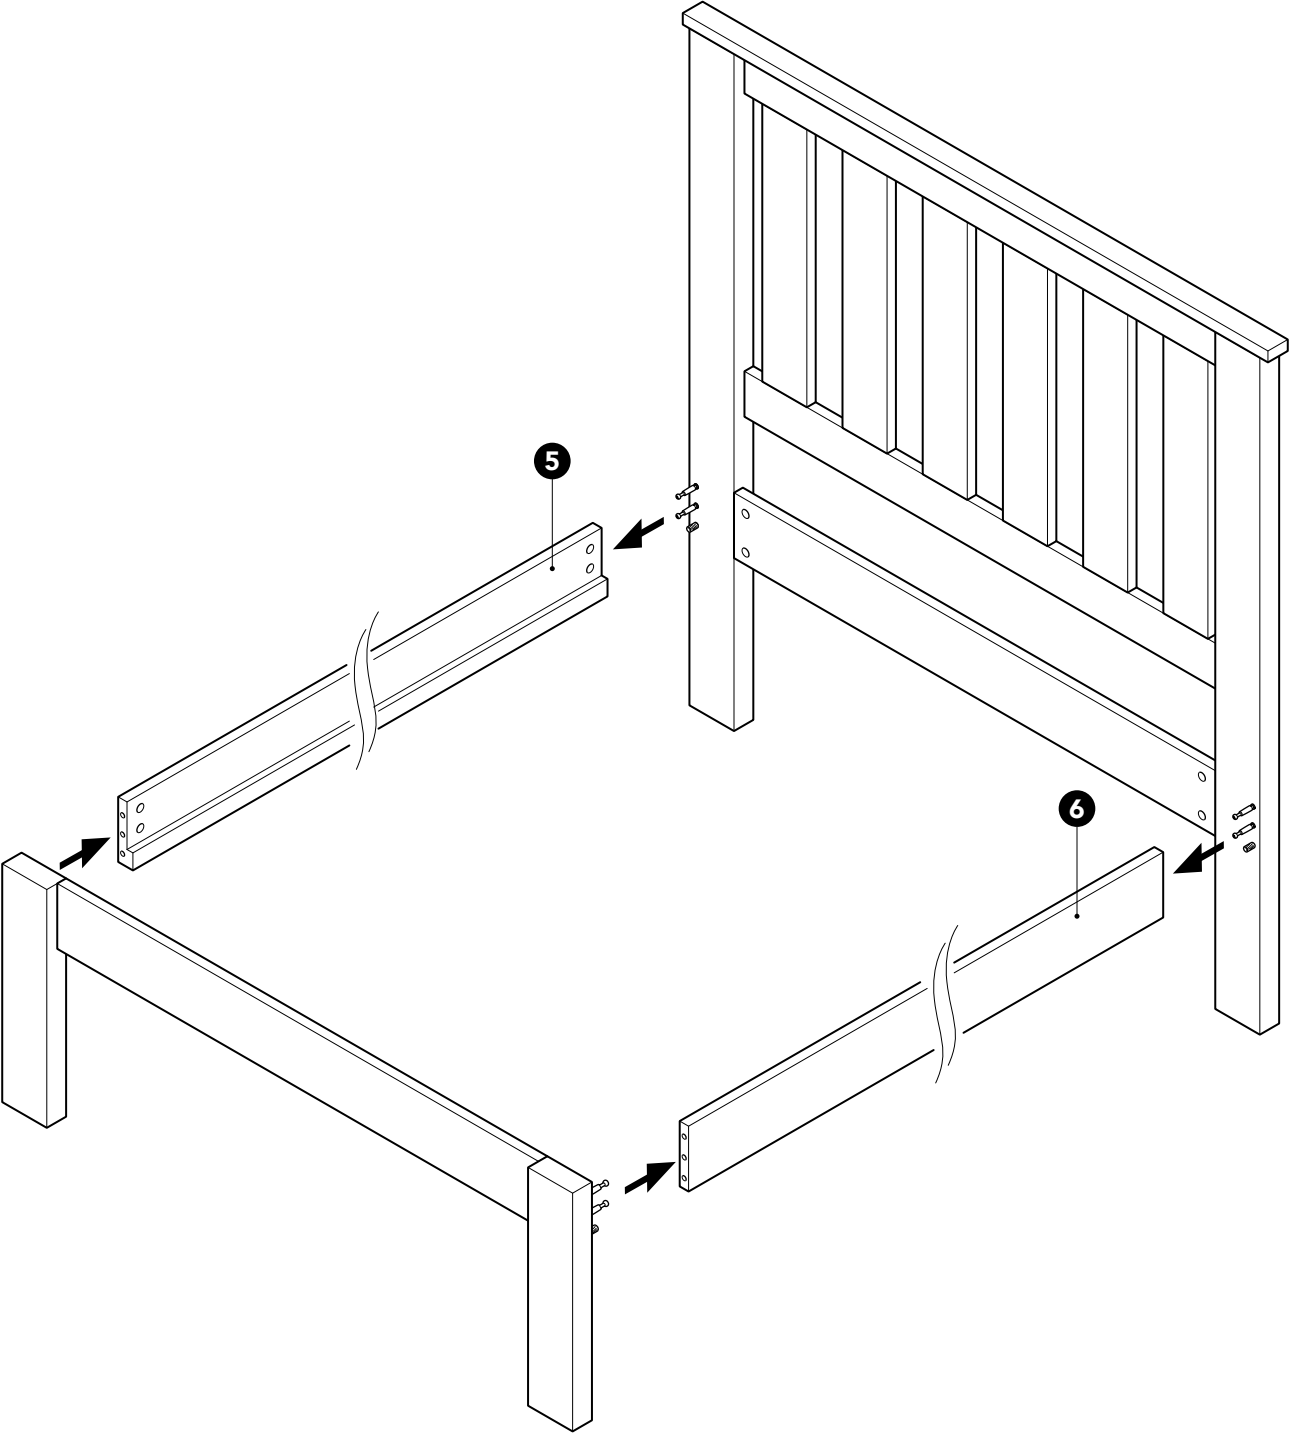

11

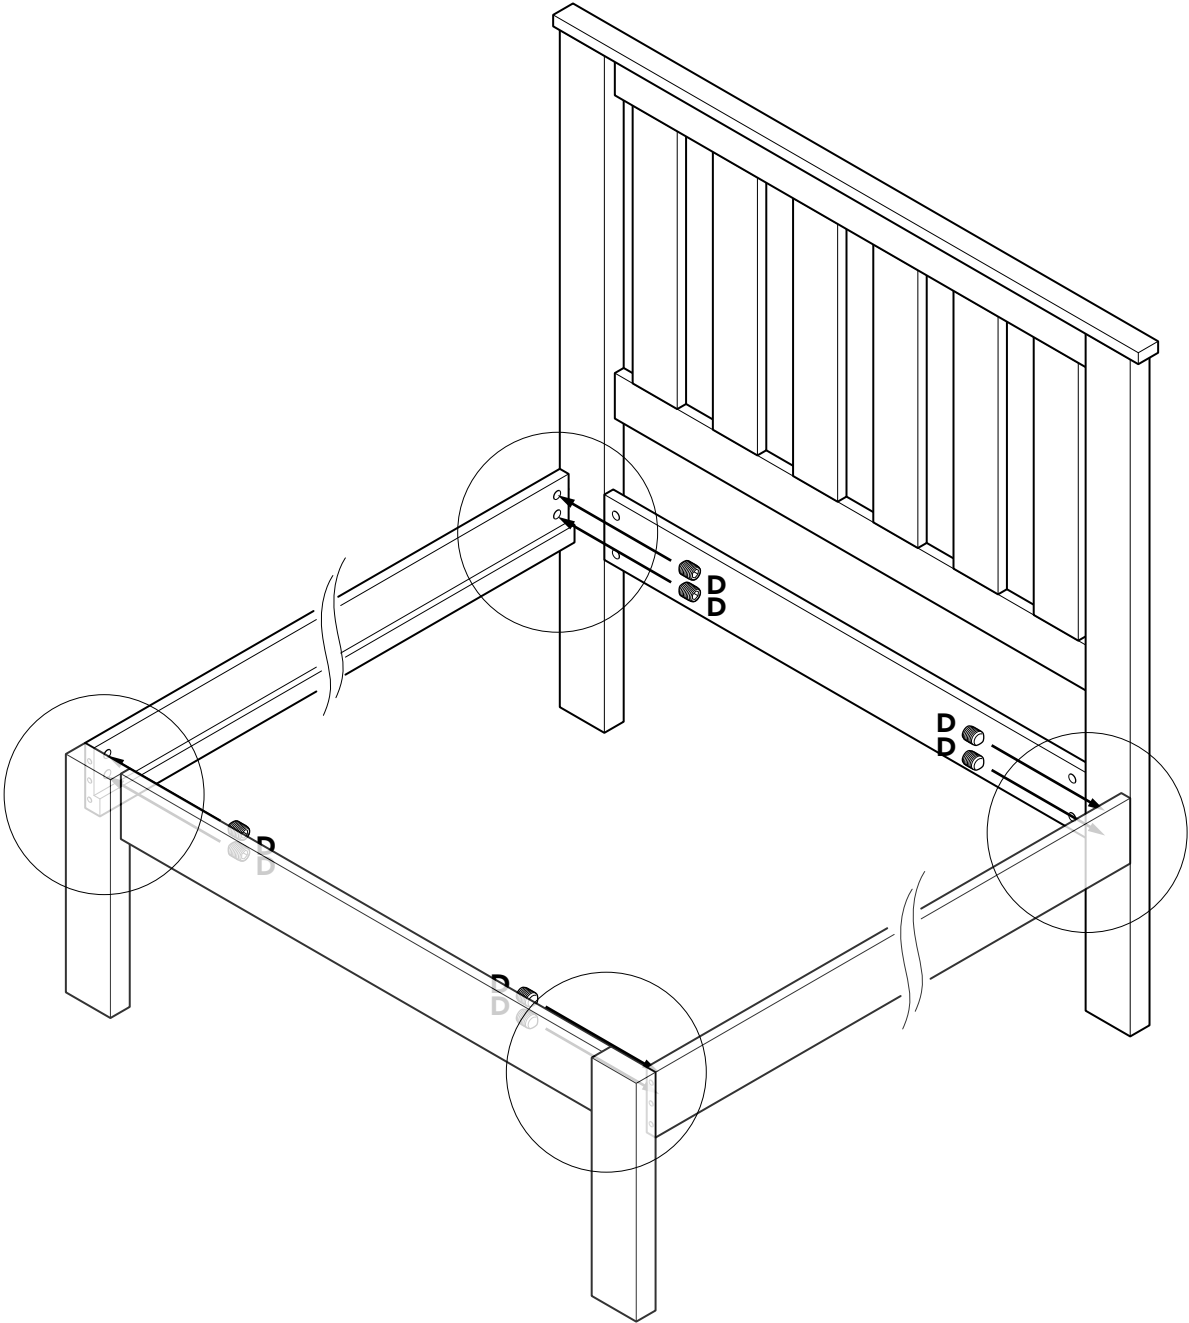

12

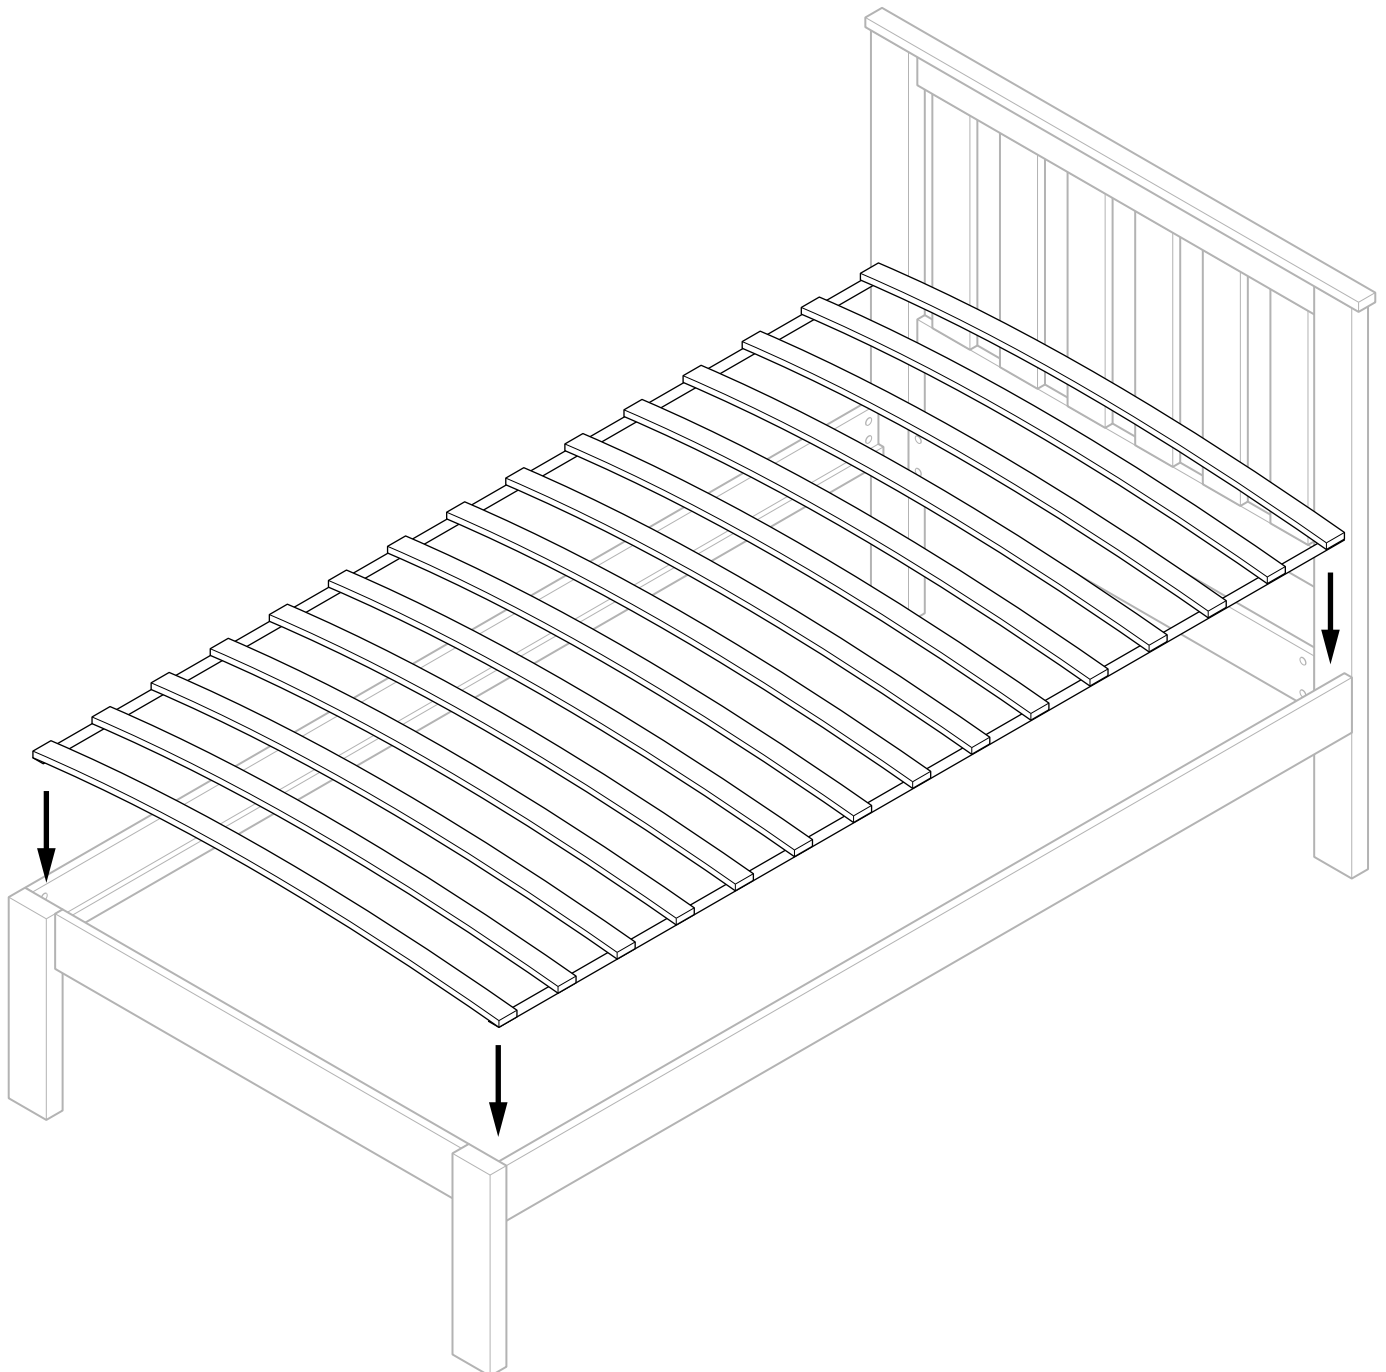

13

