

## Important Tips!

Always use caution during hot weather as the mount may become extremely hot – especially in direct sunlight. Never leave your phone in the mount unattended during hot weather.

Always allow the phone holder to cool down before use. Failure to do so could damage the rubber pads on the universal holder.

Some local governments have specific rules, regulations and laws regarding how phone mounts must be used and positioned as it relates to driver visibility. Please ensure your installation complies with the laws in your area and never obstruct or impair the driver's ability to have an unobstructed view of the road.

It is the sole responsibility of the customer/user (and not Bulletpoint Mounting Solutions) to know and understand the laws in your area and any other area where the mount is used. Bulletpoint Mounting Solutions is not responsible for illegal or improper use of mounting hardware.

Never place any device in the way of any SRS airbag system for any driver or passengers. Check with your local dealership or your vehicle manufacturer to understand how your airbag deploys in the event of an accident.



**Bulletpoint Mounting Solutions**

Ford Ranger 2019+



## Thank you for choosing Bulletpoint Mounting Solutions!

Congratulations on your purchase! Our industry-leading mounts were developed by automotive enthusiasts with more than two decades of industry experience.

### **Tough. Solid. Secure.**

#### **Exclusive Carbon Fiber/Kevlar Hybrid Arms**

Our proprietary arms are engineered for added strength and durability

#### **Simple, Sturdy Design**

Your dash mount was developed with simplicity, function and durability in mind.

#### **Ready to Work**

Your dash mount kit has been tested in some of the harshest environments and includes everything you need for a quick/easy installation.


If you have any questions during the installation process, please email us at  
[support@bulletpointmountingsolutions.com](mailto:support@bulletpointmountingsolutions.com)



**Bulletpoint Mounting Solutions**

Ford F150Gen13

# Why Choose Bulletpoint Mounting Solutions?

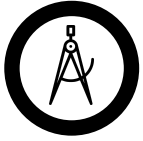

**Superior Engineering and Design** – Our engineers designed each of our products to exceed your expectations. Every aspect of your new mount was designed to exacting standards.



**Extreme Value** – We design every product with quality and affordability in mind. We think you'll agree that our products provide the best value for your money.



**Warranty** – We're so confident in our products that we offer an industry-leading limited lifetime warranty. If your product fails under normal use, simply return it to us and we will send you a replacement. No questions asked – period. See site for details.

## Veterans and Law Enforcement



Bulletpoint Mounting Solutions supports veterans, active-duty military and law enforcement officers. A portion of our profits are donated to organizations supporting our heroes.

Visit [BulletpointMountingSolutions.com](http://BulletpointMountingSolutions.com) for more information

## Installation

- Installation of your mounting base should take 10-20 minutes.
- It is recommended that you install the base at temperatures above 60 degrees Fahrenheit to avoid damaging/cracking the plastic dash tray.

## Installation

**Step 1** - Using the trim tool, carefully and gently remove the dash tray beginning at the front edge, right to left. When prying off the tray, we encourage the use of painter's tape in the areas used as a leverage point.

**Step 2** – Temporarily place the base on the dash tray in the desired position.

**Step 3** – You may use painter's tape on the dash tray when marking the hole locations. Using a screwdriver or punch, carefully mark/indent the location of the four holes located on the bottom of the base.

**Step 4** – Place the dash tray on a stable surface and use the small drill bit to drill 4 pilot holes, then the larger bit to enlarge the holes.

**Step 5** – Thoroughly clean the dash tray area along each edge where the red adhesive tape will make contact. Remove the red backing from the adhesive tape on the bottom of the mounting base.

**Step 6** – Carefully position the base onto the dash tray making sure the front and rear holes align - you may use the included bolts as a guide to ensure alignment. Once in position, press the base down firmly into position.

**Step 7** – Using the supplied nuts, washers and bolts, secure the base into position. Washers go on the underside of the tray. Do not overtighten.

**Step 8** – Reinstall the base by gently pushing it back into position.

**Step 9** – Allow the adhesive tape to cure for 24 hours before attaching the phone mount arm, holder, or other accessories to the base.

**Take pics of your installed mount and post them to Instagram or Facebook. Use the hashtags #bulletpointmounts and #mountit to be featured on our social media pages!**



**Bulletpoint Mounting Solutions**