


Why Choose Bulletpoint Mounting Solutions?

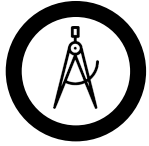

Superior Engineering and Design – Our engineers designed each of our products to exceed your expectations. Every aspect of your new mount was designed to exacting standards.



Extreme Value – We design every product with quality and affordability in mind. We think you'll agree that our products provide the best value for your money.



Warranty – We're so confident in our products that we offer an industry-leading limited lifetime warranty. If your product fails for any reason under normal use, simply return it to us and we will send you a replacement. No questions asked – period. *See site for details*



We support the Offroad Community – As avid off-road enthusiasts, we support off-road clubs in the U.S. and around the world.

Veterans and Law Enforcement



Bulletpoint Mounting Solutions supports veterans, active-duty military and law enforcement officers. A portion of our profits are donated to charities supporting our heroes.

Visit BulletpointMountingSolutions.com for more information

Installation

Installation of your mounting base should take 10-20 minutes. If you have any questions during the installation process, please reach out to us via email at support@bulletpointmountingsolutions.com

Step 1 – Remove the top portion of your Bronco RubiGrid™ base by unscrewing the 6 small bolts holding the top in place. Set the bolts aside for later use.

Step 2 – Clean the dash tray area of your Bronco where the RubiGrid™ adhesive tape will contact the dash. Make sure it is free of dust and dirt and completely dry.

Step 3 – Remove the adhesive backing from the RubiGrid™ base and carefully place the base into position making sure the adhesive tape makes good contact and that the OE "Accessory Ready" hole lines up properly.

Step 4 – Insert the provided 1/4-20 bolt into the "Accessory Ready" hole on the RubiGrid™ base and use the included wrench to tighten the bolt while being careful not to overtighten.

Step 5 – Use the included self-tapping screws to secure the base in the six locations on the base (two on the outer portions of each side and one on the sloped portion of the base closest to the driver and passenger). **IMPORTANT:** Push down on the base to ensure proper contact of the adhesive tape. Do not overtighten the screws.

Step 6 – Set the RubiGrid™ top in place to determine where you would like the mounting balls to be located for optimal device usage. Once you have determined the ideal mounting locations remove the grid from the dash tray.

Step 7 – Using the supplied bolts, washers and nylon nuts, secure the AMPS balls in the desired location. Washers go on the underside of the RubiGrid™ base. Tighten the nylon nuts.

Step 8 – Once the mounting balls are in the desired location, re-attach the RubiGrid™ top to the base using the small bolts removed in Step 1.

Step 9 – With the AMPS balls in place and the RubiGrid™ secured to the base, attach the mounting arm, phone holder and other device holders to the mounting balls.

Step 10 – Take pics of your installed mount and post them to Instagram or Facebook. Use the hashtags #bulletpointmounts and #mountit to be featured on our social media pages!

Visit BulletpointMountingSolutions.com to view our full catalog of accessories for the RubiGrid™ including:

- Additional AMPS balls
- Device holders
- Tablet holders
- Other accessories



Bulletpoint Mounting Solutions