

Important Tips!

Always use caution during hot weather as the mount may become extremely hot – especially in direct sunlight. Never leave your phone in the mount unattended during hot weather.

Some states have specific rules, regulations and laws regarding how phone mounts must be used and positioned as it relates to driver visibility. Please ensure your installation complies with the laws in your area and never obstruct or impair the driver's ability to have an unobstructed view of the road. It is the sole responsibility of the customer/user (and not Bulletproof Mounting Solutions) to know and understand the laws in your area and any other area where the mount is used. Bulletproof Mounts is not responsible for illegal or improper use of mounting hardware.

Never place any device in the way of any SRS airbag system for any driver or passengers. Check with your local dealership or your vehicle manufacturer to understand how your airbag deploys in the event of an accident.



While our mounts are among the most durable in the industry they are not actually bulletproof and should not be used in an attempt to stop bullets. Do not use them to protect yourself during a robbery or other dangerous situation.



Thank you for choosing Bulletproof Mounting Solutions!

Congratulations on your purchase! Our industry-leading mounts were developed by off-road enthusiasts with more than two decades of automotive industry experience. Bulletproof Mounting Solutions work hard, so you can play hard.

Exclusive Carbon Fiber/Kevlar Hybrid Arms

Our proprietary arms are engineered for added strength and durability

Double Barrell Design

All of our dash mounts come standard with two 20mm mounting locations

GoPro Ready

All of our dash mount kits feature a GoPro mounting solution so you're ready to capture your off-road adventures

If you have any questions or comments during the installation process, please contact us via our Facebook page or email support@bulletproof-mounts.com



 **BULLETPROOFMOUNTS**

bulletproof-mounts.com

 **Bulletproof Mounts**

support@bulletproof-mounts.com

 **BULLETPROOFMOUNTS**

bulletproof-mounts.com

 **Bulletproof Mounts**

Why Choose Bulletproof Mounting Solutions?



Superior Engineering and Design – Our merchant team and engineers designed each of our products to exceed your expectations. Every aspect of our mounting solutions was designed to exacting standards.



Extreme Value – We design every product with quality and affordability in mind. We think you will agree that our products provide the best value for your money.




Warranty – We're so confident in our products that we offer an industry-leading lifetime warranty. If your product fails for any reason under normal use, simply return it to us and we will send you a replacement. No questions asked – period.



We support the Jeep Community – As avid off-road enthusiasts we support off-road clubs in the U.S. and around the world.

Veterans and Law Enforcement

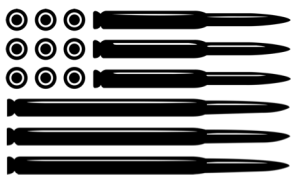

Bulletproof Mounting Solutions supports veterans, active duty military and law enforcement officers. 10% of our profits are donated to select charities supporting our heroes.

Visit www.bulletproof-mounts.com for more information

Installation

Installation of your Bulletproof brand mounting base should take 5-15 minutes. If you have any questions during the installation process please reach out to us via email at support@bulletproof-mounts.com or message us via our Facebook page.

Step 1 – Remove the rubber cover from the dash tray and set aside.

Step 2 – Use a small Phillips-Head head screwdriver to remove the OEM fastener screw. For JKs this is located in the center. The JL fastener can be found on the angled portion on the driver side of the tray.

Step 3 – Set the mounting base in place taking note of where the adhesive tape contacts the tray. JL OWNERS – For added stability we include three **optional** screws to secure the base. For those who wish to use the extra screws please use a sharpie or a small punch to mark the holes that will secure the base to the dash tray. Remove the mounting base and carefully punch or drill where the marks are located.

Step 4 – Thoroughly clean the tray where the adhesive tape will make contact.

Step 5 – Remove the 3M adhesive tape backing and carefully press the base into place ensuring alignment of the fastening holes.

Step 6 – Reinstall the OEM fastening screw. JL OWNERS – Use the additional supplied screws if desired.

Step 7 - Allow the 3M adhesive tape to cure for 24 hours.

Step 8 – JL OWNERS – Use a pair of scissors to carefully trim the dash tray liner to the proper length for a finished appearance.

Step 9 – Attach the phone mount arm, phone holder and camera mount (optional) to the base and you're done!

Step 10 – Take pics of your installed mount and post them to Instagram or Facebook using the hashtags **#bulletproofmounts** and **#mountit** to be featured on our social media pages!

 **BULLETPROOFMOUNTS**

bulletproof-mounts.com

 **Bulletproof Mounts**