



## 16 SHAFT LOOM STAND

### Tools Required



### Hint

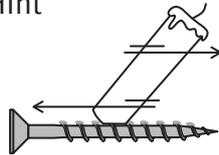

To make assembly easier use candle wax on the screws.

### Hardware included



1. Using 4 x 50mm/2" screws each side, attach the sides to the spacer rails. Make sure the 2 spacer rails are the same length. Use candlewax on the screws to make assembly easier.



2. Make sure the rounded end of the sides are facing down. The holes for the buffers on the base of the loom should be facing up.



3. Attach the shelves using 2 x 50mm/2" screws for each shelf.



4. Take the spacer rail with the Ashford logo on it and the 2 legs that correspond with the holes in the spacer rail and attach them with 2 x 50mm/2" screws each side.



5. Assemble the other 2 legs and spacer rail with 2 x 50mm/2" screws each side.



6. Position the legs with the wooden spacer between them, then insert the 2 x 75mm/3" bolts through from the inside. Tap the heads of the bolts into the wood and then secure with washers and nyloc nuts.



7. Lay the loom stand base on it's side and place the top of the stand in position - make sure the front of the shelves are at the opposite end of the spacer rails with the Ashford logo.

Attach the legs to the top frame with 4 x 50mm/2" bolts through from the inside. Tap the heads of the bolts into the wood and secure with washers and knobs.

8. Locate your Sixteen shaft loom onto the base and you are now ready to weave.



LSSS610120215V03