

# Wind Deflector

---


Included:



**A**  
X 1



**B**  
X 1

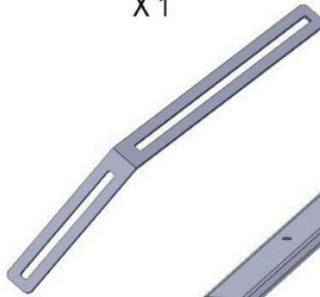

**C**  
X 3



**D**  
X 1



**E** x2



**F** x3



**G** x3



**H** x6



**I** x2



**J** x2



**K** x2



Love People, Love Nature  
**iKAMPER**

# Wind Deflector

---

Please follow these instructions for an optimal installation.

- **STEP 1:** Remove the protective vinyl covering from panel [A].
- **STEP 2:** Take the rubber strap [B] and wrap it around panel [A]. The harder rubber side should face the front of panel [A] with the iKamper logo, and the softer rubber side facing the back towards the vehicle.
- **STEP 3:** Insert 3 of the short bolts [F] into the front of panel [A].
- **STEP 4:** Take metal piece [C] and place the short side over bolt [F]. Then screw on head nut [H], and repeat for the other two bolts.
- **STEP 5:** Slide 3 long bolts [G] into the side of rail [D].
- **STEP 6:** Place rail [D] over the 3 metal pieces [C], insert the 3 bolts [G], and screw on the 3 head nuts [H]. The thicker end of rail [D] should be facing panel [A].
- **STEP 7:** Screw square nuts [J] on to bolts [K], and insert them in the holes on top of rail [D]. The wider sides should be facing the front and back of the rail. Loosely screw on head nuts [I].
- **STEP 8:** Remove the two plastic pieces covering the front of rails under the RTT. - Insert the square nuts [J] into the mounting rails, choose the appropriate position, and tightly screw on the head nuts. - Put the cover pieces back in place in front of the rails.
- **STEP 9:** Place the 2 plastic pieces [E] on the sides of rail [D].
- **STEP 10:** Adjust the height and position of the Wind Deflector by unscrewing the head nuts [I] and tightening them once the Wind Deflector is in the right position.



If you have any questions, please contact us at [support@ikamper.com](mailto:support@ikamper.com)