


SHAD

HONDA FORZA 125i '15 KIT RESPALDO H0FR15RV

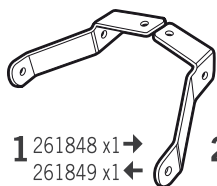

1 261848 x1 →
261849 x1 ←



2 260740 x2
Ø20 Ø11 x 11



3 303025
x4
Ø10



4 304116 x2
M10 x 25
Din 961



5 261850 x1



6 304192 x2
M10 x 40
Din 961




7 304081 x2
M8 x 20
Din 7380



8 303020
x4
Ø8



9 302024
x2
M8

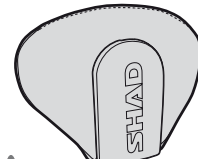

! NOT INCLUDED

! WARNING!

(GB)

To complete the set, remember to purchase the backrest with your preferred color. Do not fully tighten. Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

(E)

Para completar el conjunto, recuerde adquirir el respaldo con su color preferido. No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

(D)

Wählen Sie die Rückenlehne in der passenden Farbe um den Satz zu vervollständigen. Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.

(I)

Per completare il set, non dimentichi di acquistare lo schienale con il suo colore preferito. Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

(F)

Pour compléter l'ensemble, rappelez d'acheter le dossier avec votre coloris préféré. Ne pas serrer les vis avant d'être sûr que le KIT est correctement monté et ajusté.

