



ESCAPE GEAR


AGAINST THE ELEMENTS

T: +27(21) 706-0440

e: orders@escapegear.co.za

w: www.escapegear.co.za

TYPICAL SUV/STATION WAGON FITTING INSTRUCTIONS

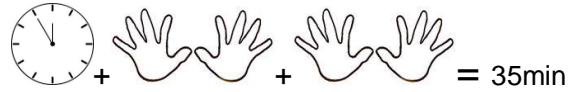

VERY IMPORTANT

- a.) PLEASE READ THESE INSTRUCTIONS CAREFULLY BEFORE COMMENCING WITH ANY FITMENT.
-
-

TOOLS AND MATERIALS REQUIRED TO FIT

Clean hands, short fingernails and no open wounds.

CAUTION

Ensure that your workmanship is of the highest professional standard and that you do not soil, scratch or damage the vehicle or accessory you are about to fit.

Ensure that you make provision for a clean area, to place components removed.



ESCAPE GEAR










AGAINST THE ELEMENTS

T: +27(21) 706-0440

e: orders@escapegear.co.za

w: www.escapegear.co.za

INSTALLATION PROCEDURE - Remove all headrests and loosen all webbing straps and buckles on seat covers.

<p style="text-align: center;">STEP 1</p> 	<p style="text-align: center;">STEP 2</p> 	<p style="text-align: center;">STEP 3</p> 
<p>Passenger seat. Pull cover over seat bottom and feed buckles through the gap between backrest and seat bottom.</p>	<p>Passenger seat. Feed webbing straps to the buckles – now behind the seats. (2 front straps to 2 middle buckles and 2 side straps to 2 side facing buckles) Smooth out covers and tighten straps</p>	<p>Passenger seat. Pull backrest cover over the backrest (side pocket should be facing to the inside of vehicle) and feed Velcro through the gap between backrest and seat bottom.</p>
<p style="text-align: center;">STEP 4</p> 	<p style="text-align: center;">STEP 5</p> 	<p style="text-align: center;">STEP 6</p> 
<p>Passenger seat. Position and smooth out seat cover and join Velcro together. (This can be easily done by starting in the middle and working your way out to each end. Driver seat – as per passenger seat</p>	<p>Consol cover. Carefully slide elasticized webbing to fit the underside of console.</p>	<p>Consol cover. Now fold the sides of the consol cover over and adjust for a neat fit.</p>
<p style="text-align: center;">STEP 7</p> 	<p style="text-align: center;">STEP 8</p> 	<p style="text-align: center;">STEP 9</p> 
<p>60 Rear bench rest. Begin fitting by sliding the built-in cover like you would pull a sock on your foot.</p>	<p>60 Rear bench rest. Put cover on as you would pull a jersey.</p>	<p>60 Rear bench rest. Tuck the fabric under the 60 bench backrest (it will be easier if you flip the bench forward) and fasten the Velcro together. 40 Rear bench rest – as per 60.</p>



ESCAPE GEAR

AGAINST THE ELEMENTS

T: +27(21) 706-0440

e: orders@escapegear.co.za

w: www.escapegear.co.za

STEP 10



60 Rear bench seat. Undo webbing and fit the cover like you would put a fitted sheet on a mattress.

STEP 11



60 Rear bench seat. Flip the 60 rear rest forward. Thread webbing straps under and around the sides of the seat (4 webbing straps in total), attach to buckles and tighten. Smooth out fabric for a neat fit. **40 Rear bench rest** – as per 60.

STEP 12



Driver side Jump Seat – backrest. Put jump seat into “sitting” position and fit backrest cover like you put a jersey on. Tuck the fabric under the backrest (it will be easier if you flip the backrest forward)

STEP 13



Driver side Jump Seat – backrest. Fasten the Velcro together. Split and refasten the Velcro, and smooth out fabric for a neat fit.

STEP 14



Driver side Jump Seat – seat. Loosen webbing and fit seat cover as you would a fitted sheet on a mattress. Thread circumference webbing through loop and tighten. Flip seat into “up” position, thread webbing to buckles and tighten. **Passenger side Jump Seat** – as per driver side.

STEP 15



Headrests. Fit headrest covers. Match piping to headrest to determine right way around. Once seat covers are fitted, put all headrests back into their seat slots. Pull down for snug fit.

ENSURE THAT VEHICLE IS LEFT UNSCRATCHED, CLEAN & TIDY AND FREE OF ANY DUST, GRIME OR GREASE