



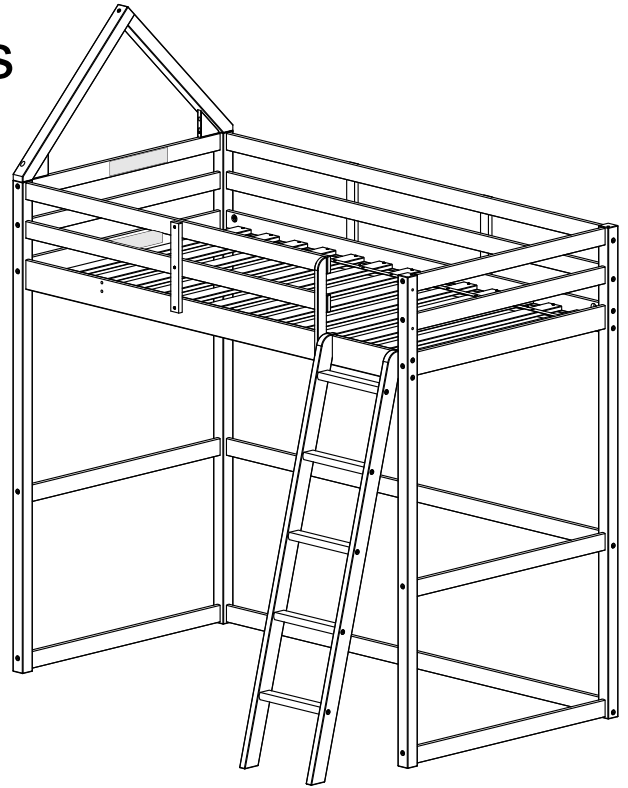

Casita LOFT BED

Options

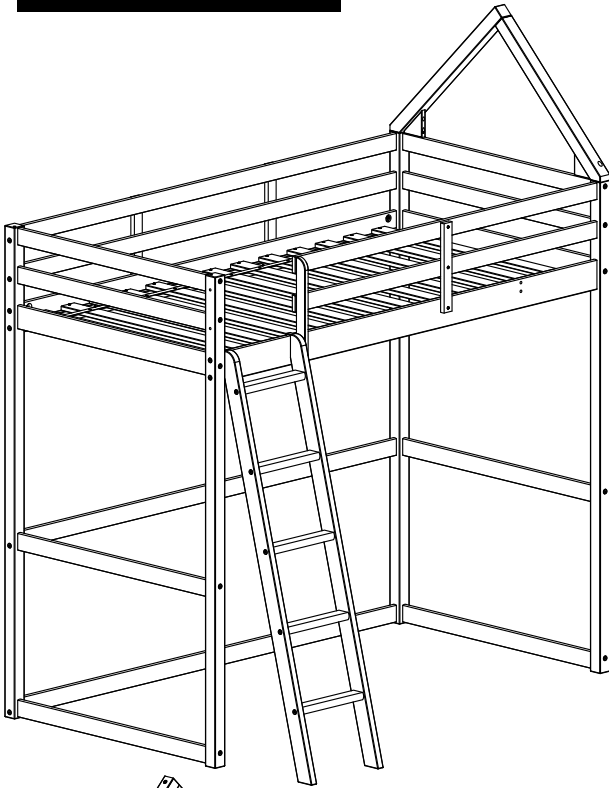

**READ ALL INSTRUCTIONS BEFORE ASSEMBLING BUNK BED.
KEEP INSTRUCTIONS FOR FUTURE USE.
THE ASSEMBLY OF THIS PRODUCT REQUIRES TWO ADULTS.**



WARNING:

ADULT ASSEMBLY REQUIRED.

Product must be assembled by an adult before use.

After assembly has been completed, all remaining materials and packaging are to be recycled according to the regulations in force and kept out of children's reach. Components left after the assembly are not intended for play.

Failure to follow these warnings and the assembly instructions could result in serious injury or death.

Bunk bed is intended for home use, not to be used in public institutions. (hospitals, daycares, etc.)



WARNING:

California Proposition 65

This product can expose you to chemicals including wood dust, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to www.p65warnings.ca.gov.



WARNING:

SIZE OF MATTRESS AND FOUNDATION

This bed is designed to use a twin mattress (37½" x 38½" x 74-75"). Mattress not included. And wooden slat sets provided by the manufacturer.

The total thickness of the mattress and support must not exceed 8 inches.

NOTE: There MUST be at least 5 inches from top surface of mattress to top edge of guardrails.



WARNING:

To help prevent serious or fatal injuries from entrapment or falls:

- **STRANGULATION HAZARD** - Never attach or hang items to any part of the bed that are not designed for use with the bed; for example, but not limited to hooks, belts, strings and jump ropes.
- Follow the information on warning labels on bed and carton. **DO NOT REMOVE LABELS FROM BEDD.**
- Always use the recommended size of mattress or mattress support, or both, to help prevent the likelihood of entrapment or falls.
- Ensure thickness of mattress and foundation combined does not exceed 8 inches and that the mattress surface is at least 5 inches below upper edge of guardrails.
- Periodically check and ensure that the guardrail, ladder and other components are in their proper position free from damage, and that all connectors are tight.
- Do not use substitute parts. Contact the distributor for replacement parts.
- Never allow a child under 6 years on upper bunk.
- Prohibit more than one person on upper bunk.
- The use of a night light may provided added safety for child on upper bunk.
- Prohibit horseplay on or under beds and prohibit jumping on or from bed.
- Always use ladder for entering or leaving upper bunk.
- If the bunk bed will be placed next to a wall, the guardrail that runs the full length of the bed should be placed against the wall to prevent entrapment between the bed and the wall.
- Always use guardrails on both long sides of the upper bunk.
- The use of water or sleep flotation mattress is prohibited.
- Keep these instructions for future reference.

FOR MISSING PARTS OR HARDWARE:

DO NOT CONTACT THE STORE WHERE YOU MADE YOUR PURCHASE. Please contact the manufacturer directly at customercare@pkolino.com or 888-403-8992. For customer service cases involving hardware please provide the part number.

DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED.


P'kolino products meet or exceed US, EU, and Canadian safety standards. REG. NO. PA-27620 (CN)

P'kolino (pee-ko-lee-no) © 2020 P'kolino, LLC. All Rights Reserved. All New Materials: Pine Wood. FSC certified. Non toxic and VOC free finish. Made in Brazil.





Questions or comments? Please email: customercare@pkolino.com Or write to: P'kolino Studio • 7300 NW 35th Ave • Miami, FL 33147, USA. August 2022

This Box Contains:

Loft Bed Parts:

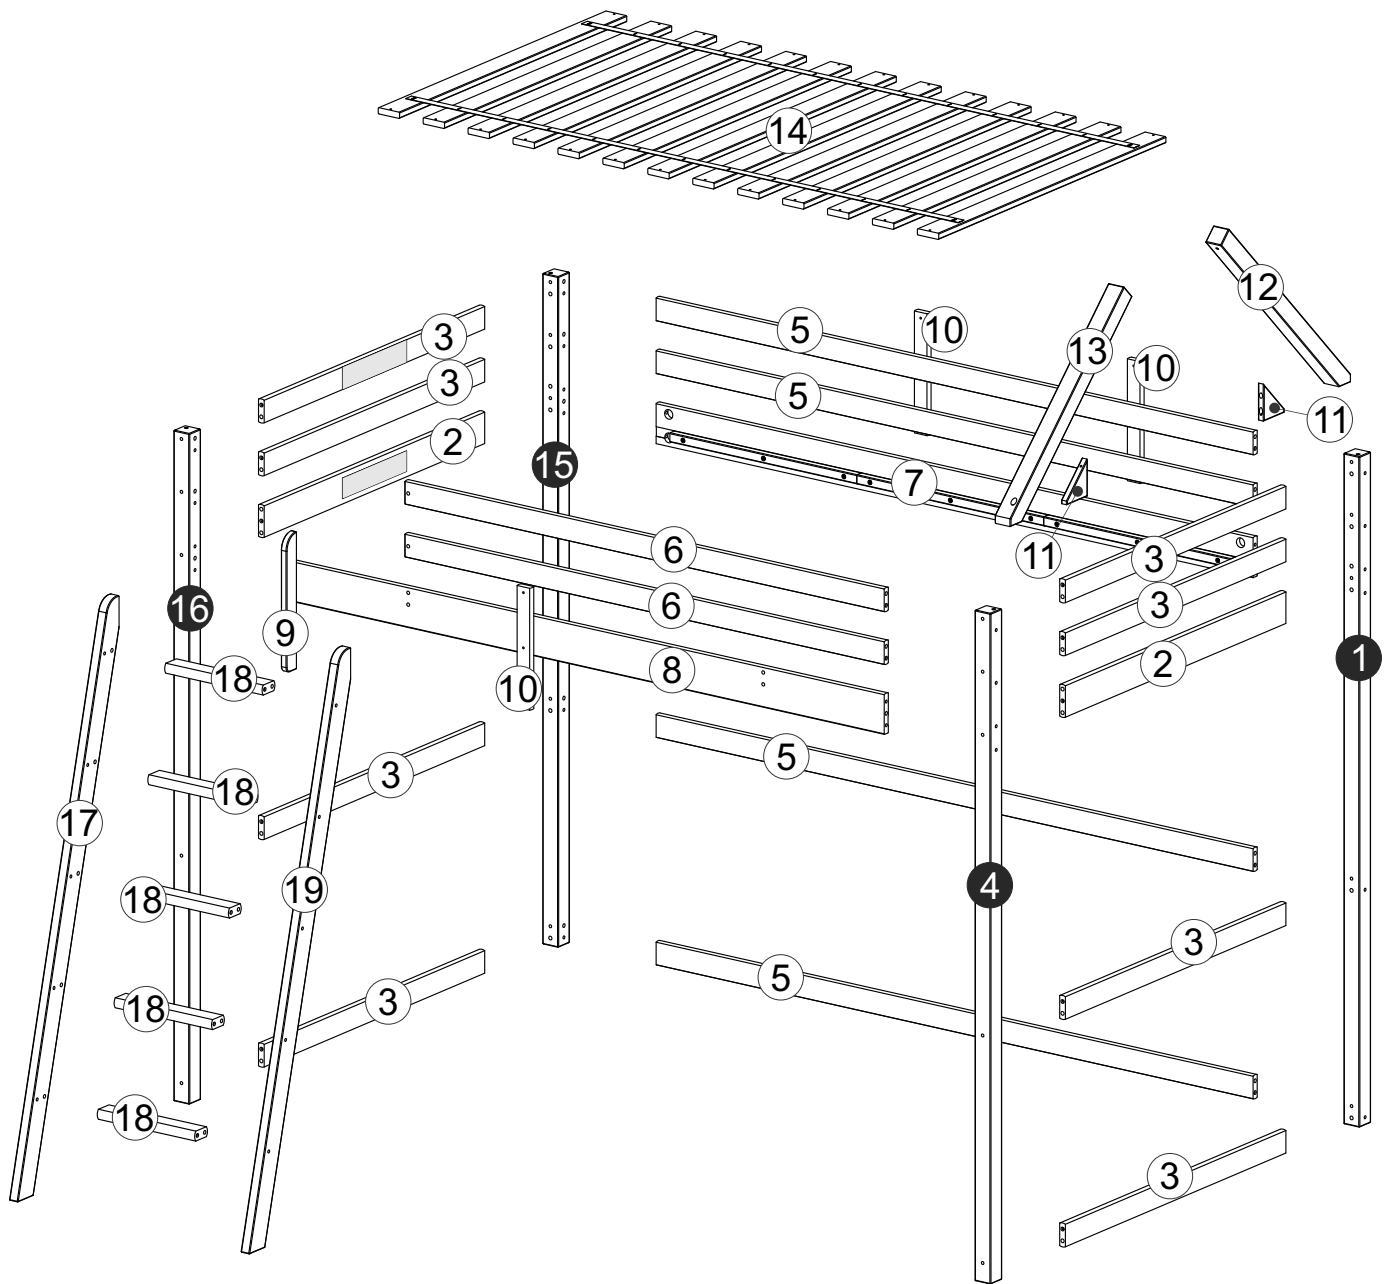

Tools required

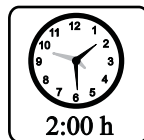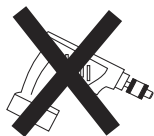


You will need a Phillips head screwdriver and a hammer


P'kolino products meet or exceed US, EU, and Canadian safety standards. REG. NO. PA-27620 (CN)

P'kolino (pee-ko-lee-no) © 2020 P'kolino, LLC. All Rights Reserved. All New Materials: Pine Wood. FSC certified. Non toxic and VOC free finish. Made in Brazil.
Questions or comments? Please email: customer@pkolino.com Or write to: P'kolino Studio • 7300 NW 35th Ave • Miami, FL 33147, USA. August 2022


Identify the size and type of hardware using the illustration below:




48- wooden dowels 1 9/16"
(10 x 40mm) **(A)**

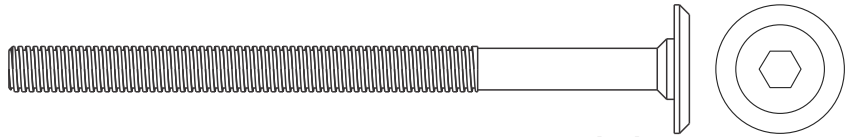


8- bolts 1/4" x 3 1/2" (1/4 x 90mm) **(B)**

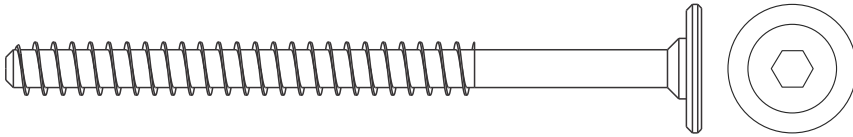


30- bolts 3 1/2" (7 x 90mm) **(C)**




3- bolts 3 1/8" (7 x 80mm) **(D)**

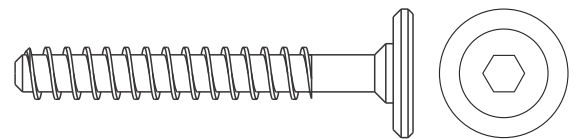


14- bolts 2" (7 x 50mm) **(E)**




6- screws 5/8" (3.5 x 16mm) **(F)**




39- screws 1 3/16" (4 x 30mm) **(G)**

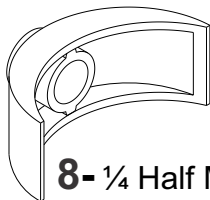


8- 1/4 Half Moon Nut **(H)**

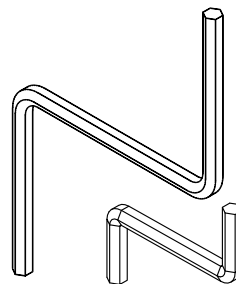

1- allen wrench **(I)**

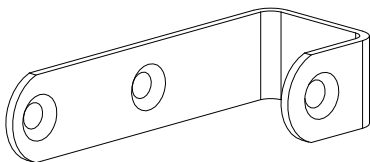

2- Hook Ladder **(J)**



2- Protector **(K)**

FOR MISSING PARTS OR HARDWARE:

DO NOT CONTACT THE STORE WHERE YOU MADE YOUR PURCHASE.

Please contact the manufacturer directly at customercare@pkolino.com or 888-403-8992.


For customer service cases involving hardware please provide the part number.

Assembly Instructions

THE USE OF POWER TOOLS IS NOT RECOMMENDED BECAUSE THEY CAN DAMAGE HARDWARE AND/OR SPLIT THE WOOD.

Step 1






Insert 24 wooden dowels (A) into the holes, as shown in the diagram.

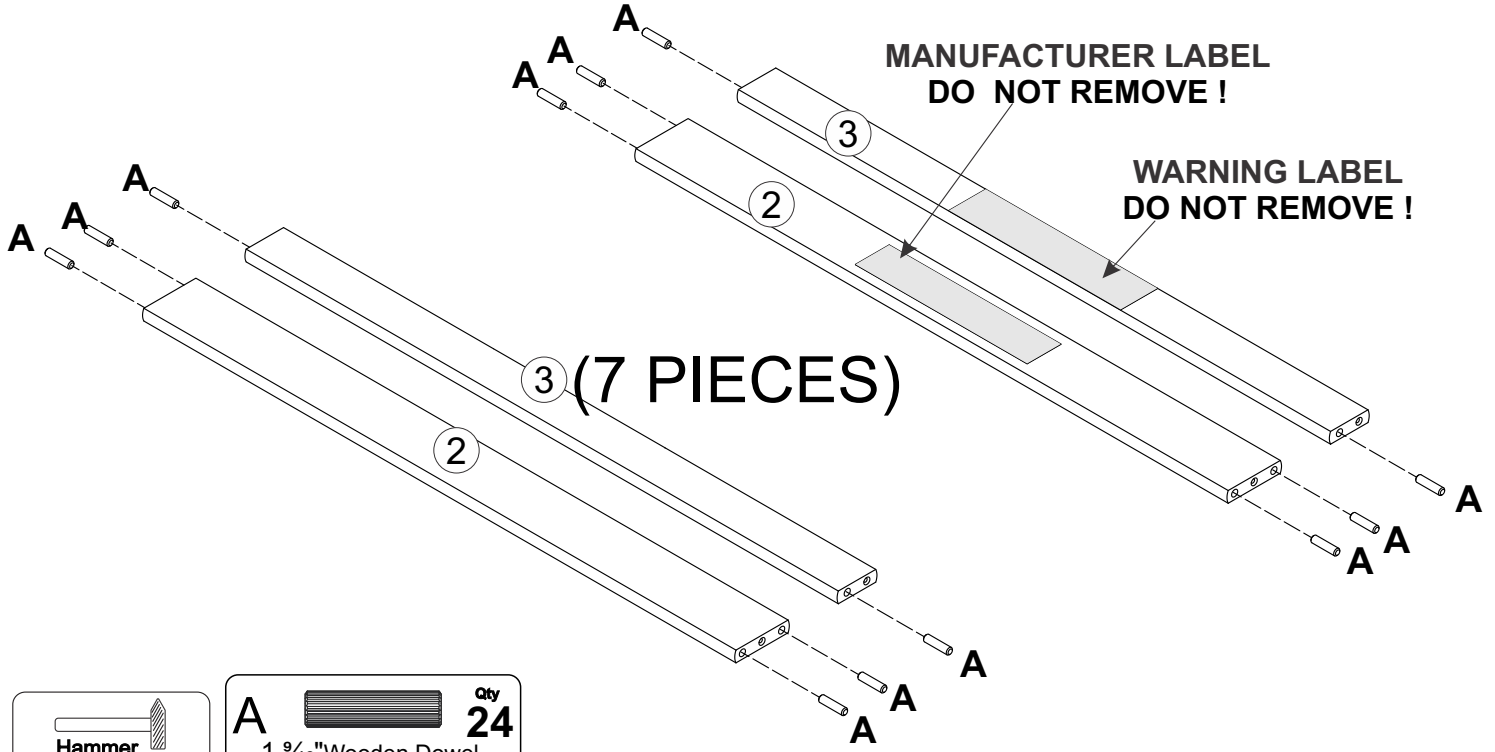


Step 2

Footboard

Attach parts 2 and 3 on to part 16 with 5 bolts (C), using 1 Allen wrench (I).

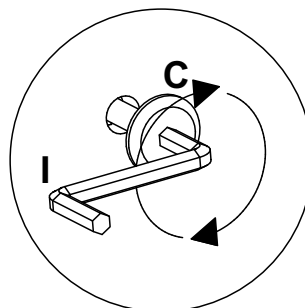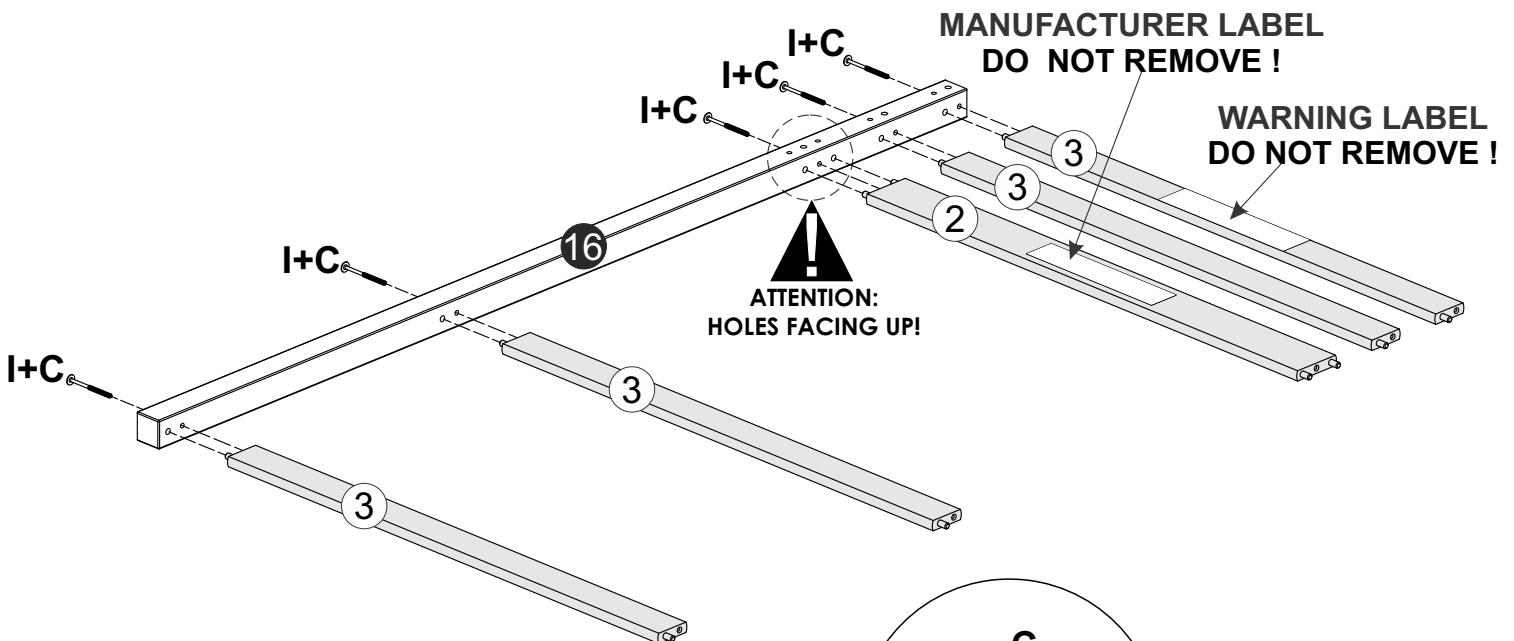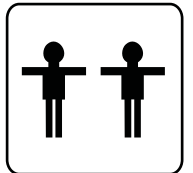




Assembly Instructions

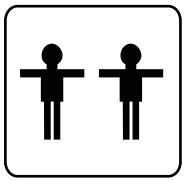

Step 3

Footboard






Attach parts **2** and **3** on to part **15** with 5 bolts (**C**), using 1 Allen wrench (**I**).

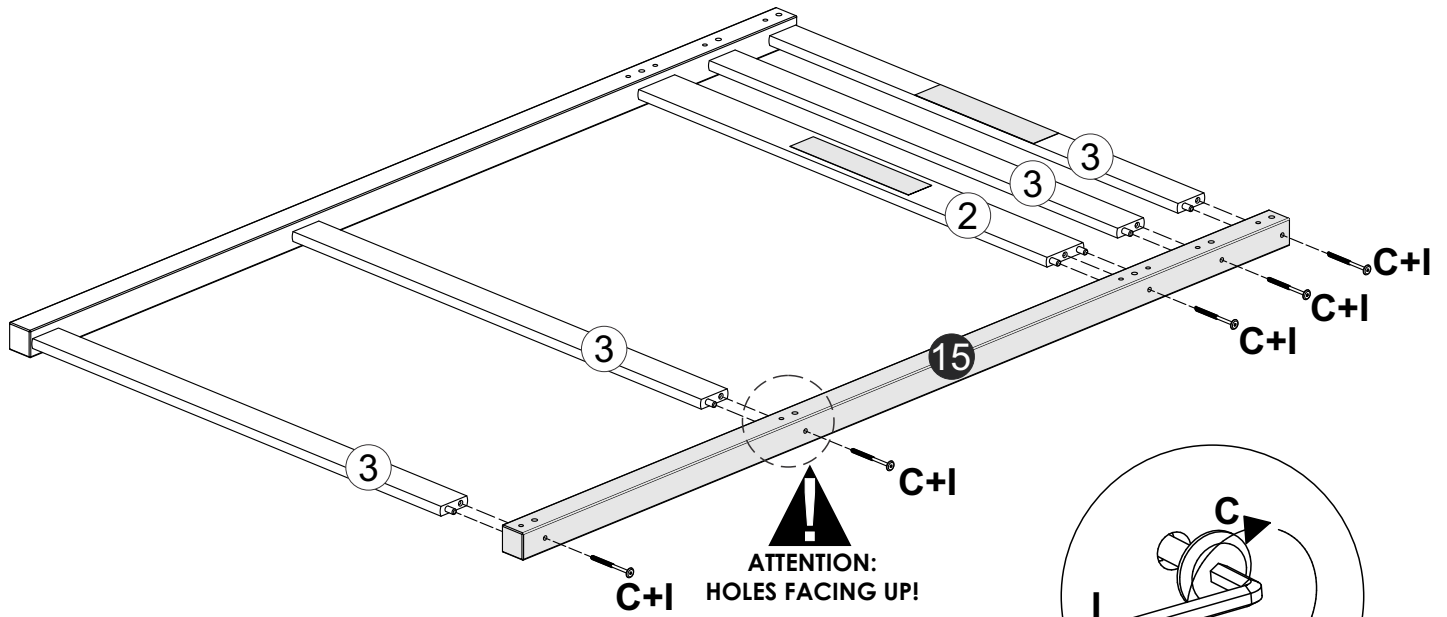


Step 4

Headboard

Attach parts **2** and **3** on to part **1** with 5 bolts (**C**), using 1 Allen wrench (**I**).

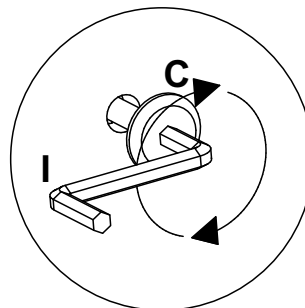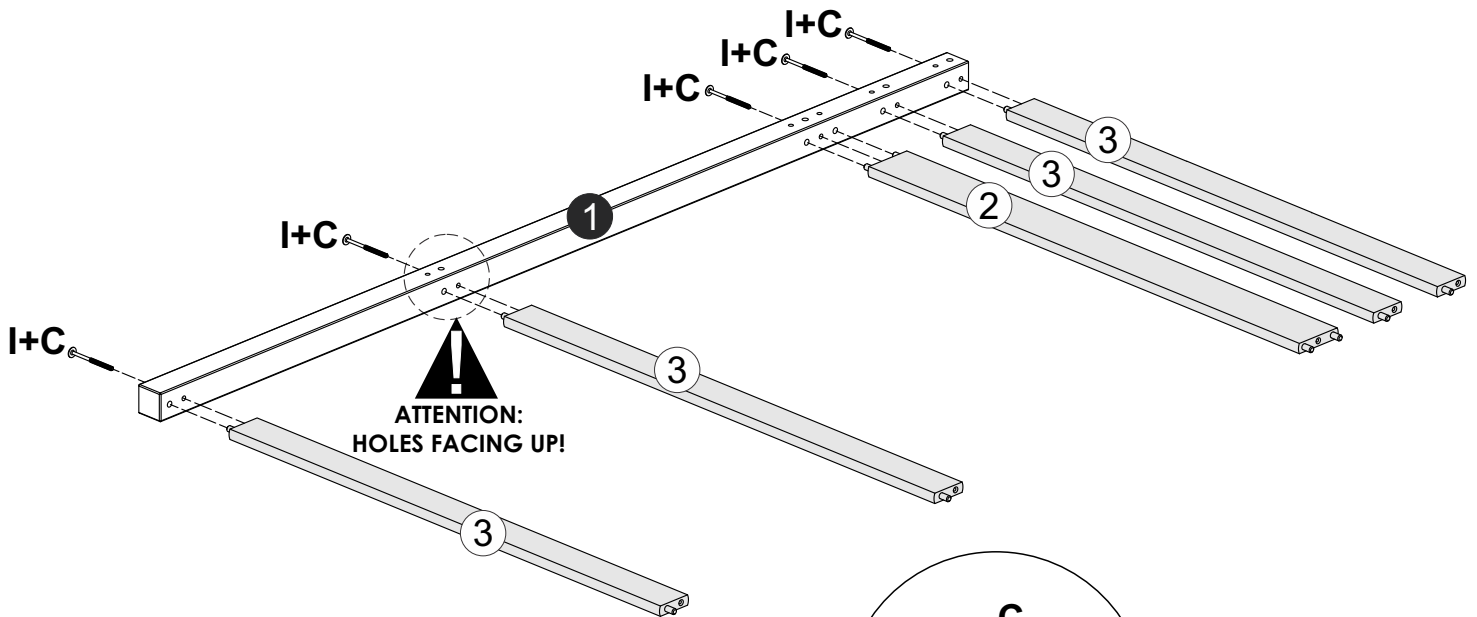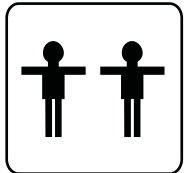


Assembly Instructions

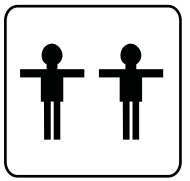

Step 5

Headboard


Attach parts 2 and 3 on to part 4 with 5 bolts (C), using 1 Allen wrench (I).

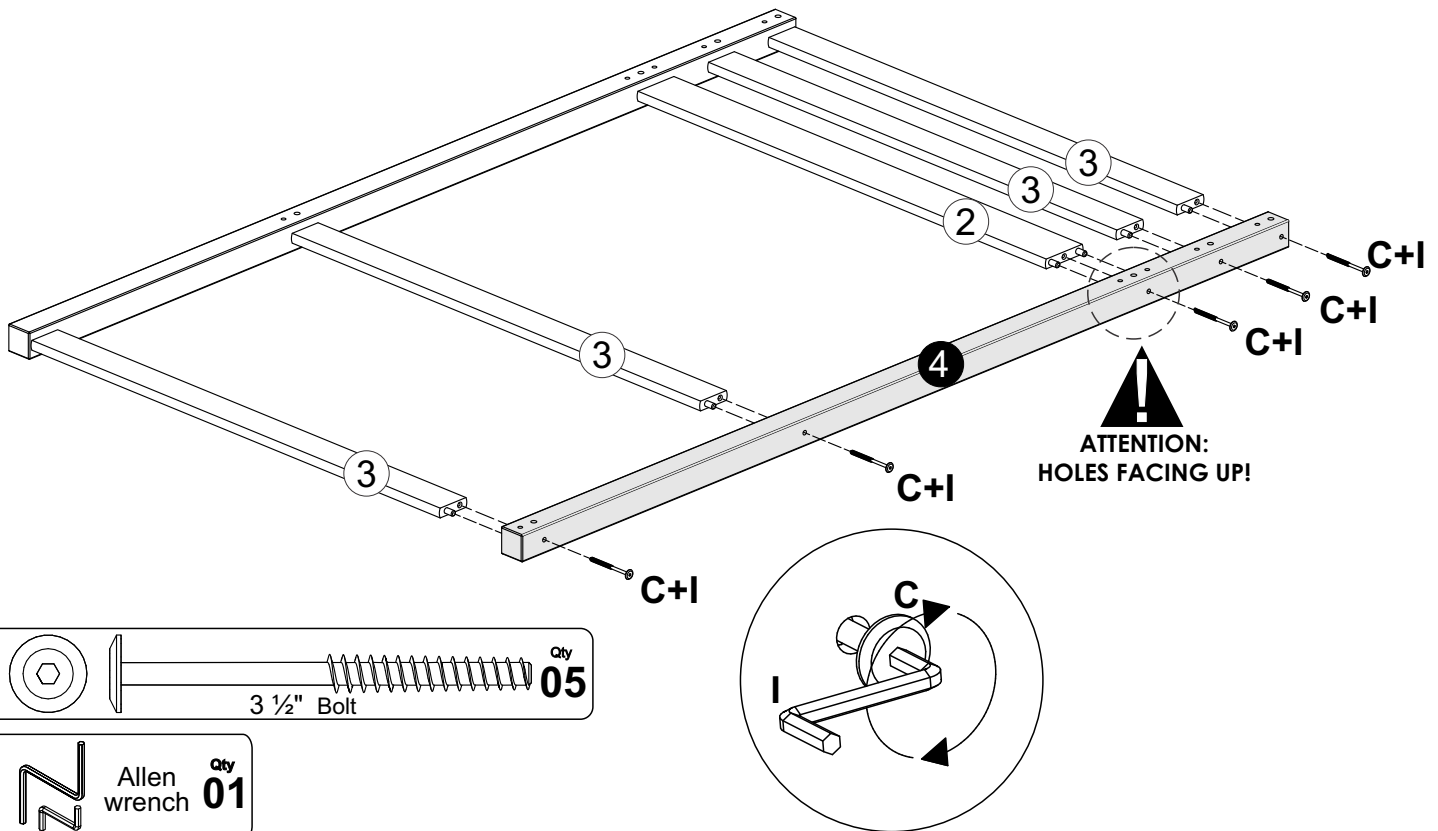


Step 6

Siderails and back guardrail

Insert 12 wooden dowels (A) into the holes, as shown in the diagram.

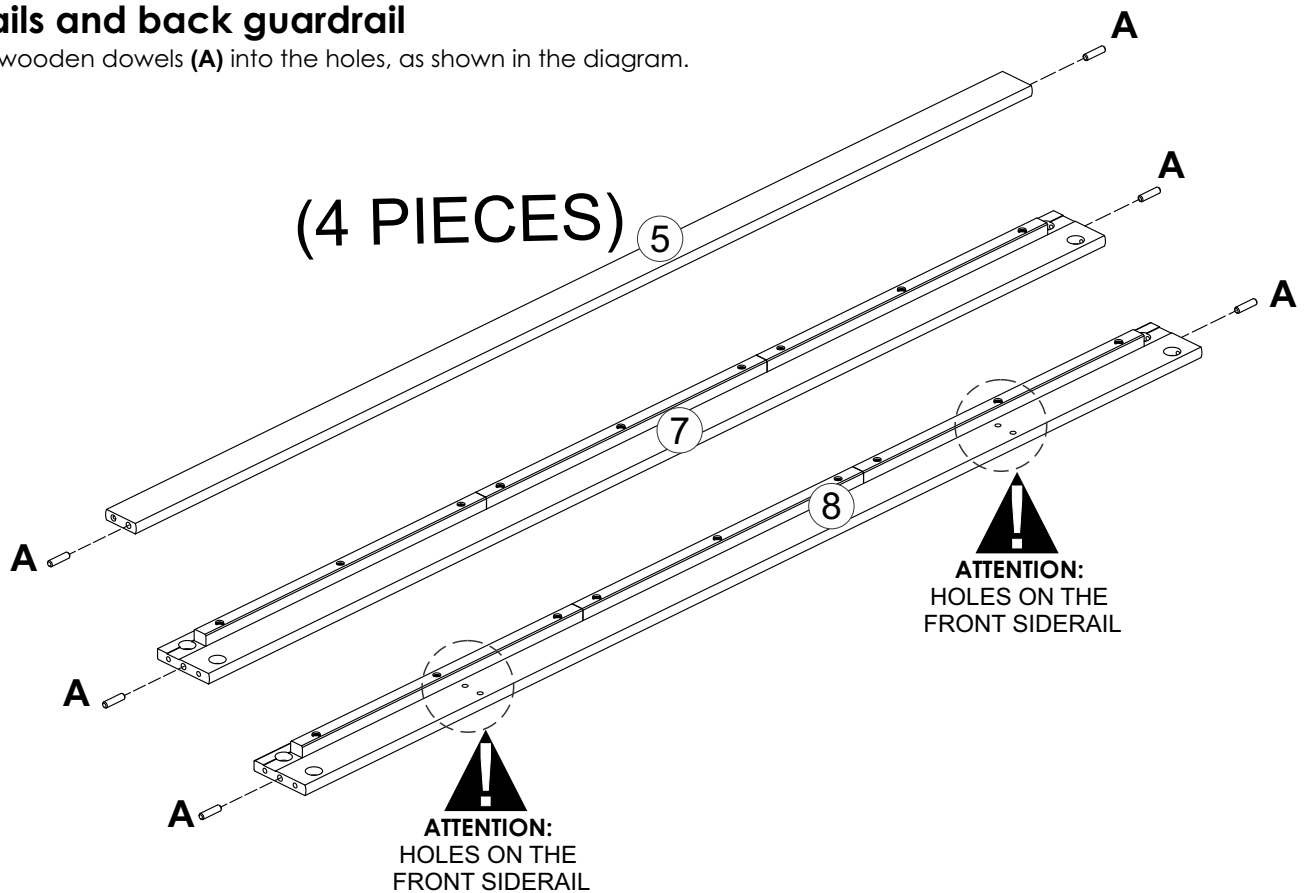

Assembly Instructions



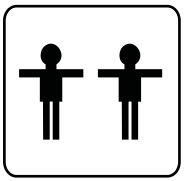


Step 7

Back Guardrail

Attach part 5 on the **Footboard** with 1 bolt (C), using 1 Allen wrench (I).


Important 2 people for assembly

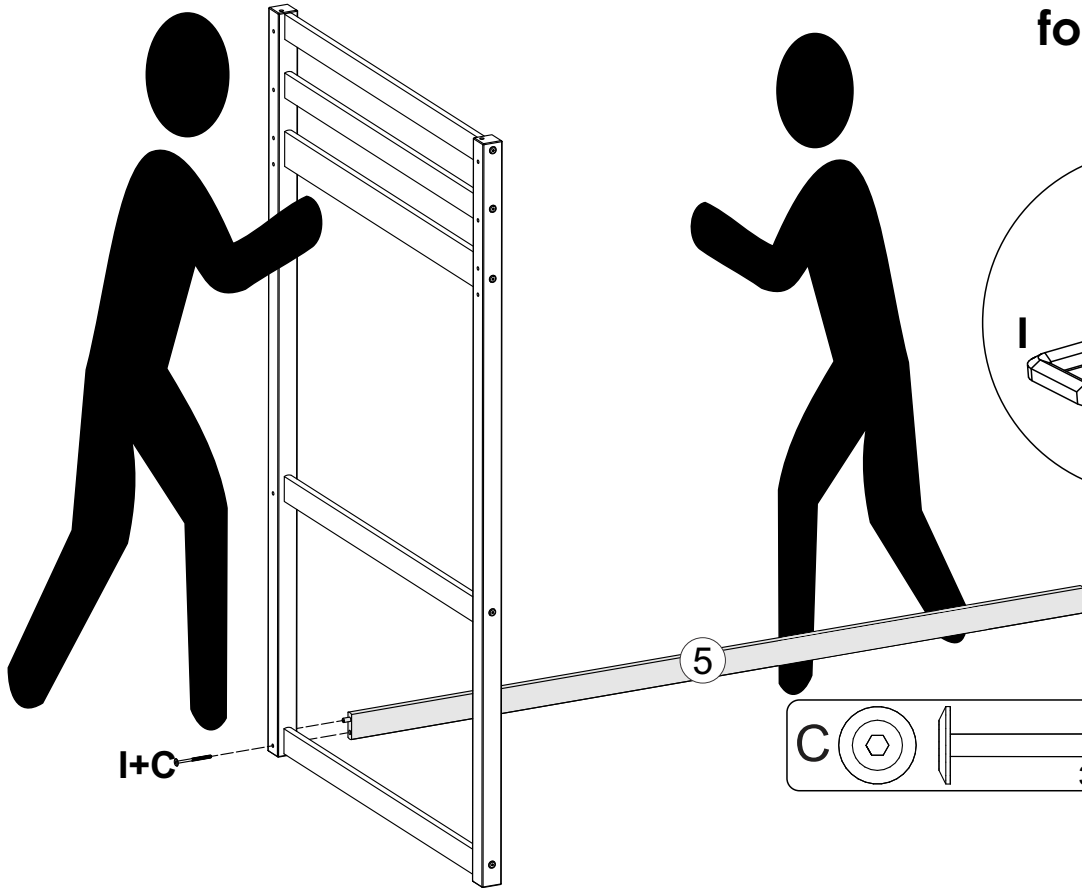




Step 8

Headboard


Attach the **Headboard** on to part 5 with 1 bolt (C), using 1 Allen wrench (I).

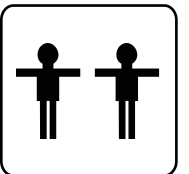

Important 2 people for assembly

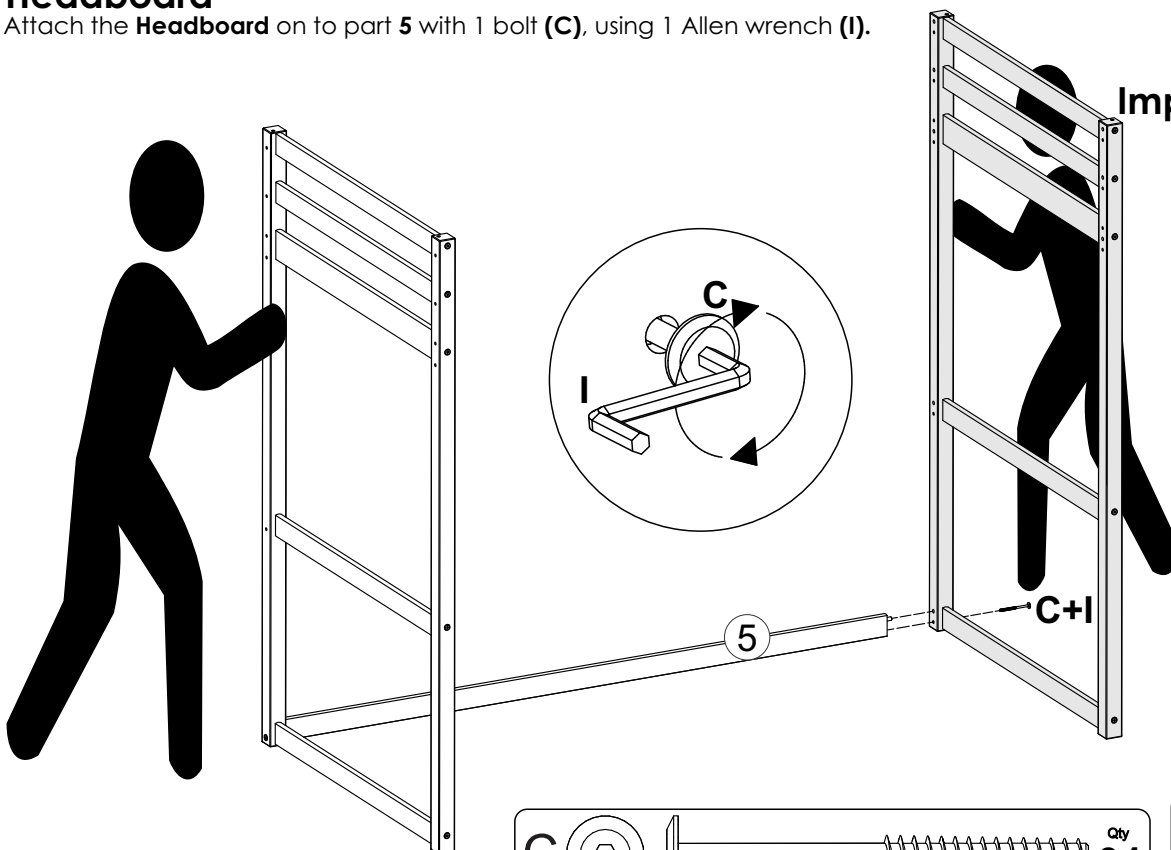

Assembly Instructions


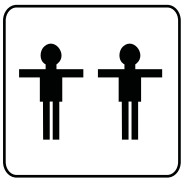


Step 9

Back Guardrail

Attach part 5 on the **Footboard and Headboard** with 2 bolts (C), using 1 Allen wrench (I).

Important 2 people for assembly



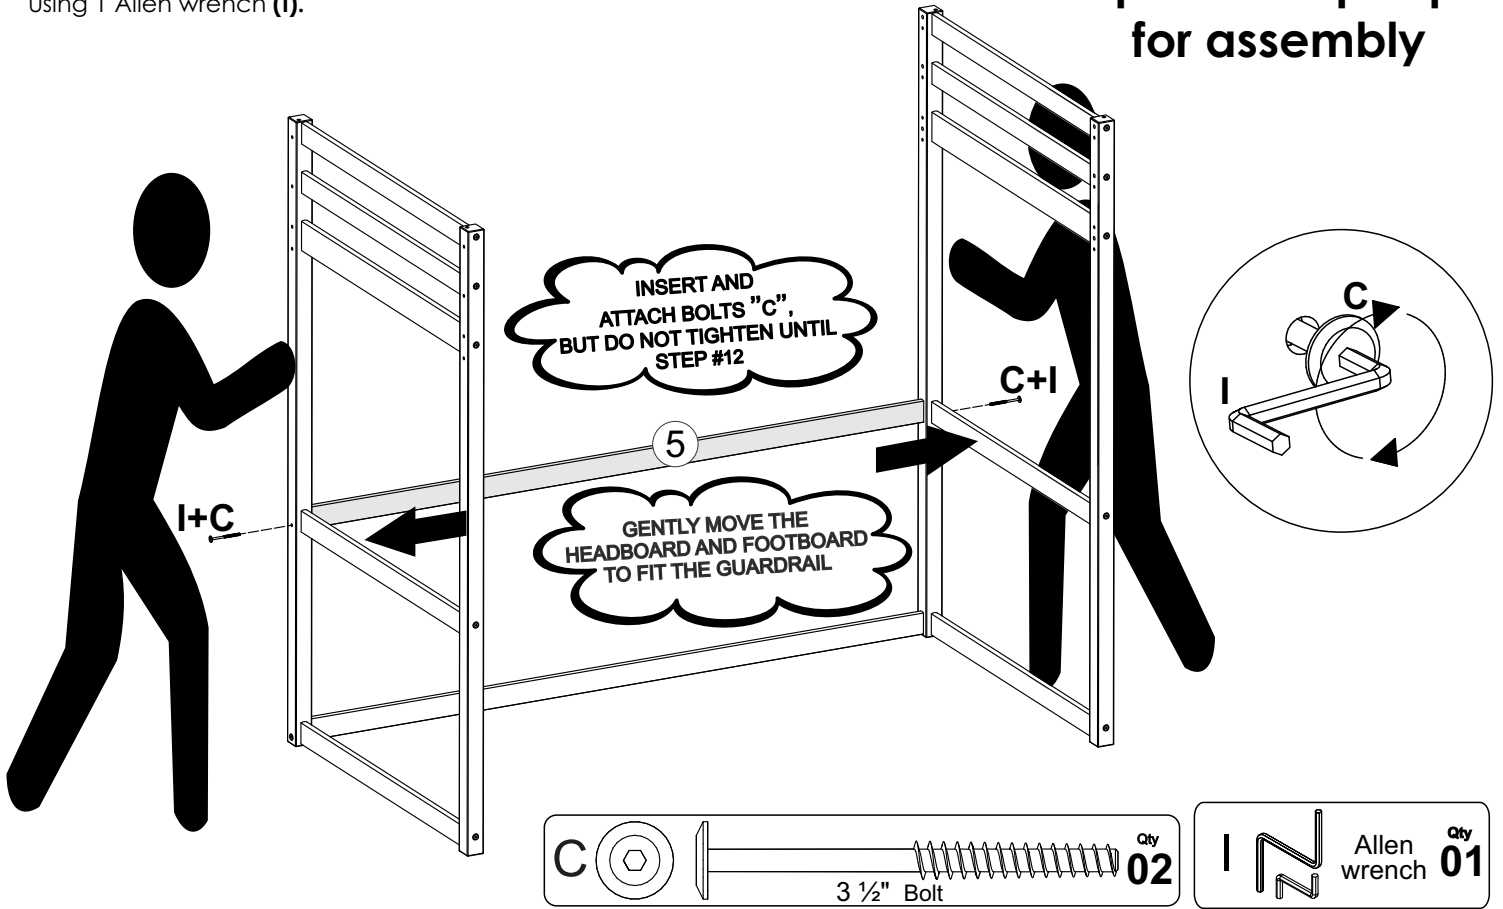


Step 10


Back Siderail

Attach part 7 on the **Headboard and Footboard** with 4 bolts (B), 4 Half Moons (H), using 1 Allen wrench (I).

Important 2 people for assembly

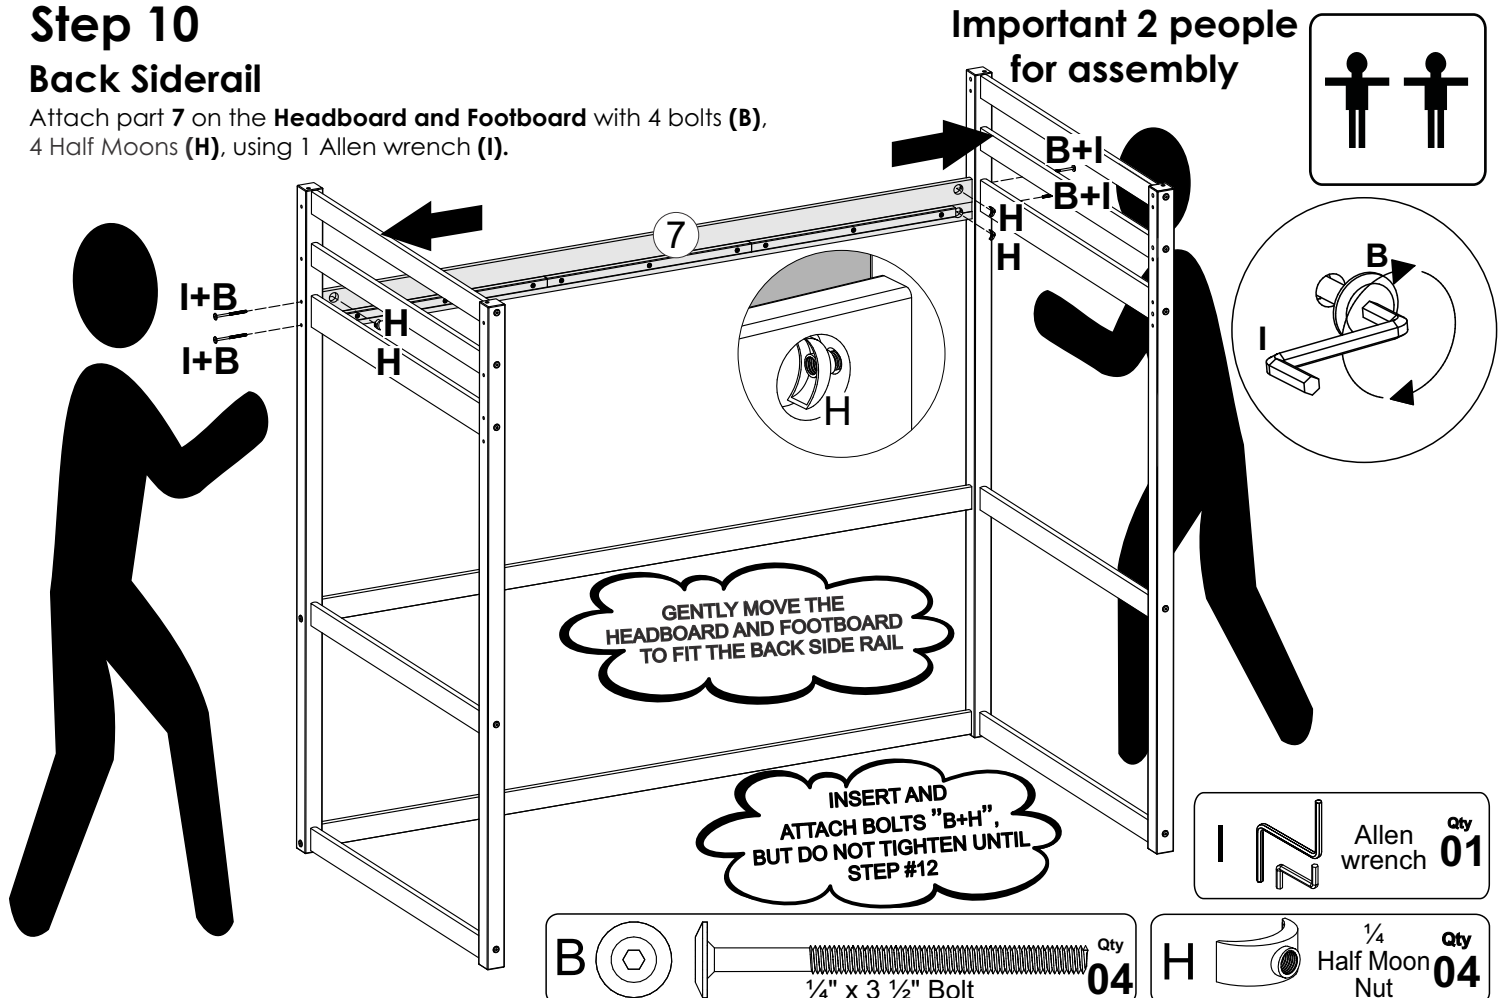

Assembly Instructions


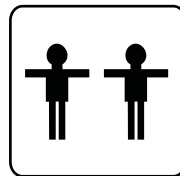


Step 11

Back Guardrail



Attach part 5 on the **Footboard and Headboard** with 2 bolts (C), using 1 Allen wrench (I).

Important 2 people for assembly

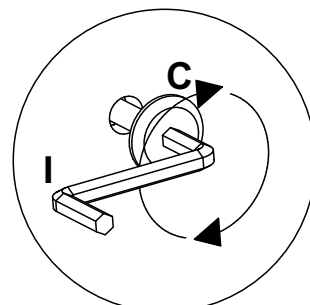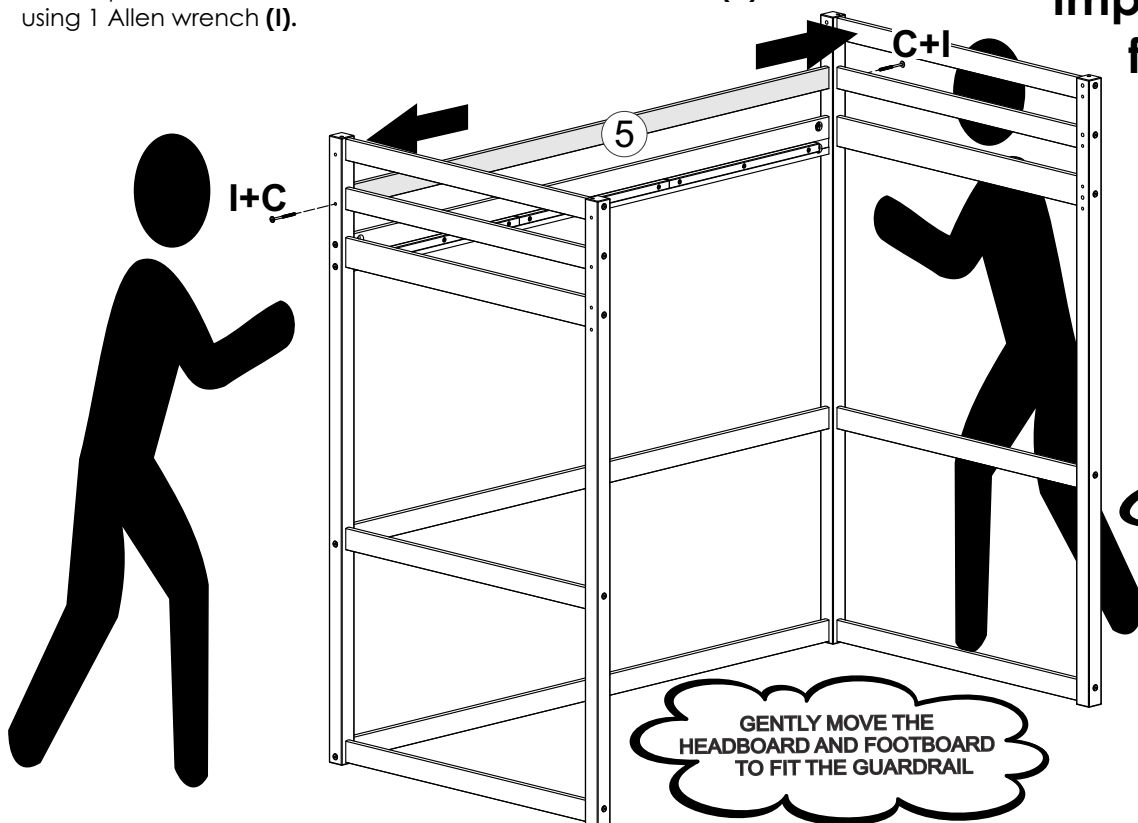

INSERT AND ATTACH BOLTS "C", BUT DO NOT TIGHTEN UNTIL STEP #12


GENTLY MOVE THE HEADBOARD AND FOOTBOARD TO FIT THE GUARDRAIL





Step 12

Siderails and back guardrail

Attach part 5 on the **Footboard and Headboard** with 2 bolts (C), using 1 Allen wrench (I).


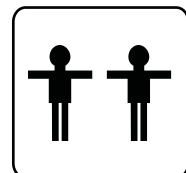


Important 2 people for assembly

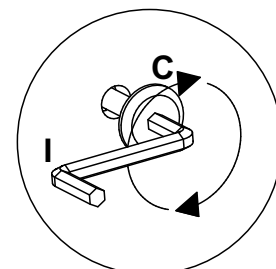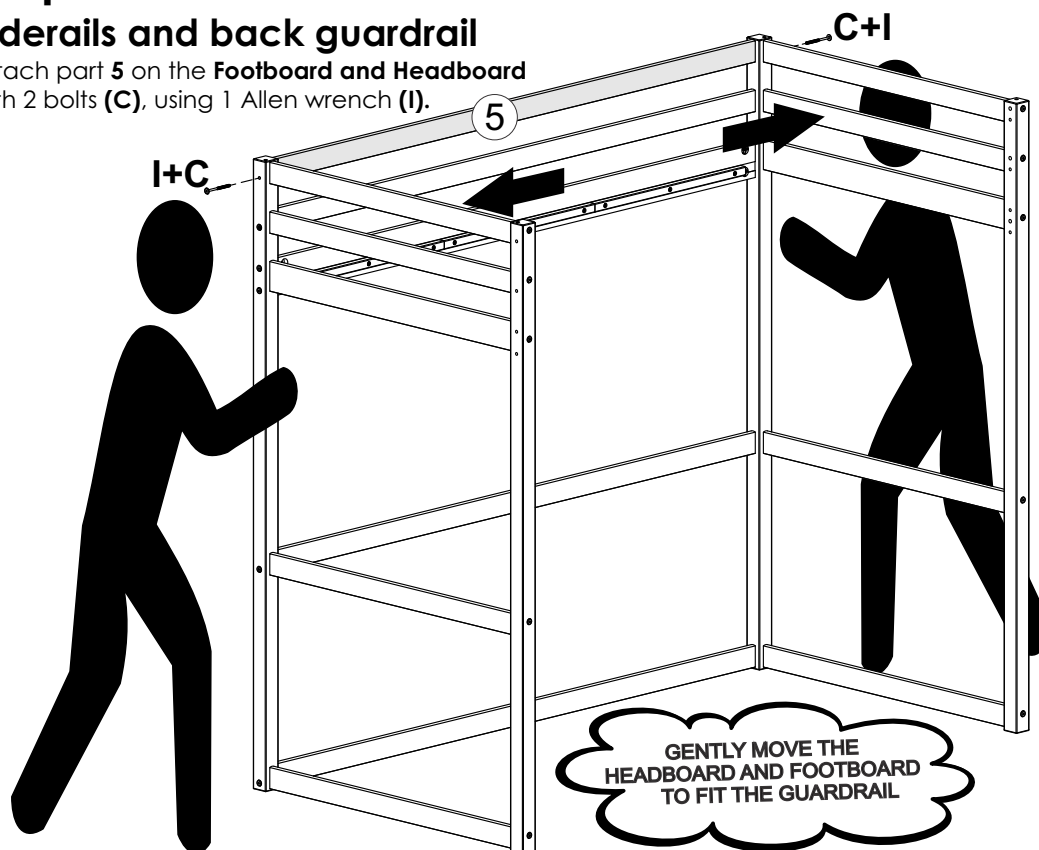


AFTER ATTACHING, TIGHTEN ALL BOLTS ON ENTIRE BED.

GENTLY MOVE THE HEADBOARD AND FOOTBOARD TO FIT THE GUARDRAIL



Assembly Instructions



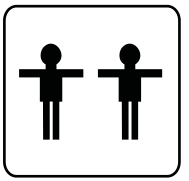


Step 13

Front siderail

Attach part **8** on the **Headboard and Footboard** with 4 bolts (**B**), 4 Half Moons (**H**), using 1 Allen wrench (**I**).






Important 2 people for assembly

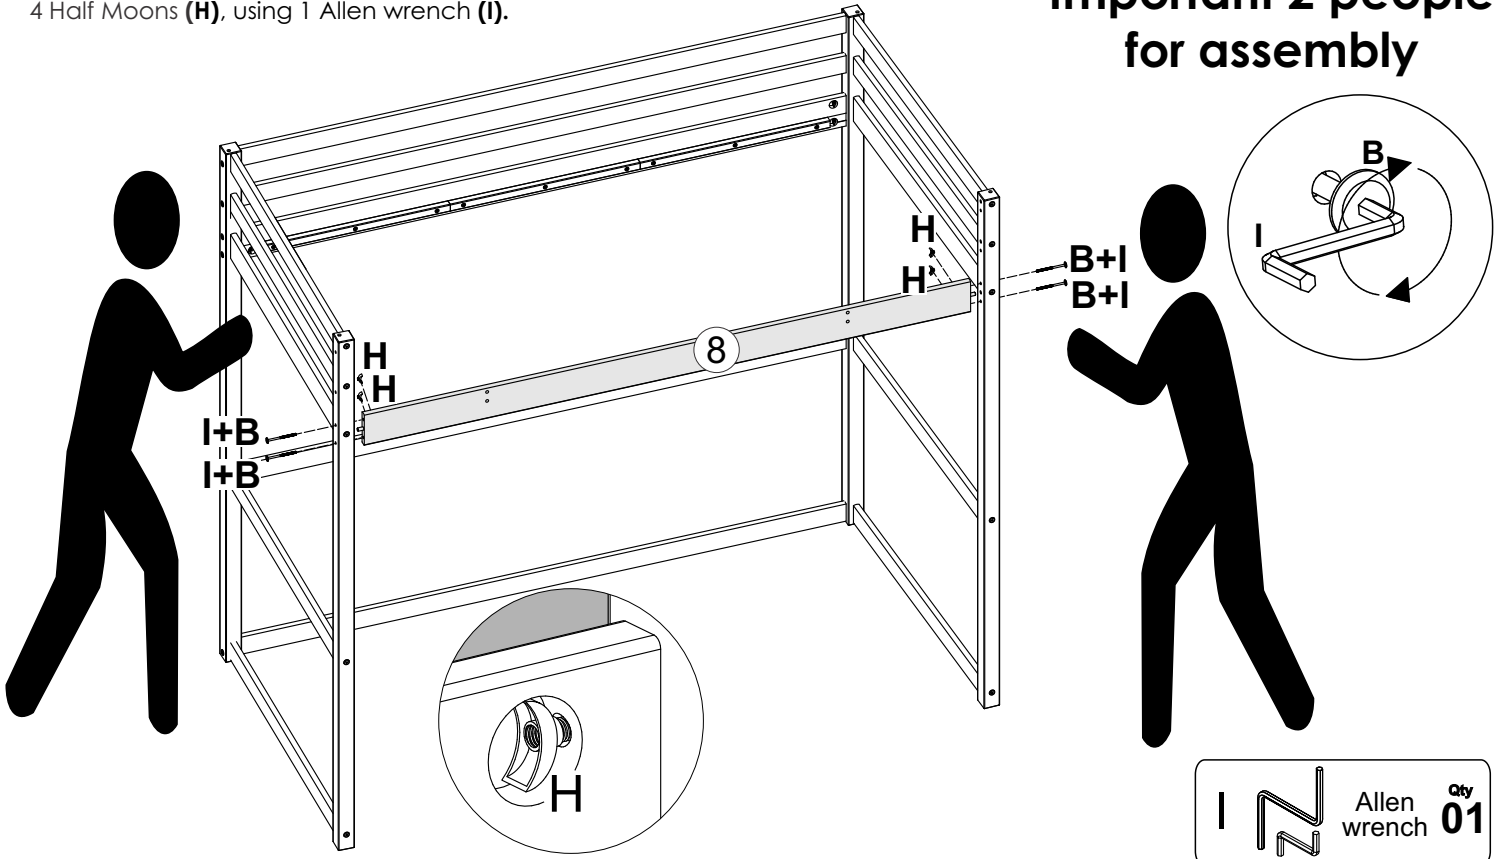

Step 14

Support

- 1) Choose the side you want to assemble the ladder to start the step.
- 2) Attach part **9** on the **Front Siderail** with 2 screws (**E**), using 1 Allen wrench (**I**).

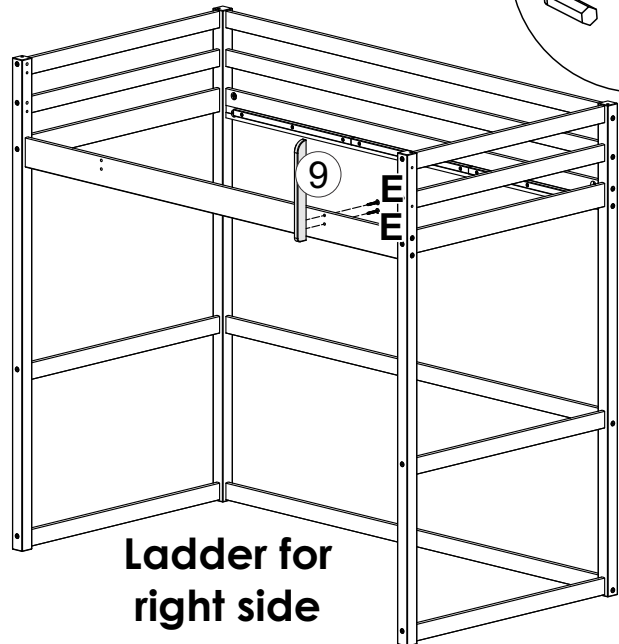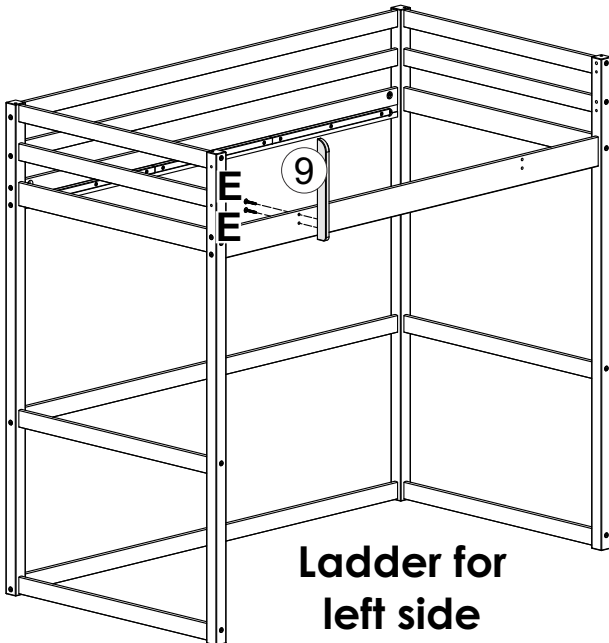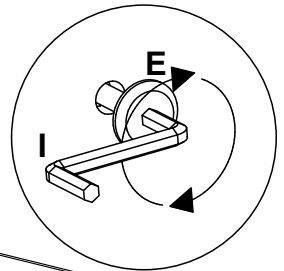


Assembly Instructions

Step 15

Front guardrails






Insert 2 wooden dowels (A) into the holes, as shown in the diagram.

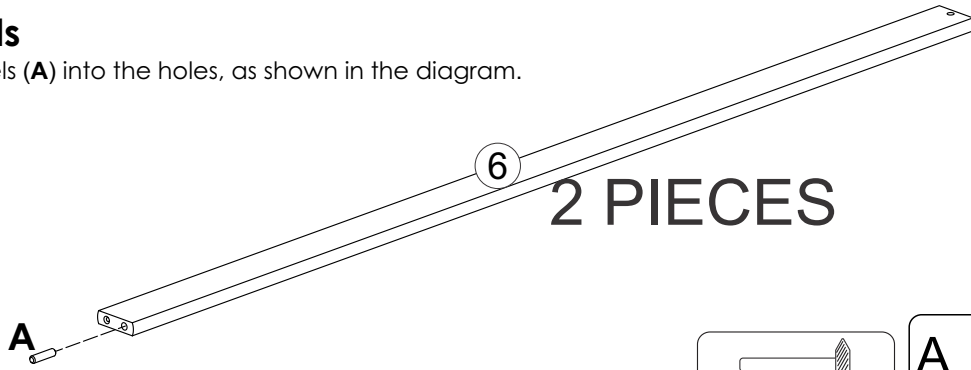


Step 16

Front guardrail

- 1) Attach parts 6 on the **Headboard or Footboard** with 2 bolts (C), using 1 Allen wrench (I).
- 2) Attach parts 6 on to part 8 with 2 bolts (E), using 1 Allen wrench (I).

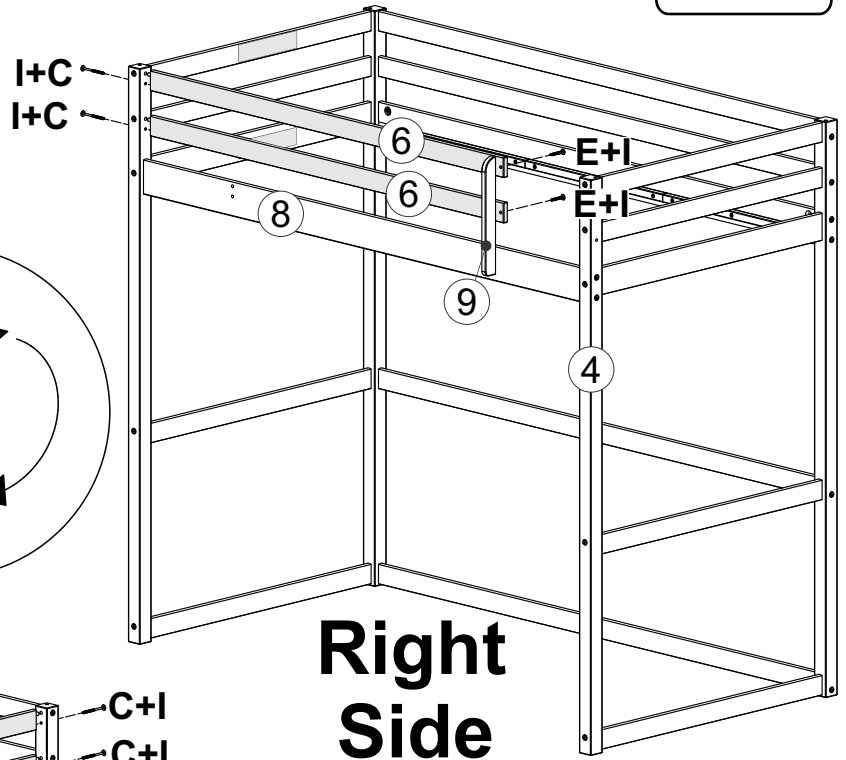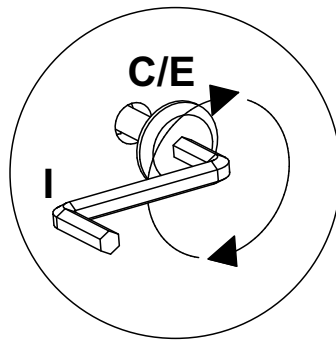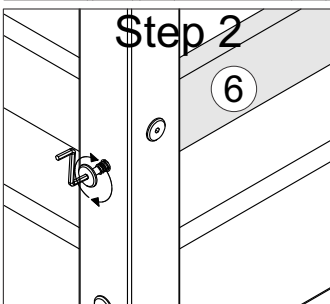
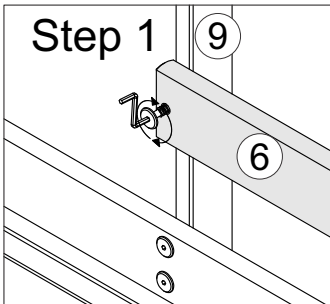
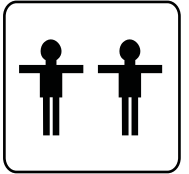


Right Side

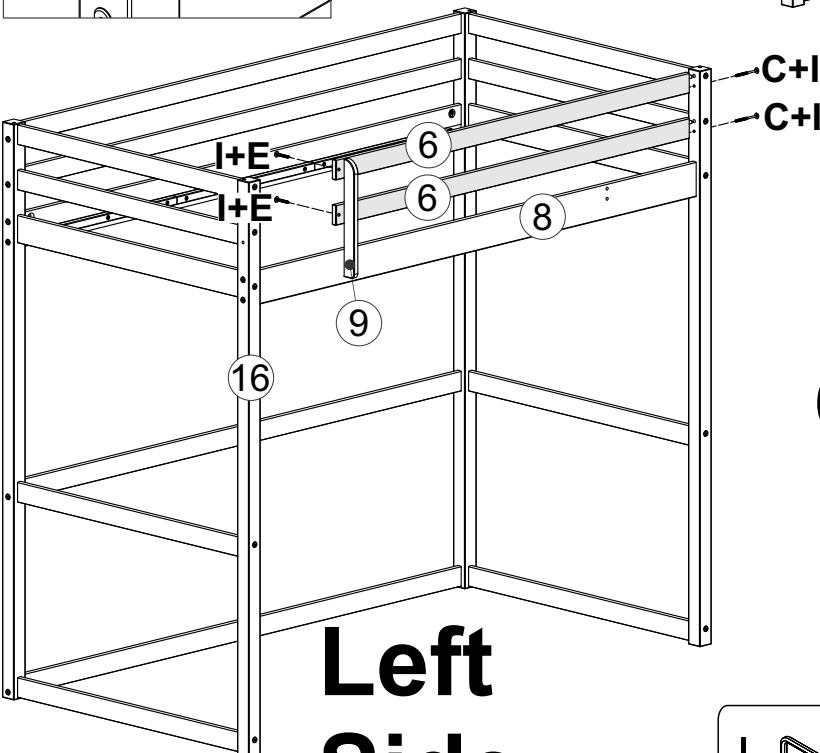


Left Side

OR




Assembly Instructions

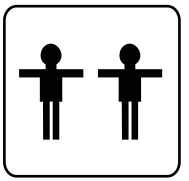


Step 17

Bed Slats

- 1) Attached the first slat to the end of the side rail base with 2 screws (G).
 - 2) After attaching the first slat, open the slat set, leaving the tape stretched, until the last slat is aligned at the end of the side rail base.
- Attach to end of side rail base with other 2 screws (G), using 1 Philips Screwdriver.

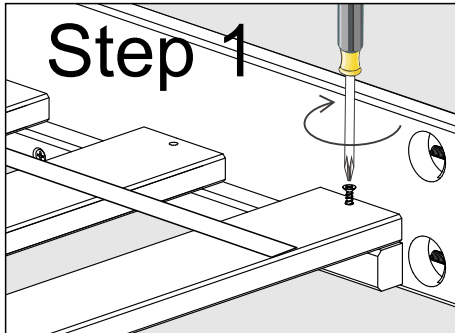


Step 1

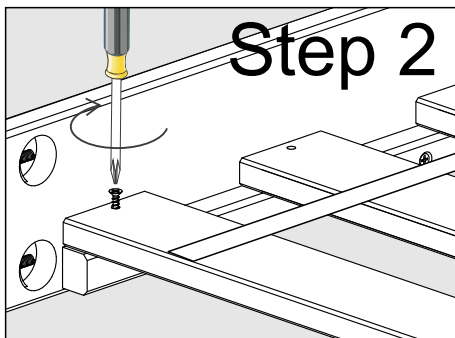


Step 2

Attached the first slat to the end of the side rail base. After attaching the first slat, open the slat set, leaving the tape stretched, until the last slat is aligned at the end of the side rail base. Attach to end of side rail base.

!
"PLEASE INSTALL SLAT KIT WITH THE SPACER TAPE ON TOP (FACING UP)"

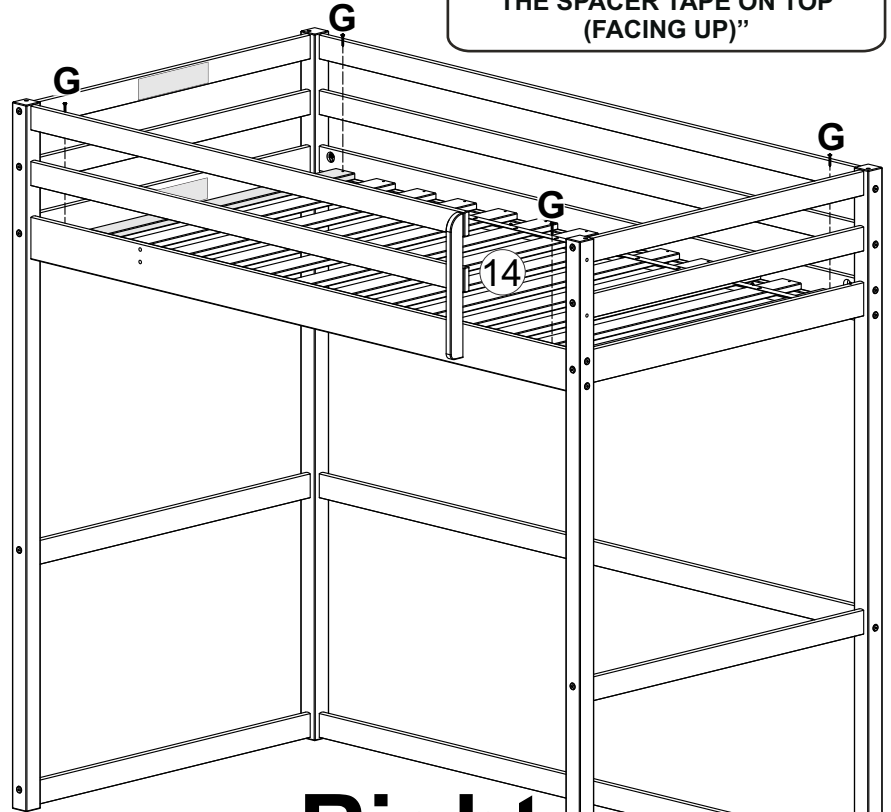


Right Side

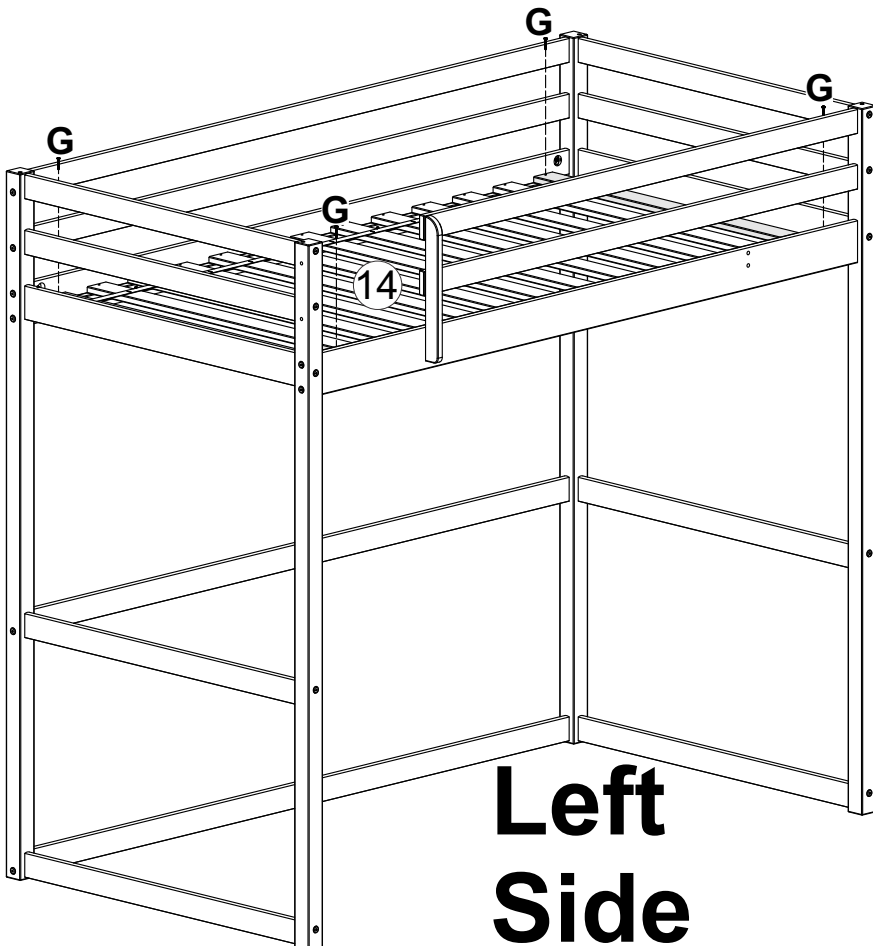



Left Side

OR




Philips screwdriver



G \oplus  Qty **04**
1 3/16" Screw


Assembly Instructions

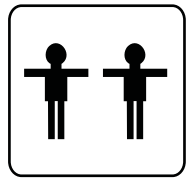


Step 18

Bed Slats

- 1) Please note warping may occur because it is natural wood. To facilitate the placement of the screws, you must press the two siderails simultaneously.
- 2) Attach the **center slat** with 2 screws (**G**) using 1 Philips screwdriver.

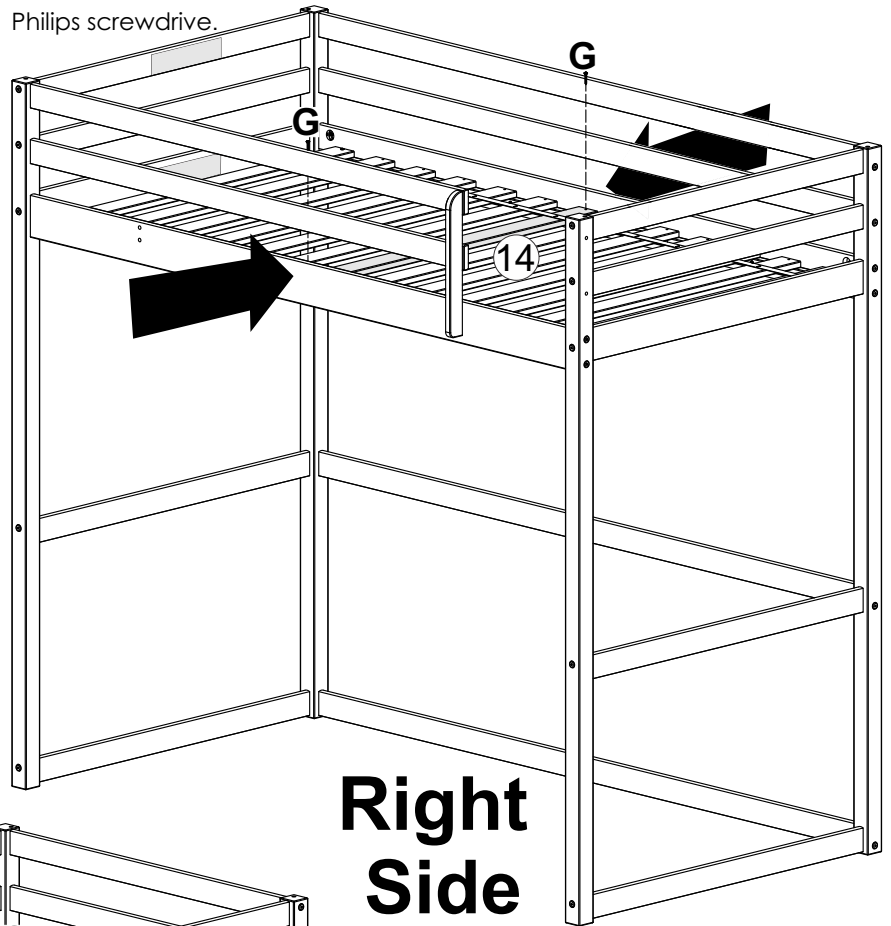

Right Side

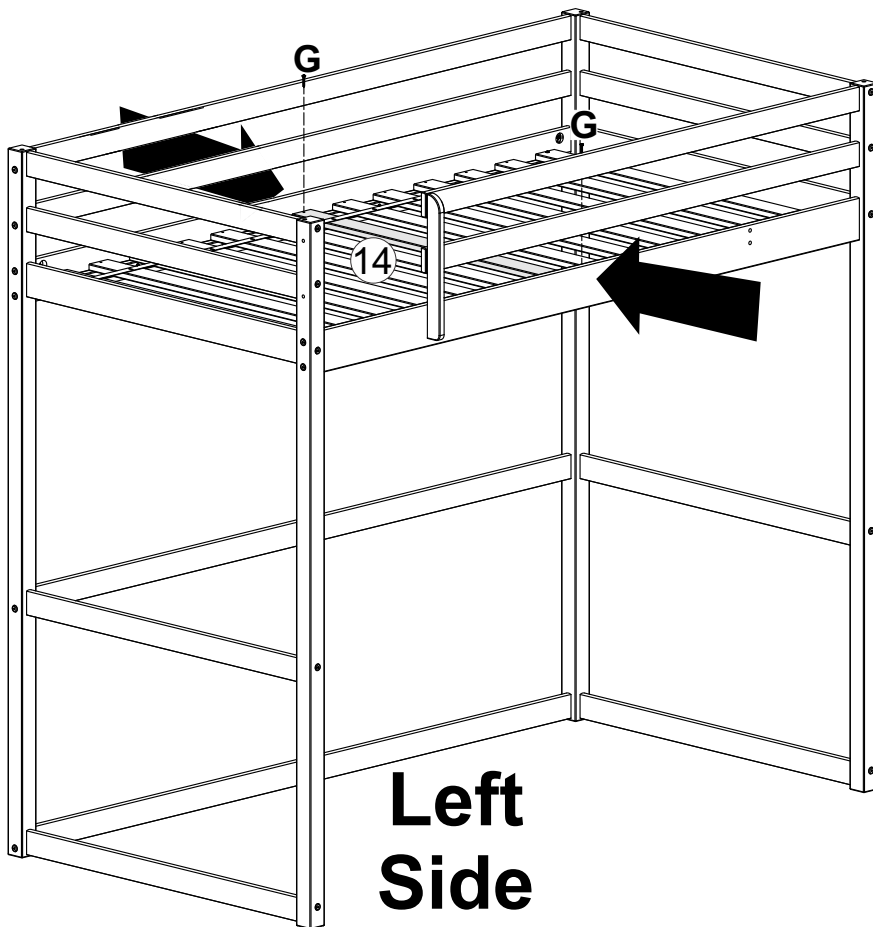


Left Side


OR



IMPORTANT NOTE
Please note warping may occur because it is natural wood.
To facilitate the placement of the screws, you must press
the two siderails simultaneously.




Assembly Instructions

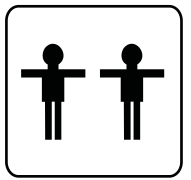


Step 19

Bed Slats

Attach the others **slats** with 20 screws (**G**), using 1 Philips screwdriver.

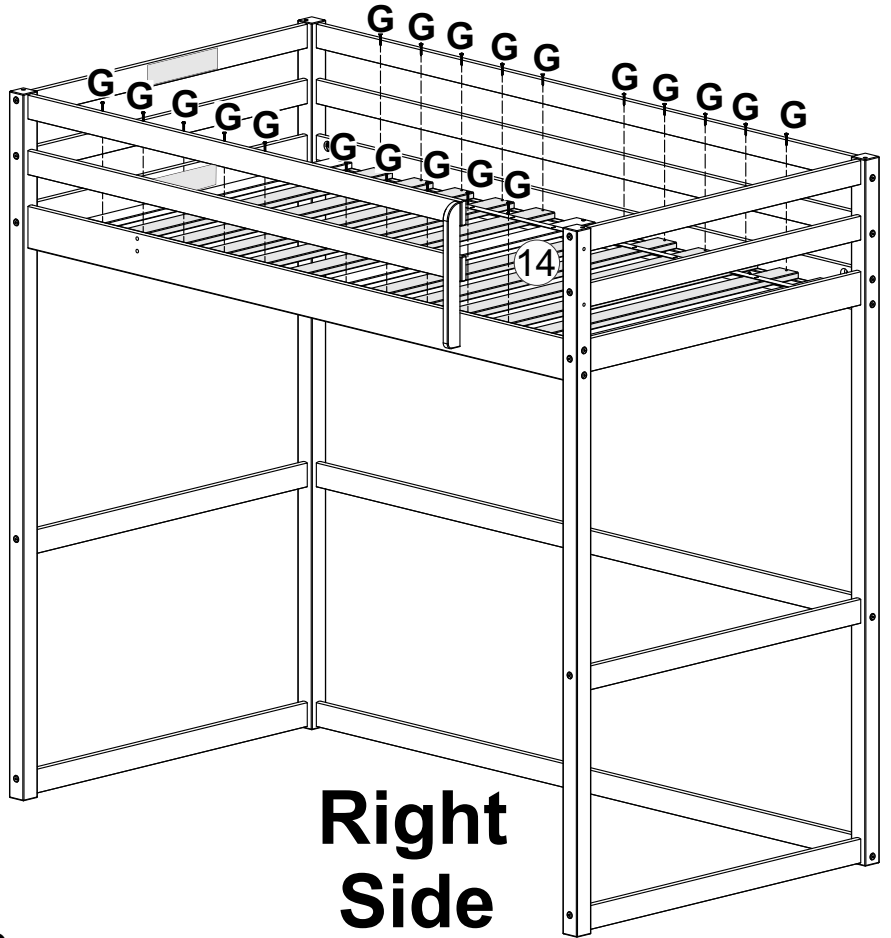

Right Side

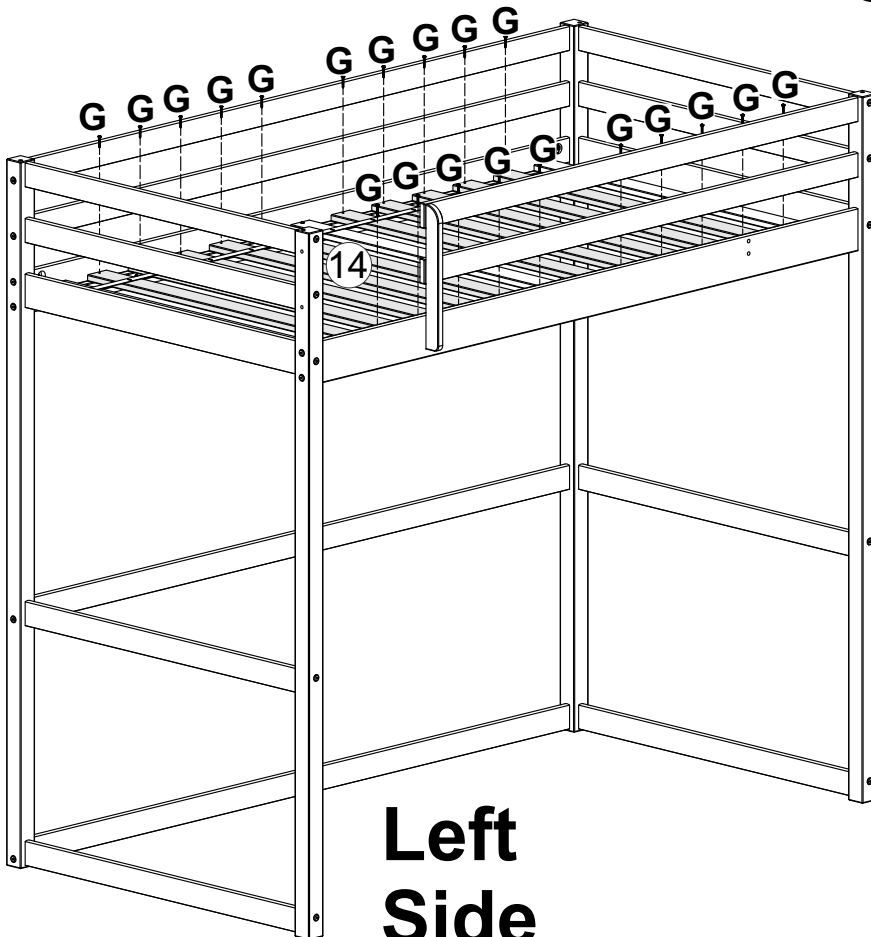

Left Side



OR


Attention:
PLEASE USE A SAFETY
STEP LADDER
TO ASSEMBLY THE
SLATS



Not included


Philips screwdriver


G   **20**
1 3/16" Screw

Assembly Instructions


Step 20

Guardrail reinforcement

Attach parts **10** on to parts **6**, **7**, **8** and **9** with 9 screws (**G**) using Philips screwdriver.

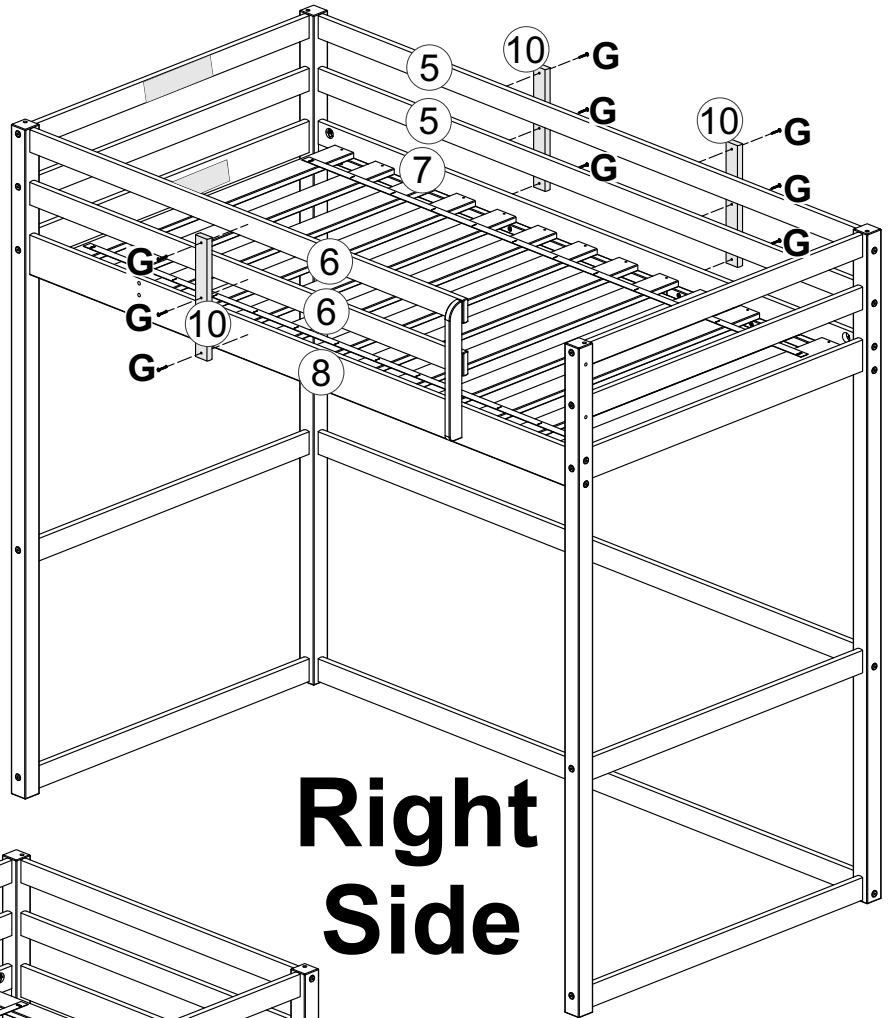


**Right
Side**

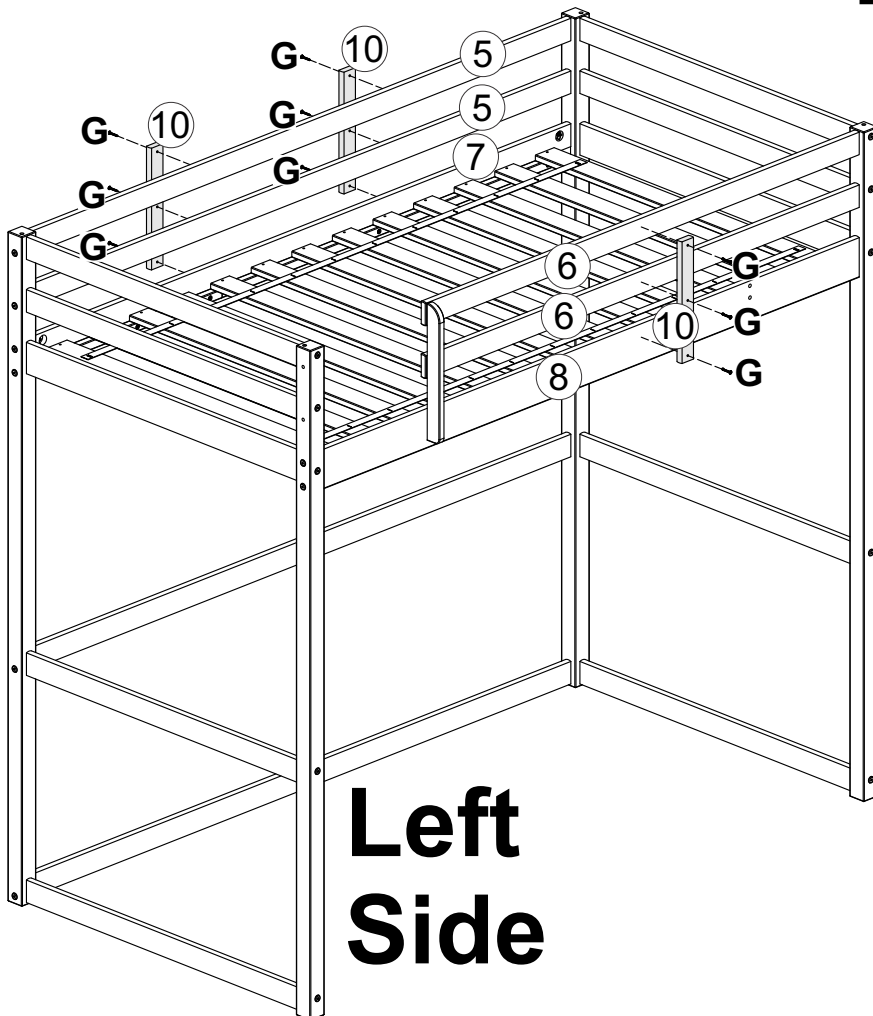

**Left
Side**

OR




Assembly Instructions

Step 21

Ladder Step


Insert 10 wooden dowels (A) into the holes, as shown in the diagram.

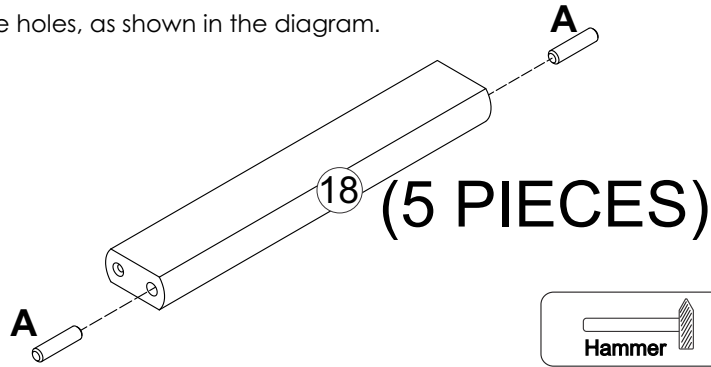

Step 22

Ladder


Attach parts 18 on to part 19 with 5 bolts (E), using 1 Allen wrench (I).

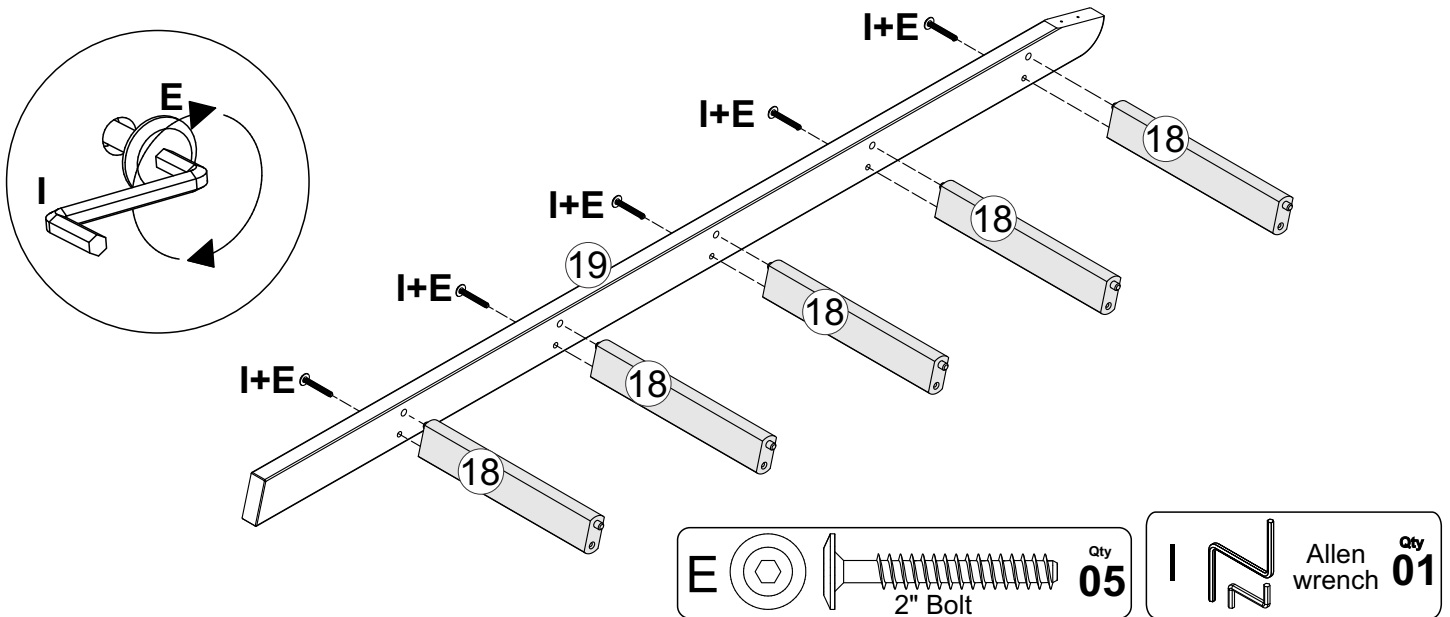

Step 23

Ladder

1) Attach part 19 on to parts 18 with 5 bolts (E), using 1 Allen wrench (I).

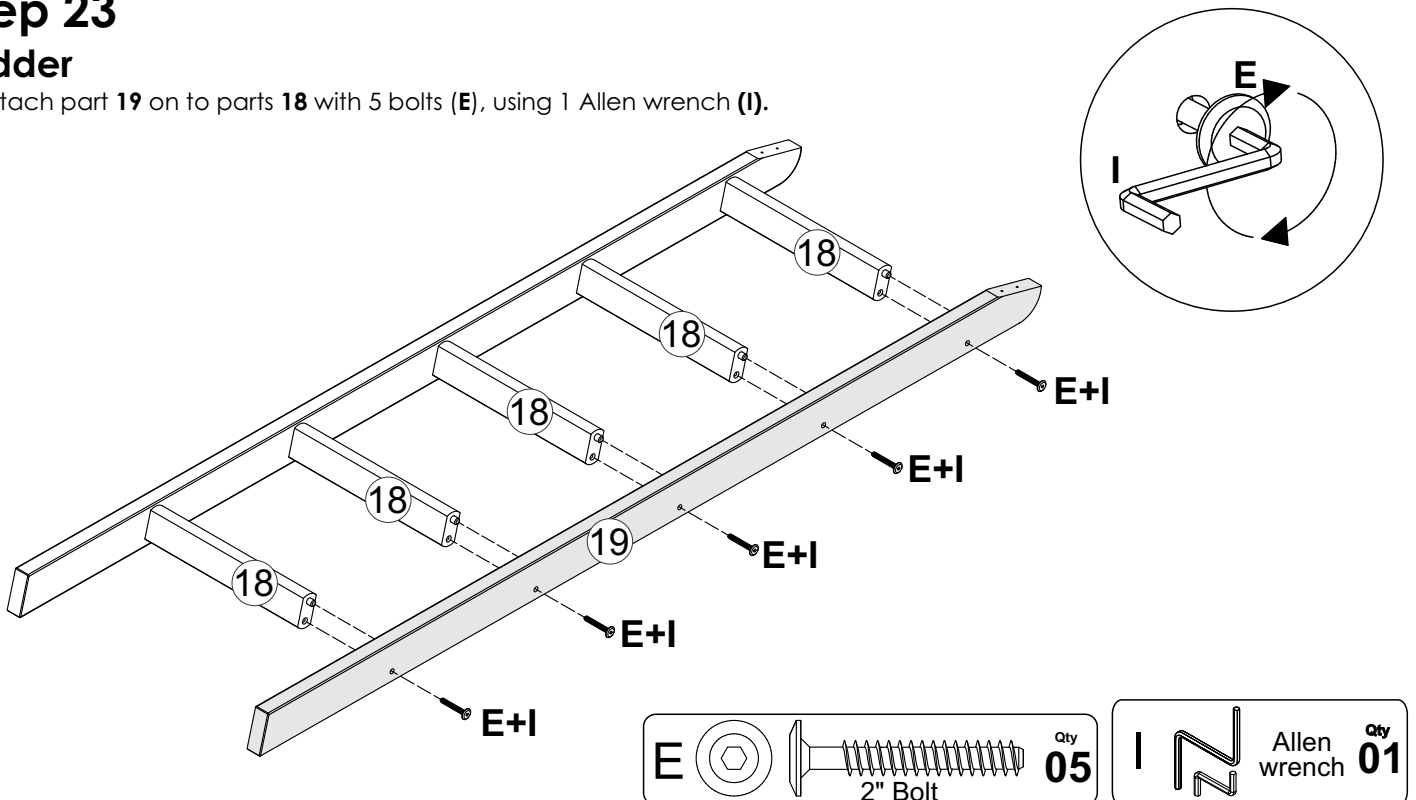


Assembly Instructions

Step 24




Ladder

Attach the **Hooks (J)** on the ladder top with 4 bolts (**F**), as shown in the diagram.


PRE DRILLED HOLES!

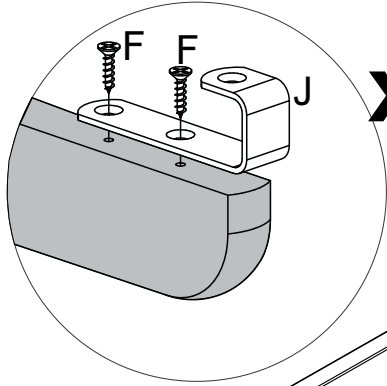



x2

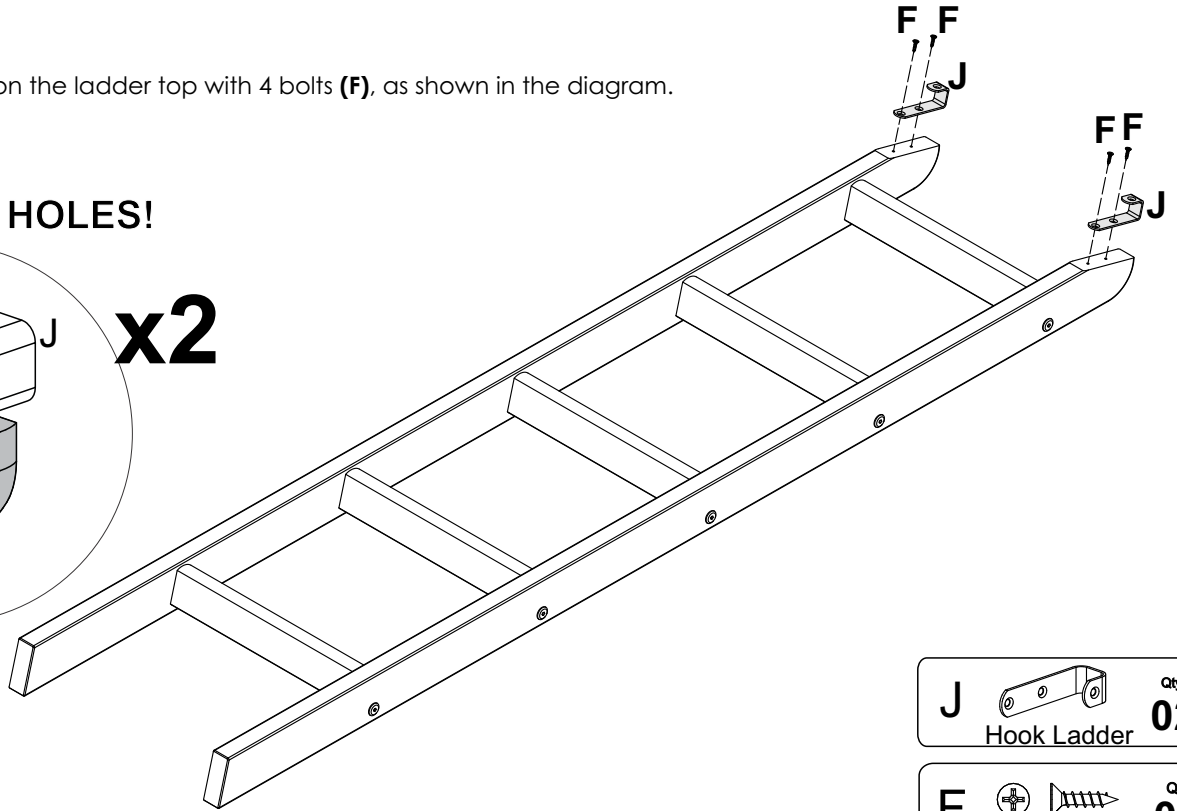


Step 25

Ladder

Attach the **Protector (K)** on the **Hooks (J)**, as shown in the diagram

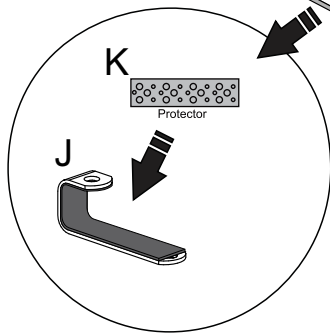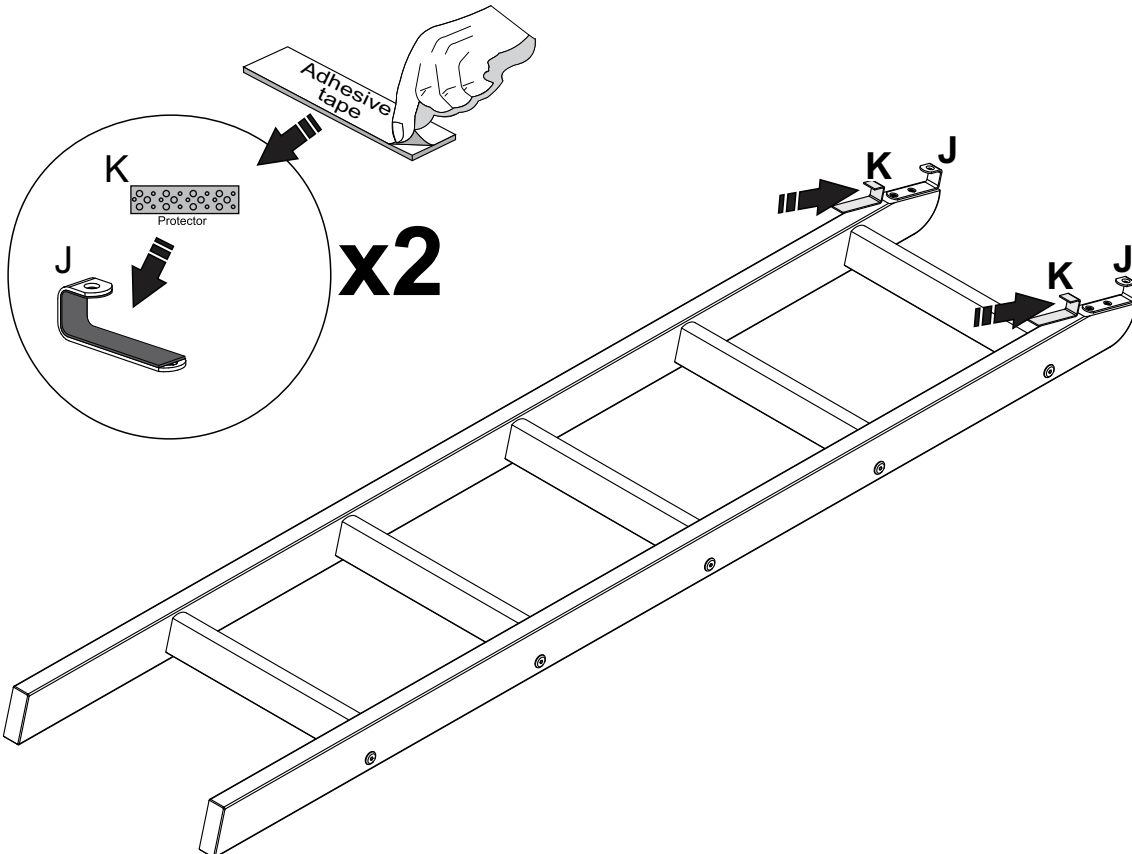

x2





Assembly Instructions


Step 26

Ladder

Attach the **Ladder Hooks** on the **Front Siderail** with 2 bolts (**F**), as shown in the diagram

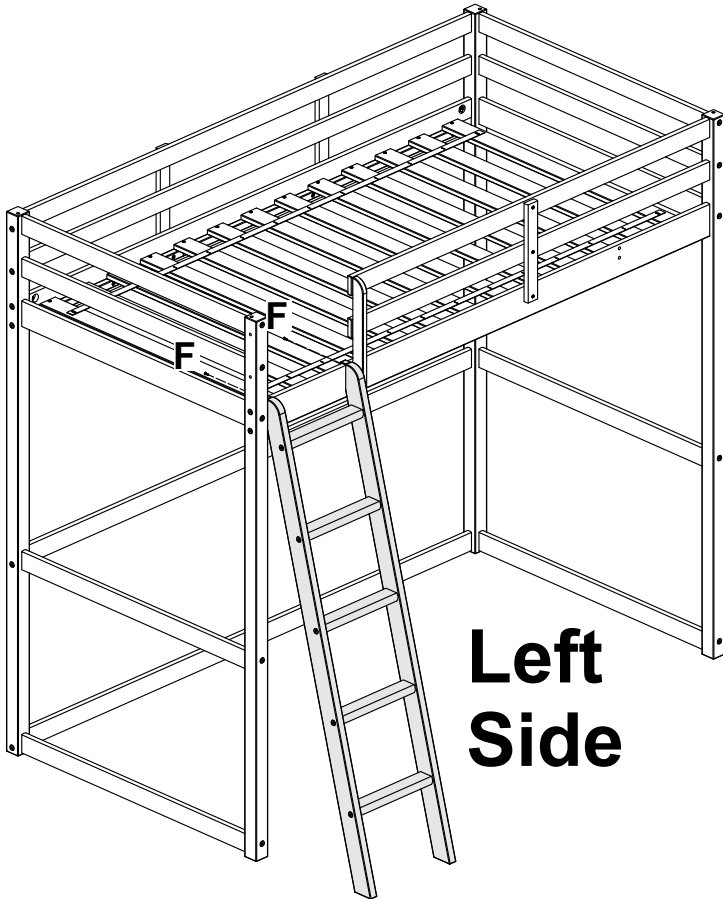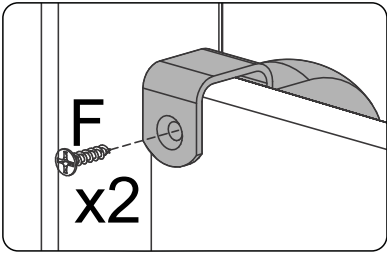


Left Side

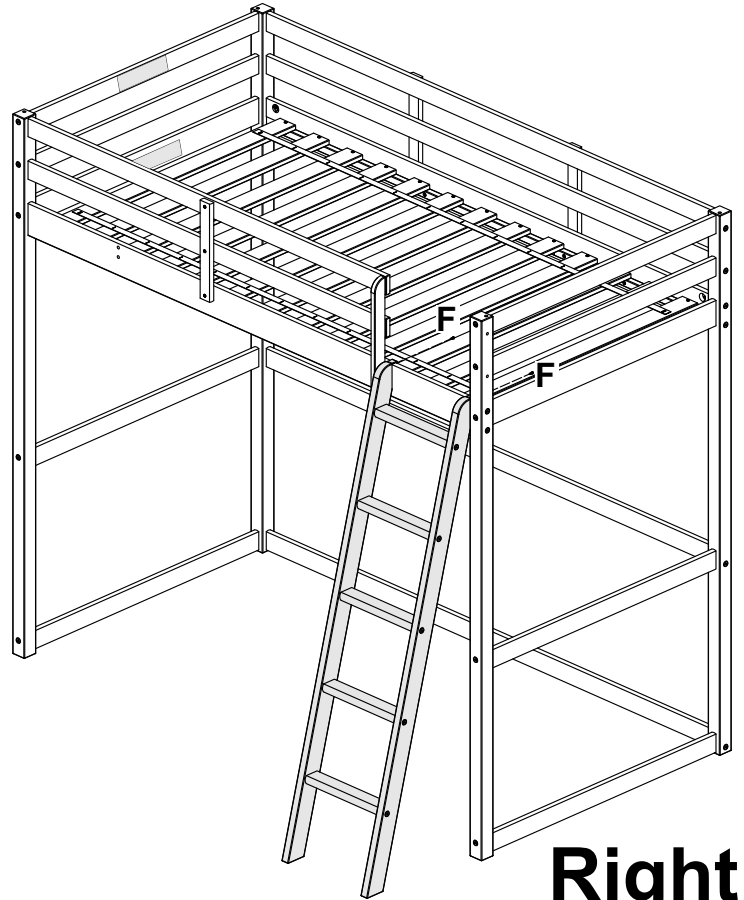

Right Side





OR




Step 27

Roof

Attach part **12** on to part **13** with 1 bolt (**D**), using 1 Allen wrench (**I**).

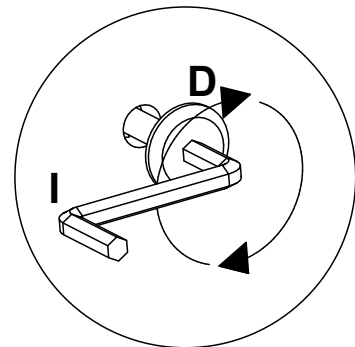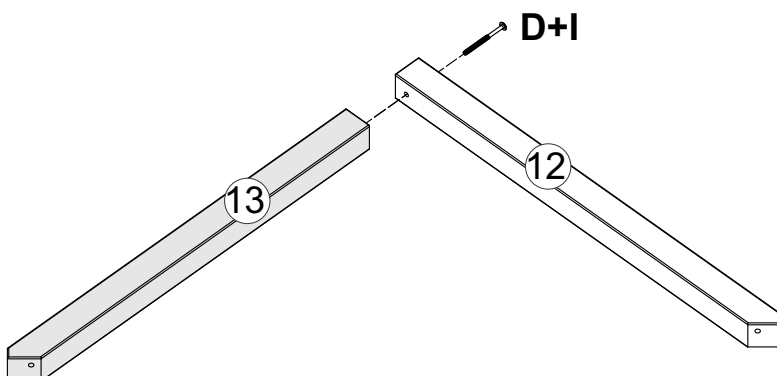

Assembly Instructions

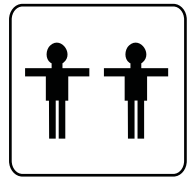


Step 28

Roof





Attach the **Roof** on the **Headboard or Footboard** with 2 bolts (**D**), using 1 Allen wrench (**I**)

Left Side

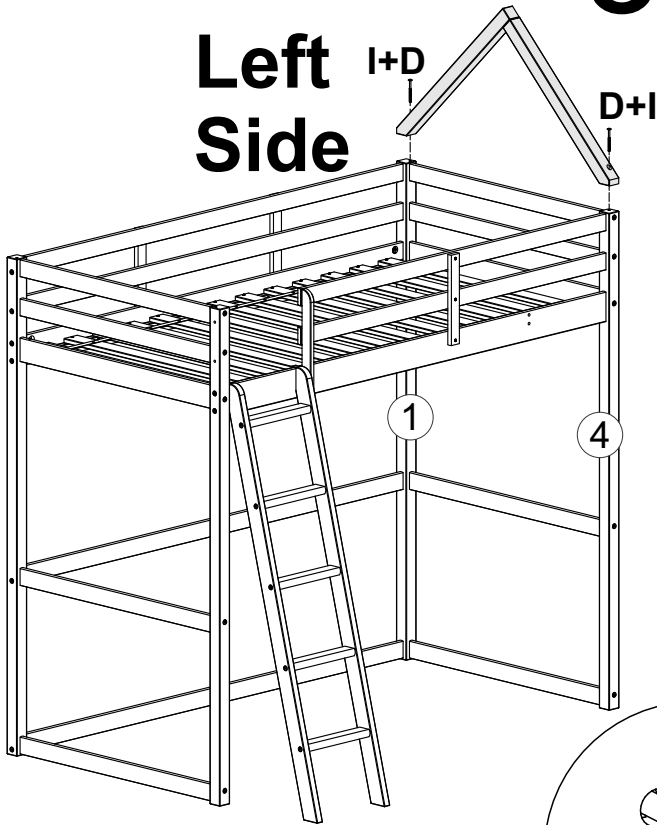

OR

Right Side

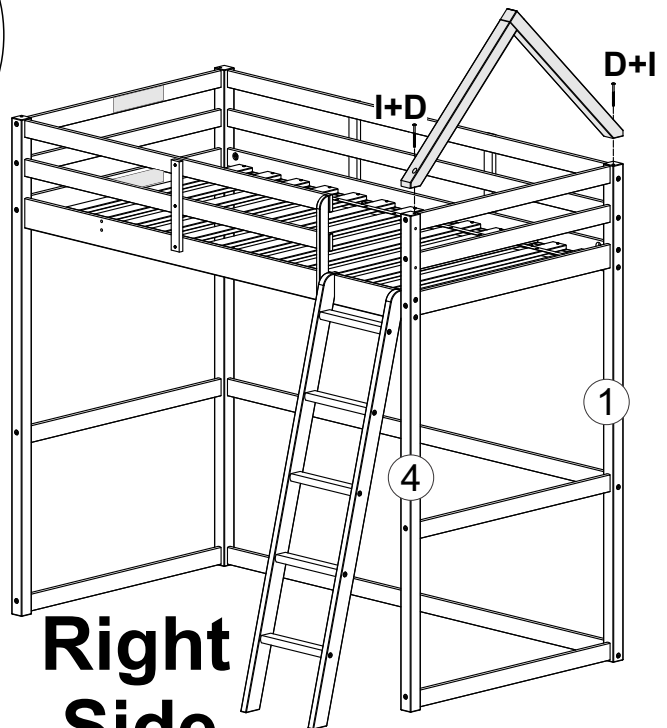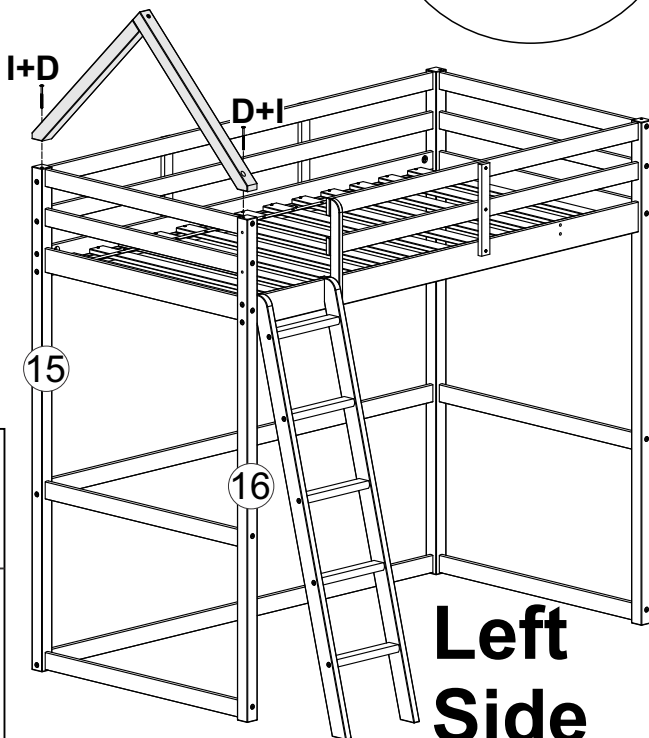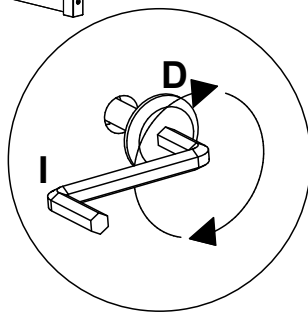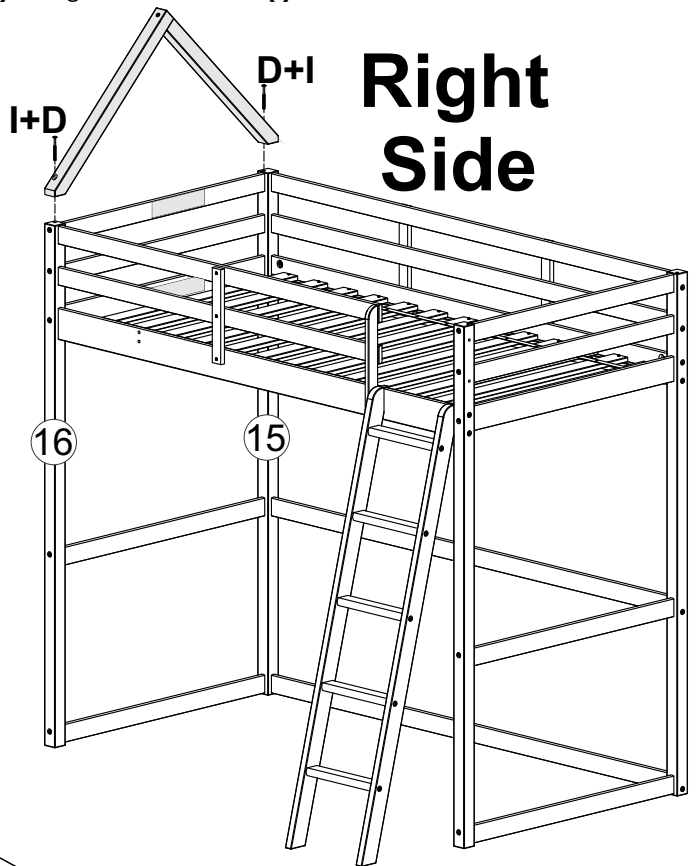

Right Side



Left Side

OR


Attention:
PLEASE USE A SAFETY STEP LADDER TO ASSEMBLY THE ROOF



Not included





Assembly Instructions

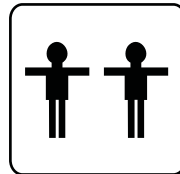


Step 29

Angle bracket



Attach parts 11 with 4 screws (G) using 1 Philips screwdriver.

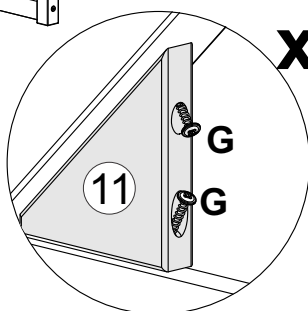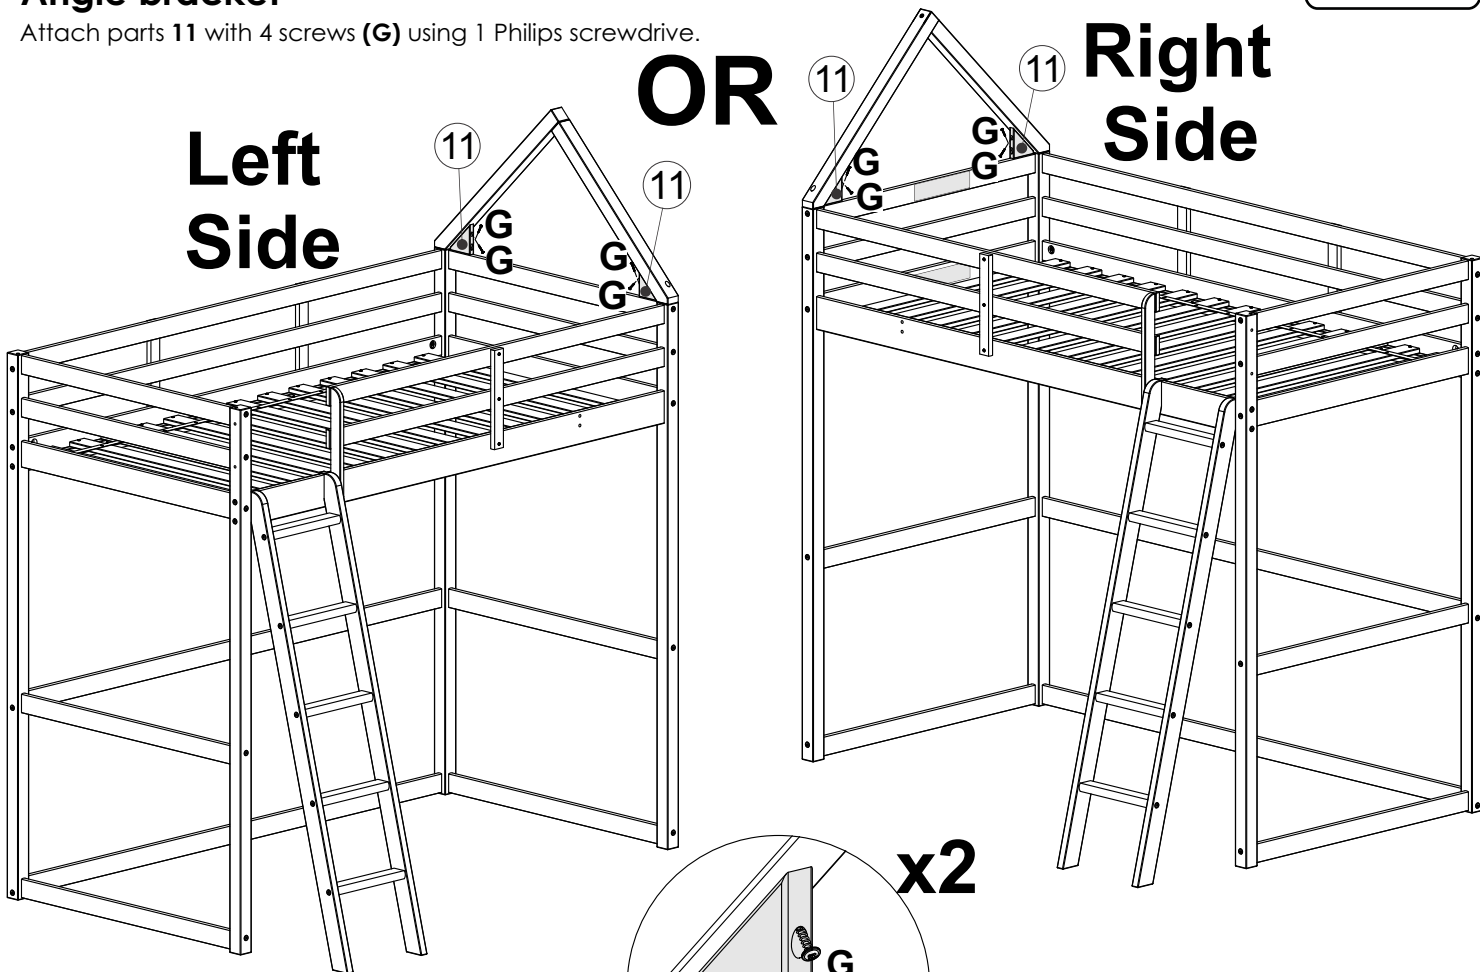


x2

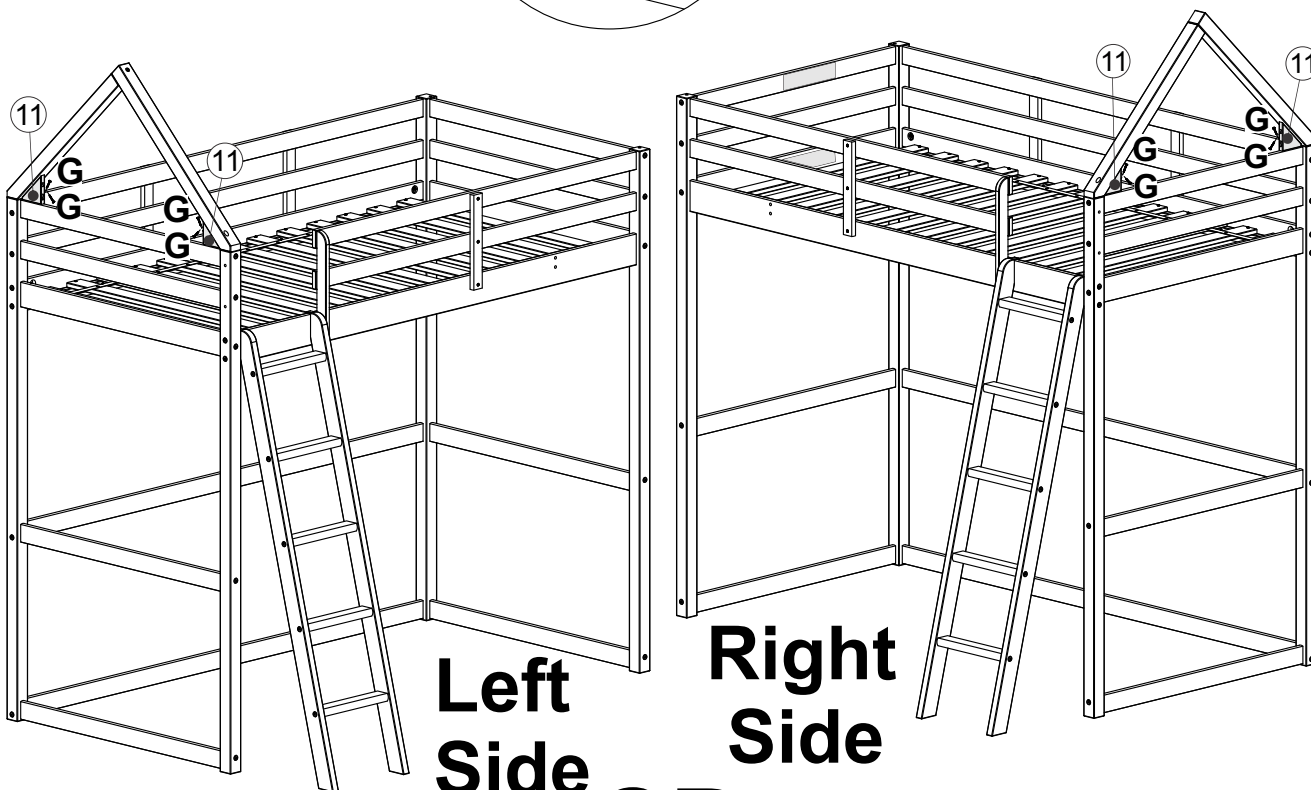


Attention:
PLEASE USE A SAFETY
STEP LADDER
TO ASSEMBLY THE
ROOF

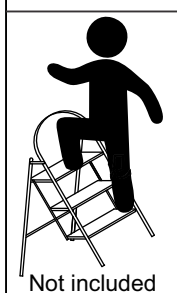

Philips screwdriver



1 3/16" Screw

Qty
04

Return Policy:

- For products purchased through our retail partners please contact them for resolution prior to contacting P'kolino.
- At P'kolino it is our commitment to improve play at home with products that are playfully-stylish and functionally-smart. That means, we want you and the child(ren) to love the way our products look and work. If within 10 days of receipt your product you are not satisfied you may return it for a refund of the merchandise value.
- Our products and packaging have been designed to withstand standard delivery methods, however, please inspect your product upon receipt for damage to the packaging as products damaged during shipping are subject to exchange or refund. If product has been visibly damaged it is recommended that you refuse the delivery by the carrier. Notify us of the shipment rejection and upon receipt of the rejected shipment we will send you a replacement at no charge.
- To return your product, contact the retailer your purchased your product from. For products with visible wear or that are not properly repackaged will incur a restocking fee of 10%. Please follow assembly, use and care instructions carefully as we will not accept returns on products damaged due to improper assembly, altered or modified products, or on items damaged from normal, excessive or unintended use. Return shipping expenses, unless otherwise specifically stated by P'kolino, will be the customers expense.
- If you have questions regarding our policy please contact us at customercare@pkolino.com or 888-403-8992.

Warranty:

- P'kolino products are guaranteed to be free from defects in material and workmanship under normal and intended use for a period of 30 days from the date of your purchase.

Replacement/Credit:

- If our product fails to meet our warranty during the warranty period, we will, at our option, replace the product or provide you with a replacement of comparable value.

What Our Limited Warranty Does Not Cover:

- We offer this limited warranty only when the product is used by the original end-user customer. We offer no other warranty. Additionally, while our warranty is excellent, there are other limits to it. We offer NO WARRANTY in cases of damage in transit, inadequate care, abuse, abnormal use, misuse, accidents, normal wear and tear, damage due to environmental or natural elements, failure to follow product instructions, immersion in water (except for products specifically identified by us in writing as intended for water use), or improper storage or maintenance of the products.

Limitation on Damages:

- IN NO EVENT SHALL P'KOLINO,LLC BE LIABLE FOR INCIDENTAL, COMPENSATORY, PUNITIVE, CONSEQUENTIAL, INDIRECT, SPECIAL OR OTHER DAMAGES. OUR AGGREGATE LIABILITY WITH RESPECT TO DEFECTIVE PRODUCTS IS LIMITED TO THE MONIES PAID TO US FOR THE DEFECTIVE GOOD.

Some states and countries do not allow the exclusion or limitation of incidental, consequential or other damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary based on state, province or country.

Contact Information

Please feel free to contact us at the address listed below

P'kolino LLC • 7300 NW 35th Avenue • Miami, FL 33147 • USA

CARE AND MAINTENANCE:

MAINTENANCE:

- Our furniture is designed to be low maintenance, however misuse, irregular use, or improper assembly can result in product malfunction. Regularly check the stability. If pieces feel loose or wobbly tighten all screws immediately.
- To store, review Assembly Instructions and reverse the steps to disassemble.
- Use only provided hardware to assemble and maintain assembly.

CARE:

- To clean use a soft, lint free rag similar to a cloth diaper and wipe away dust regularly. If necessary dampen cloth slightly with warm water and gently rub away spots. Dry thoroughly.
 - Do not use a bleach solution.
 - Do not submerge or allow to lie in standing water.
 - Do not use a sponge or harsh abrasive.
 - Do not use all purpose cleaners or harsh detergents.
 - Do not use Pine Oil cleaners or abrasive household cleaners.
 - Do not use heat or hot water.

ABOUT WOOD AND FINISH:

This product has been carefully crafted of MDF, solid pine wood and/or pine veneers. These materials derive from plantations, a renewable and well managed forest, therefore, not endangering the environment. The highest quality standards have been implemented to assure a sturdy and reliable product. Due to the natural variances in the graining of wood, you may notice subtle differences in the shading and tone of the color stain, warp, holes, wood knots and also small cracks. This is not a defect. But rather a result of the natural beauty of the wood itself.

PLEASE REGISTER THIS PRODUCT AT: WWW.PKOLINO.COM/REGISTER

California 93120 compliant for formaldehyde Phase 2 TPC-AQCARB-03