




SEAT & FRAMING PLAN

1/4" = 1'-0" 56 NET SEATS @ 18" PER SEAT

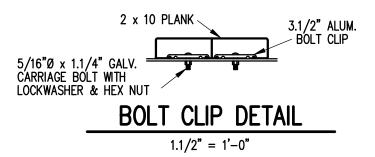

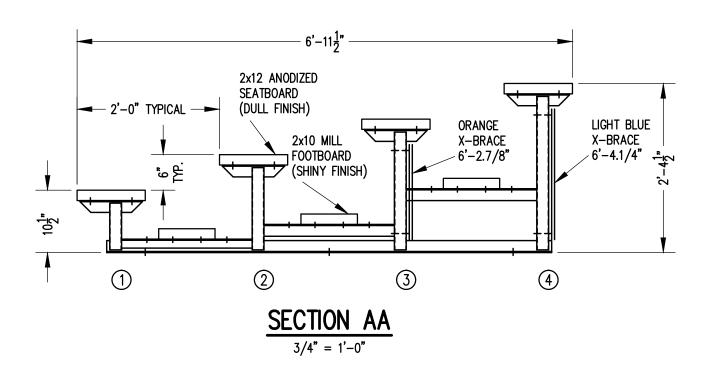




X-BRACE DETAIL

N.T.S.

7/16" X 1" GALV. MACH. BOLT

 \triangle 7/16" X 3" GALV. MACH. BOLT



- 1) LOCATE THE CHANNEL END CAP AS SHOWN IN FIG. 1.
- 2) TAP END CAP INTO PLACE WITH RUBBER MALLET OR SOFT WOOD. FIG.2
- 3) DRILL 5/32" HOLES THROUGH THE BOTTOM FLANGE AND THE BOTTOM OUTSIDE PLANK FLANGES OF EACH PLANK. INSTALL 5/32" POP RIVETS.

END CAP DETAIL

N.T.S.

SCALE AS NOTED	REVISIONS	BY	DATE
DATE 02/02/09	UPDATED TO 700 SERIES STANDARDS	GDK	02/13
DR'N WHW CKD			
AP'VD			
LTSA 4-21 SEATING/FRAMING PLAN NO. 864-E1081			081