

Safety regulations



Thank You for your purchase.

Autorack Products Ltd does not accept any liability for their products that have not been correctly fitted as per the original fitting instructions or to the correct vehicle as per their fitting application.

Please check your vehicle manufacturer handbooks to establish the maximum distributed weight loading capacity for your particular vehicle. **Never exceed this weight limit.**

Autorack Products Ltd accepts no liability for any damage to, or loss of property from carrying loads in excess of the recommendations of the vehicle manufacturer. No liability is accepted for any personal injury as a result of poorly or inadequately installed van racking products & accessories.

SAFETY NOTES:

1. Ensure that these instructions are retained for future reference and that the users are aware of the rules of safe use.
2. Never climb or stand on the van racking units.
3. Autorack only recommend that the van racking be fitted to vehicles fitted with full bulkheads.
4. Take care during assembly & in use, particularly when lifting units into the van for positioning.
5. Wear appropriate safety clothing – protective gloves, eye protection & footwear

Autorack Products Ltd reserve the right to alter the product specification without notice.



Caution

Prior to drilling (so as not to cut or puncture fuel tanks, fuel lines, brake lines, electrical wires, etc,) check behind or underneath drilling mounting locations.

The Van Racking Units should only be fitted to vehicles with FULL BULKHEADS.

The van racking brackets must be attached to the double skin of the van (as per the photos) you must not fix to the ply lining wall

M6 x 16mm Bolt with 2 small washers.



Use for fixing shelves to the side packs and the fixing brackets to the racking units.

20mm Self tapping screws.

Screws are supplied for fixing to ply lined van floor.
We do not recommend drilling through the van floor.

Brackets, M6 X 20mm bolts & large washers.

Use for fixing racking units to the sides of the van.

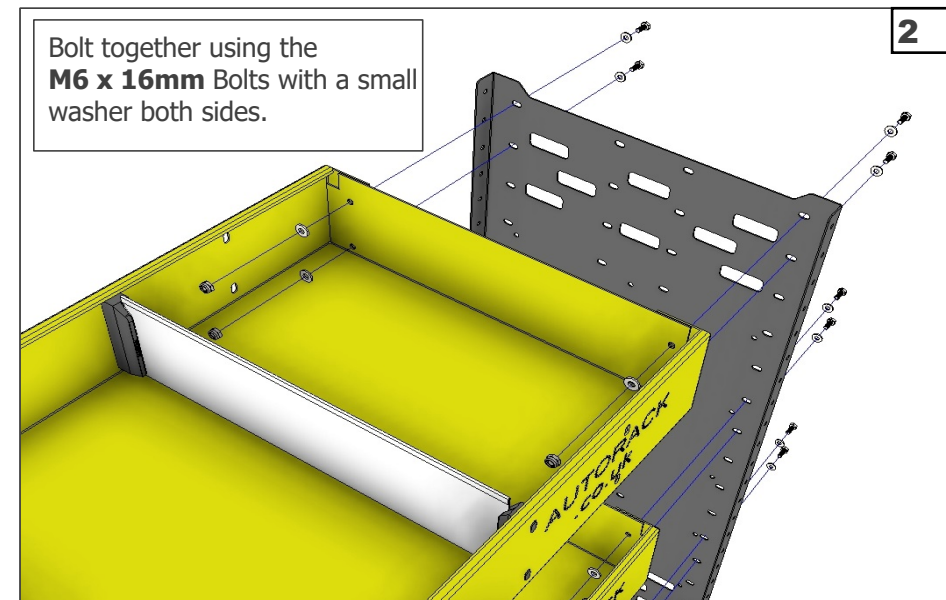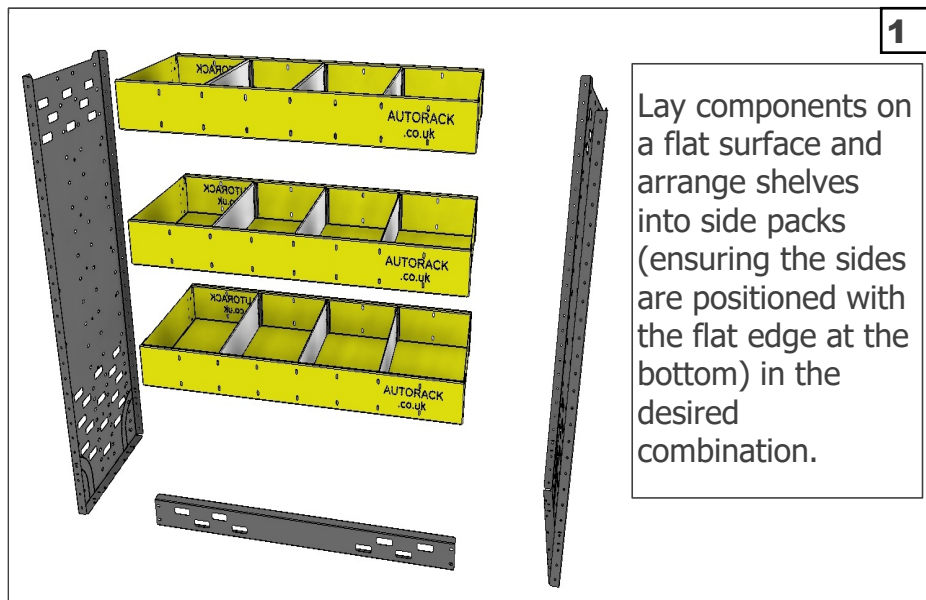




1 Remove the ply lining from the side of the vehicle including any wheel arch wooden boxes.



* The side packs on the racking units may, in some cases, foul with the wheel arches. In this situation, the sides are provided with corner cutout templates.

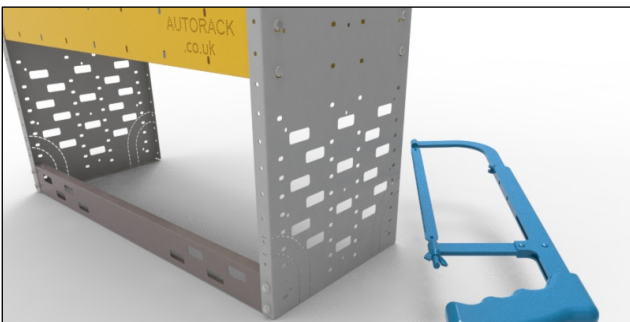

* If applicable

Using a hacksaw or jigsaw, carefully remove these corners and file to a smooth edge.



Door Strap Warning!
Check Rear Doors Fully Close

2 Place the built up unit(s) into position along the side of the vehicle, allowing for any obstruction when the doors are fully closed.



Where possible insert a wooden block behind the double skin of the van for protection when drilling

3 Mark Bracket locations and drill holes into the double seam making sure when drilling, not to go through the outer skin of the vehicle.




Fix bracket to double seam using large washers and nuts. Fix 2 brackets together where possible



Carefully measure hole cut-outs in ply to allow the brackets to protrude.



Refit the ply lining. The brackets should now be protruding through the cutout holes.

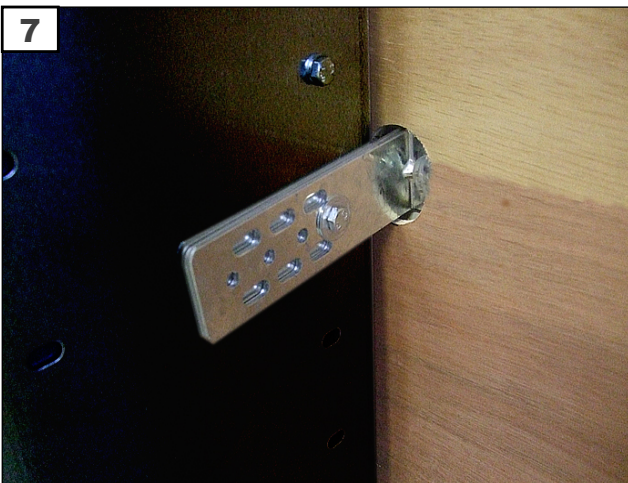


Refit the ply lining. Fit the unit(s) against the brackets. You may need to drill extra holes in the units sides to match the brackets.


Van Racking Accessories

For a range of accessories and add-ons for our van racking units,
Please visit our website:


www.autorack.co.uk

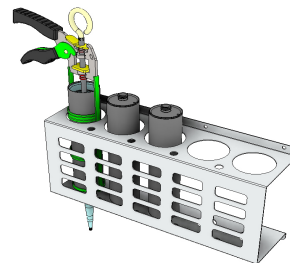

Sealant Gun Holder

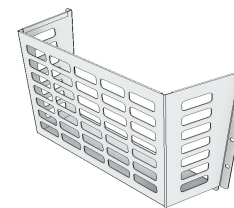

Steel & Stainless Steel
Baskets & Document Holders

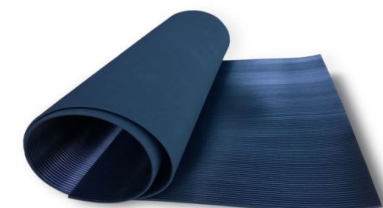

Anti Slip Rubber Matting