



**PROFILE  
DESIGN** 

---

**GRIP-IT HANDLEBAR TAPE**

REVISION 01-02-20-2023

## INTRODUCTION

**Thank you for purchasing this Profile Design product. These instructions apply to the Grip-It handlebar tape.**

Please read these instructions thoroughly before attempting to install this item. Proper installation is required for compliance with Profile Design's warranty policy. If you are not familiar with installation of bicycle accessories, please seek the assistance of your local Profile design dealer by logging on to [www.profile-design.com](http://www.profile-design.com) and using "dealer search" or by calling Profile Design's customer service number p.# 888.800.5999.

**Note to Dealers: If you install this product for the consumer, please provide him/her with this owner's manual after installation.**

### Tools and materials required:

- Sharp Scissors
- Insulation (electrical) tape




### Your Handlebar Tape should contain:

- Two (2) 200x3cm strips of handlebar tape
- Two (2) strips of finishing tape
- Two (2) plastic bar end plugs



**If anything is missing from the tape kit please contact your dealer.**

# COMPONENT LIST


Ref.#	Part.#	QTY. Req.	Part Description
1	357428	2	Bar Tape - PFD Grip-It Tape 2000x30x2.5mm PU BK w/PFD logo
2	716671	2	End Plug - PFD Bar Wrap End plug PP BK w/PFD logo
3	N/A	2	Finishing Tape - PFD Grip-It Finishing Tape 200x25mm

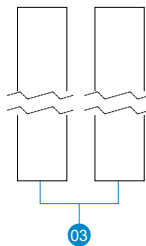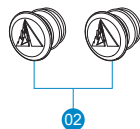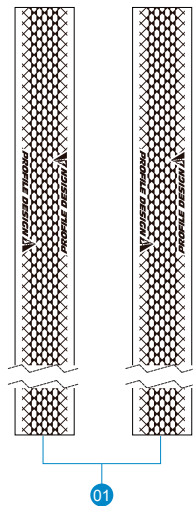

# PART DRAWINGS

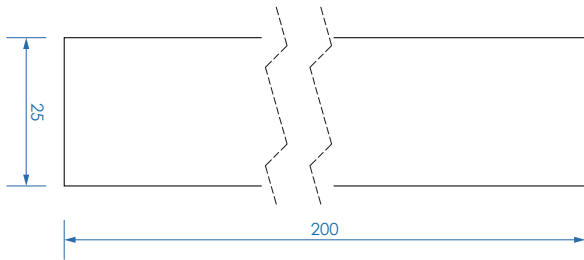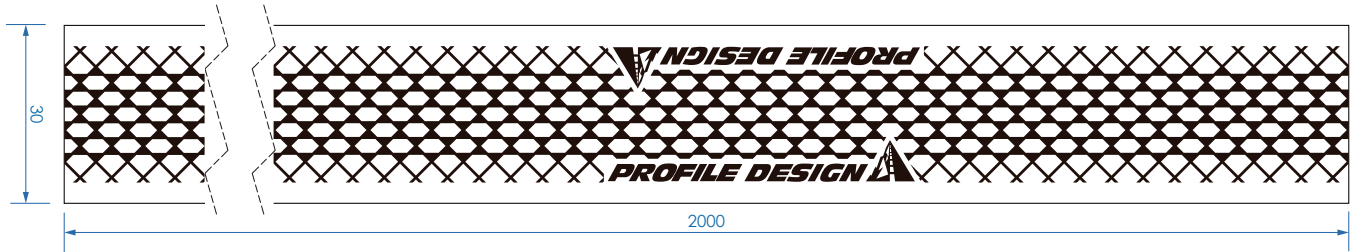

Finishing Tape

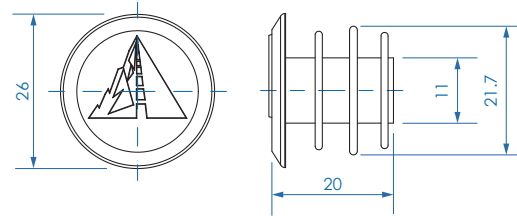

Bar plug

Units: mm

# INSTALLATION INSTRUCTIONS

1. Ensure the area to be taped is clean.
2. Starting from the end of the handlebar.
  - a. Tuck some tape into the end.
  - b. Push a bar end plug in to hold the tape in place.
  - c. Start wrapping around the bar, aiming for even spacing.
  - d. Use either an offcut or do full wrap for the shifters.
3. Once you have wrapped all the way to the centre section of the bar.
  - a. Cut the tape diagonally to give a tidy finish.
  - b. Apply a wrap of insulation tape to hold the bar tape in place.
  - c. Check that you are satisfied with the application of the bar tape then wrap the finishing tape over the insulation tape.
4. Repeat with the other side.

## **WARRANTY POLICY**

- Profile Design Worldwide Two Year Limited Warranty.
- Profile Design, LLC (distributor) warrants to the original retail purchaser ("you") that the Profile Design product for which you received this warranty is free from defects in material and workmanship for (2) two years from the date of original retail purchase. For more details on this warranty, its exclusions and/or how to make a claim under the warranty please call +1 310.747.0085 extension 161 or visit [www.profile-design.com/pages/warranty](http://www.profile-design.com/pages/warranty)



2677 El Presidio Street  
Long Beach, CA 90810  
Ph: 310-884-7756

[www.profile-design.com](http://www.profile-design.com)

© Profile Design LLC