



---

## HEATSHRINK HANDLEBAR TAPE

REVISION 01-02-22-2023

## INTRODUCTION

**Thank you for purchasing this Profile Design product. These instructions apply to the Heatshrink handlebar tape.**

Please read these instructions thoroughly before attempting to install this item. Proper installation is required for compliance with Profile Design's warranty policy. If you are not familiar with installation of bicycle accessories, please seek the assistance of your local Profile design dealer by logging on to [www.profile-design.com](http://www.profile-design.com) and using "dealer search" or by calling Profile Design's customer service number p.# 888.800.5999.

**Note to Dealers: If you install this product for the consumer, please provide him/her with this owner's manual after installation.**

### Tools and materials required:

- Heatgun or Hair dryer
- Sharp Scissors


### Your Handlebar Tape should contain:

- One(1) 50x5.5cm strips of heatshrink tape
- One(1) strip of double sided adhesive tape


**If anything is missing from the grip kit please contact your dealer.**

# COMPONENT LIST

Ref.#	Part.#	QTY. Req.	Part Description
1	357426	1	Bar Tape - PFD Heat Shrink Tape 500x35mm BK w/PFD logo
2	357427	2	Double sided tape 400x12mm for Heat Shrink Tape

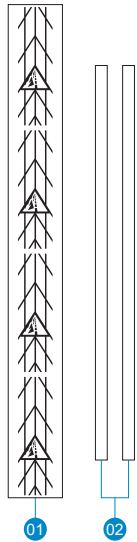





# PART DRAWINGS

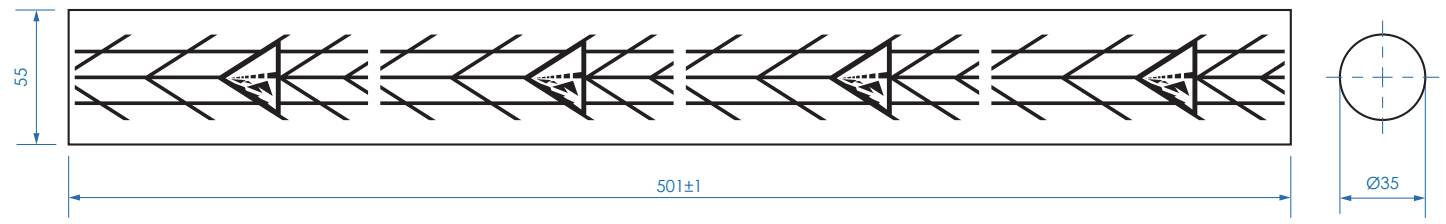

Units: mm

# INSTALLATION INSTRUCTIONS

1. Ensure the grip area on the extension is clean.
2. Measure the area you wish to cover.
3. Cut the heatshrink to length.
  - a. Aim for a clean cut as jagged edges will show up when cut to shrink.
  - b. If cutting at an angle for a shaped extension, cut a rounded edge on the long side to avoid peeling up.
4. Cut the double sided adhesive tape a little shorter than the length of the cut heatshrink.
5. Place the double sided adhesive tape on the grip, inside the area that will be covered by the heatshrink tape.
6. Remove the cover tape from the double sided adhesive tape.
7. Place the heatshrink tape on the grip and lightly stick it to the double sided adhesive tape.
  - a. Allow for shrinkage by placing the top end of the heatshrink tape so it overlaps the shifter by 1-2mm.
8. Using the heat gun or hair dryer.
  - a. Move the heat up and down the tape to shrink evenly.
  - b. Avoid staying on one spot long as this risks burning the tape.
  - c. Keep applying heat until the tape is tight all over the grip.
  - d. Note that a heat gun is faster, with more risk of burning. A hair dryer will take more time to achieve a tight fit.
9. Repeat with the other side.

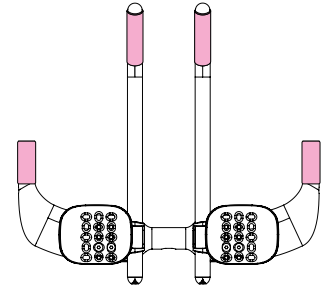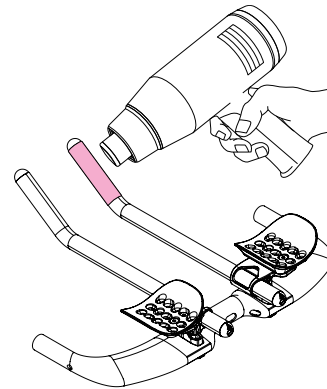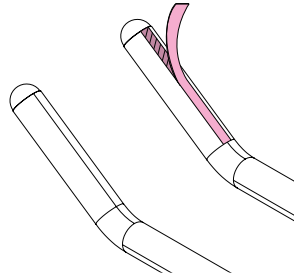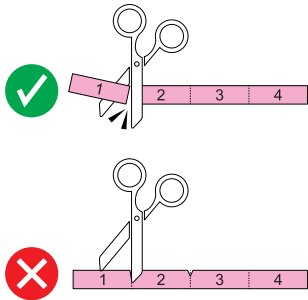

## **WARRANTY POLICY**

- Profile Design Worldwide Two Year Limited Warranty.
- Profile Design, LLC (distributor) warrants to the original retail purchaser ("you") that the Profile Design product for which you received this warranty is free from defects in material and workmanship for (2) two years from the date of original retail purchase. For more details on this warranty, its exclusions and/or how to make a claim under the warranty please call +1 310.747.0085 extension 161 or visit [www.profile-design.com/pages/warranty](http://www.profile-design.com/pages/warranty)



2677 El Presidio Street  
Long Beach, CA 90810  
Ph: 310-884-7756

[www.profile-design.com](http://www.profile-design.com)

© Profile Design LLC