



ARMREST UNIVERSAL HOOK STICKER

REVISION 01-04-07-2025

INTRODUCTION

Thank you for purchasing this Profile Design product. These instructions apply to the Armrest Universal Hook Sticker.

Please read these instructions thoroughly before attempting to install this item. Proper installation is required for compliance with Profile Design's warranty policy. If you are not familiar with installation of Aerobars or their accessories, please seek the assistance of your local Profile Design dealer by logging on to www.profile-design.com and using "dealer search" or by calling Profile Design's customer service number p.# 888.800.5999.

Note to Dealers: If you install this product for the consumer, please provide him/her with this owner's manual after installation.

Tools and materials required:

- Pen
- Scissors
- Printer


Your kit should contain:

- Two (2) Hook Sticker
- Two (2) Tracing paper
- One (1) Alcohol swab


If anything is missing from the Armrest Universal Hook Sticker Kit please contact your dealer.

COMPONENT LIST

Ref.#	Part.#	QTY. Req.	Part Description
1	413604	2	Velcro Sticker - PFD ARMREST UNIVERSAL HOOK STICKER 100x175mm Black
2	413605	1	Tracing Paper - A5 55P
3	B046	1	Alcohol Swab

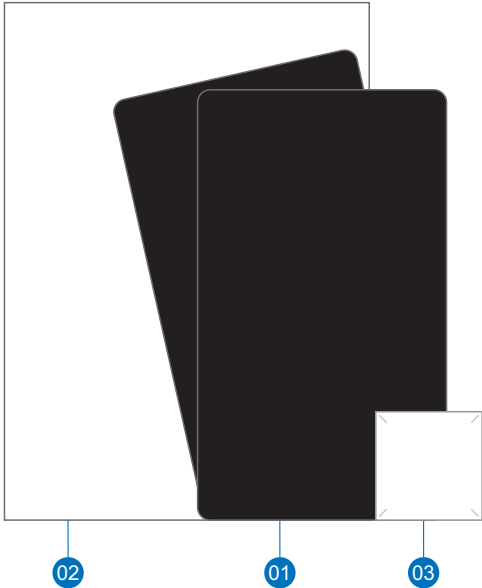

PART DRAWINGS

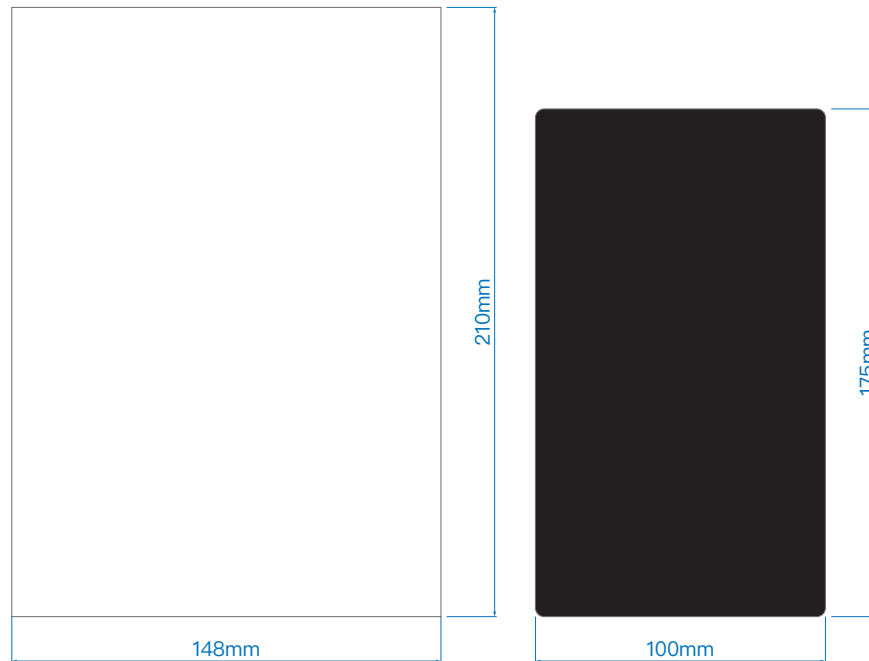

INSTALLATION INSTRUCTIONS

Please follow these instructions during installation:



1. When applying the sticker, ensure it lies flat and avoid trapping air bubbles.
2. Avoid reapplying, as this may weaken adhesion.
3. Before application, use the provided alcohol swab to clean the surface, ensuring it is free of any residue.

Please select the most suitable installation method from the three options below, according to your specific situation.


Method 1

If the original hook-side sticker on the Armrest has not fully detached:

1. Peel off the original version and place it onto the hook side of the sticker.
2. Use scissors to trim along the shape.
3. After cutting, discard the original version.
4. Clean the Armrest surface with an alcohol swab, then peel off the backing from the newly cut sticker and apply it to the Armrest.

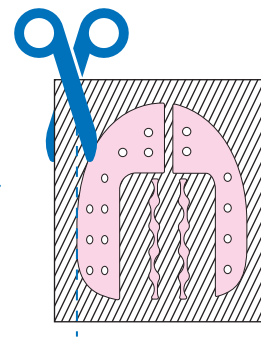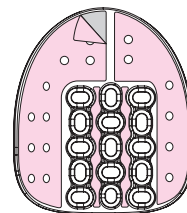


- Original Hook-Side Sticker
- Velcro Sticker



Method 2

If the original hook-side sticker has completely fallen off:


1. Use tape to attach tracing paper to the Armrest.
2. Trace the outline on the tracing paper along the area where the original hook-side sticker was placed.
3. After tracing, cut out the shape from the tracing paper.
4. Place the cut-out shape on the hook-side sticker and cut out the same shape using the tracing paper as a guide.
5. Clean the Armrest surface with an alcohol swab, then peel off the backing of the newly cut piece and apply it to the Armrest.

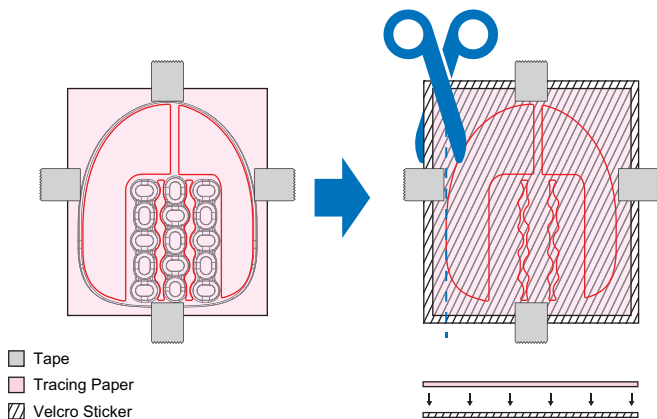

Method 3

Using the Diagram in the Manual:

1. Download the 1:1 scale product outline from the manual and print it.
2. Cut out the printed outline along the edges.
3. Attach the cut-out outline to the hook side of the sticker using double-sided tape or regular tape.
4. Cut the hook-side sticker along the edge of the outline.
5. After cutting, discard the paper outline.
6. Clean the surface of the Armrest with an alcohol swab, then peel off the backing of the newly cut piece and apply it to the Armrest.

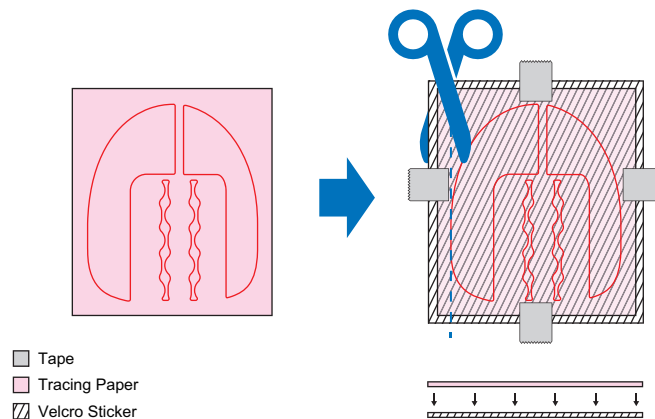

WARRANTY POLICY

Profile Design Worldwide Two Year Limited Warranty

Gallop Cycle Corp (hereinafter "Profile Design") the distributor, warrants to the original retail purchaser ("you") that the Profile Design product for which you received this warranty is free from defects in material and workmanship for (2) two years from the date of original retail purchase.

Please see the current, full warranty policy and limitations at www.profile-design.com/warranty for details.



2677 El Presidio Street
Long Beach, CA 90810
Ph: 310-884-7756
www.profile-design.com